

900 MHz CORDLESS CALLER ID TELEPHONE WITH CALL WAITING


40 CHANNEL AUTOSCAN

Model MH9915

OWNER'S MANUAL INSTALLATION AND OPERATING INSTRUCTIONS

**PLEASE READ THIS
MANUAL CAREFULLY
BEFORE USE.
KEEP FOR YOUR
REFERENCE.**

*For installation information, please
see "Getting Started" instructions
on page 5 or your separate
Quick Start guide.*

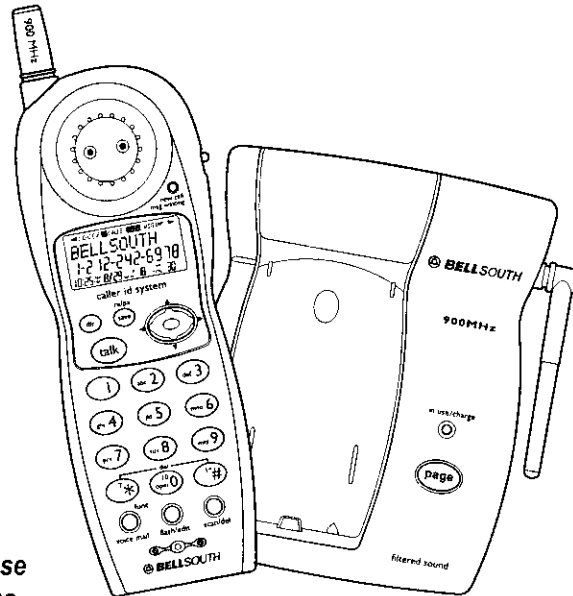

Congratulations on your selection of a quality **BellSouth Product**. With proper care, and by following the setup and user instructions in this manual, this unit will provide you with years of trouble free service.

BellSouth is committed to providing quality products that fit your needs. We would like to have any comments or suggestions you might have on this product. You may mail your comments to:

**U.S. Electronics
105 Madison Avenue
New York, NY 10016**

When examining your new **BellSouth** cordless telephone, you will find an array of special features including:

Filtered Sound™ System - Receives considerably less noise than conventional cordless telephones because of a special circuit which delivers the clearest possible reception.

40 Channel Auto Scan - Press the **scan/del** button on the **HANDSET** to find and lock on to the clearest channel for any call.

Desk or Wall Mount - Use this equipment as a desk phone or as a wall phone.

TONE or PULSE Dialing - Use this phone for either TONE or push-button PULSE (rotary) dialing.

Automated Functions - Redial the last number called and automatic STANDBY mode.

Security - Ensures greater privacy because a built-in security code with 65,536 combinations prevents use of your telephone line by another nearby cordless phone.

Dependable Battery - Recharge your BATTERY PACK many times with the built-in charger. The battery low warning tone tells you when the BATTERY PACK needs recharging (See page 28).

Special Services - Use the **flash/edit** button to access special services such as Call Waiting supplied by your telephone company or company switchboard.

STANDBY Mode - When in STANDBY mode (ON-HOOK), the telephone is capable of receiving a call. When the **HANDSET** is on the **BASE UNIT**, it is automatically in the STANDBY mode (ON-HOOK). When the **HANDSET** is taken off the **BASE UNIT**, it remains in the STANDBY mode until you activate the **talk** button.

Battery Power Saver - Once fully charged, in STANDBY mode, the **HANDSET** can receive/send calls for a maximum of five days without the need for recharging. Length of charge depends on frequency of use.

Luminous LCD Screen - The LCD Screen emits light for 5 seconds every time you press any of the TELEPHONE KEYPAD buttons.

HANDSET Ringer Volume Level - Select the ringer volume level (HI, LOW, OFF).

HANDSET Volume Control Switch - Select the receiver volume level (HI, MID, LOW).

HEADSET JACK - Your telephone can utilize a headset for hands-free communication.

BELT CLIP - Use the BELT CLIP to hang your **HANDSET** on your belt.

CALLER ID SYSTEM

Multi-Function Large LCD Screen - Shows the number you are dialing and, with Caller ID service (available through subscription from your local telephone company), displays information about the caller before you answer the call.

Name and Number Directory - Stores up to 40 names and numbers so that you can call them with a single key stroke.

Caller List - Available with Caller ID service. Stores up to 80 calls to keep track of everyone who called. The name, phone number, time and date of the call are recorded. Allows you to return their calls with a single key stroke.

Preferred Calls - You can mark the name and number of a welcome caller in the DIRECTORY. When that number calls in, the caller's name will appear on the DISPLAY and a special ring sound will be heard.

Blocked Calls - You can mark the name and number of an unwelcome caller in the DIRECTORY. When that number calls in, the caller's name will appear on the DISPLAY and the ringer will be disabled.


Repeat Call Indicator - Shows if a new incoming call has called more than once.

Out of Area Call Indicator - Advises you that the incoming call is not in a Caller ID service area.

Unknown Call Indicator - Advises you that the origin of the incoming call has no name and does not support the Caller ID system.

Call Waiting Service - Displays the name and number of the second caller, if you have subscribed for Call Waiting service from your local telephone company (see page 14).

 
 
 
 
 

 



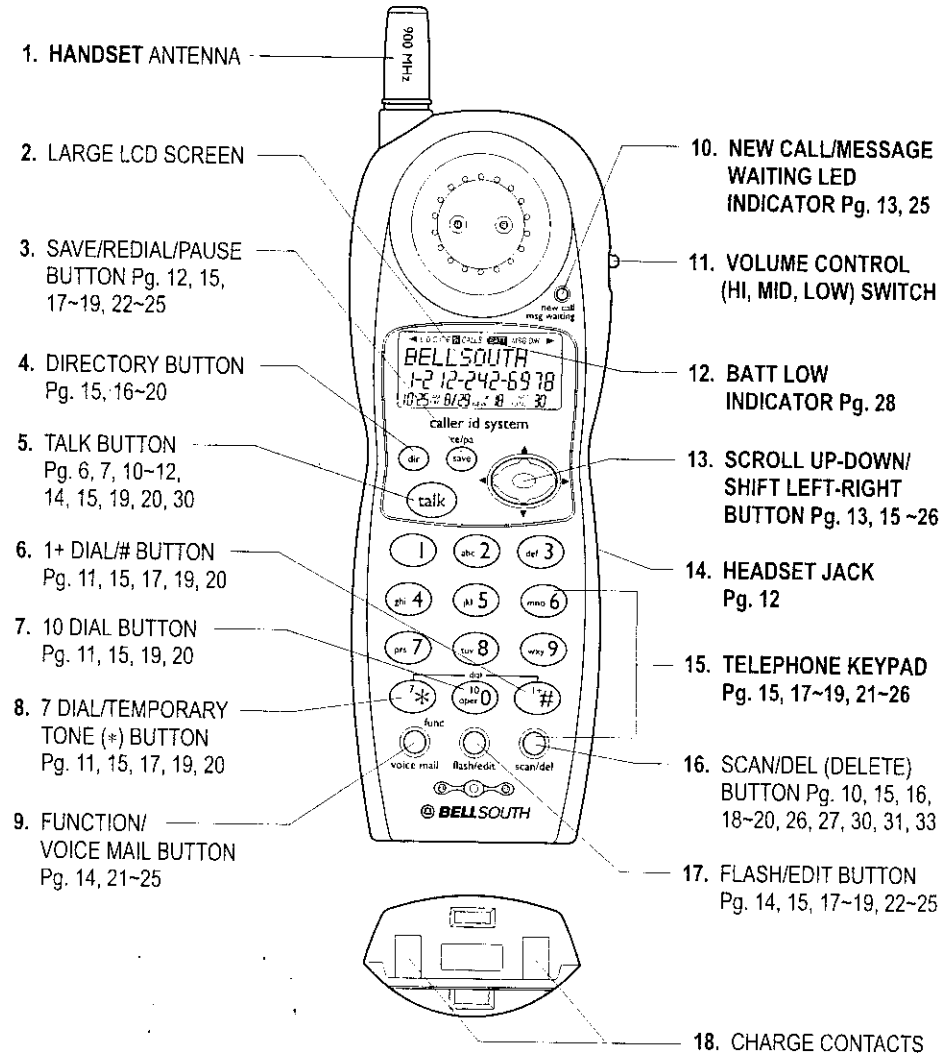
Voice Mail - Indicates message waiting signal if you subscribed to Voice Mail message service and requested Visual Message Indication from your local telephone company (see page 14). This telephone also detects a Stutter Dial Tone signal every time there is a Voice Mail message for you from your Voice Mail message provider if you have subscribed to Voice Mail message service.



HANDSET Controls


- 1. **HANDSET ANTENNA**
- 2. **Large LCD Screen:** Shows call information, phone status, prompts and directory items.

  HANDSET Controls

3. **SAVE/RE (REDIAL)/PA (PAUSE)**  **Button:** (SAVE) Press and hold down to save the changes on the listed items. (REDIAL) Press to redial the last number you dialed. (PAUSE) Press to insert a pause while dialing. (You will need the  button to dial numbers which use an alternative Long Distance Access Code.)
4. **DIR (DIRECTORY)**  **Button:** Press to access names and numbers stored in the DIRECTORY. (See pages 15 to 20 for details.)
5. **TALK**  **Button:** Press to answer an incoming call or to place a call. Press to end a call.
6. **Dial 1+/#**  **Button:** (DIAL 1+) Press and hold down to place a long distance call. (Automatically adds the number 1 at the beginning of the displayed telephone number.)
7. **DIAL 10/0**  **Button:** (DIAL 10) Press and hold down to place a local call with Area Code.
8. **DIAL 7/TEMPORARY TONE**  **Button:** (DIAL 7) Press and hold down to place a local call. (*) Press to temporarily change the dialing mode from PULSE to TONE for rotary service users. (Press once before entering numbers to access the Answering System or electronic banking services, etc.)
9. **FUNC (FUNCTION)/VOICE MAIL**  **Button:** (FUNCTION) Press to access special functions operation in STANDBY mode. (For special functions see page 21.) (VOICE MAIL) - Press to automatically dial the Voice Mail Post Code in your area to access your Voice Mail message.
10. **NEW CALL/MSG (MESSAGE) WAITING LED Indicator:** Blinks when recording a new incoming call or when receiving a Message Waiting signal, if you have subscribed to a Voice Mail message service from your local telephone company. (See page 13.)
11. **HANDSET Volume Control (hi, mid, low) Switch:** Select the receiver volume level (HI, MID, LOW).
12. **BATT LOW INDICATOR:** Appears on the LCD Screen when the battery charge is low. (See page 28 for detail.)
13. **SCROLL UP-DOWN, SHIFT LEFT-RIGHT**  **Button:** Press to move around the Large LCD Screen.
14. **HEADSET JACK:** For connecting your headset plug to enjoy hands-free communication. (See page 12 for detail.)
15. **TELEPHONE KEYPAD:** Allows you to make a call depending on pressed button. (For TELEPHONE KEYPAD characters, see page 26.)
16. **SCAN/DEL (DELETE)**  **Button:** (SCAN) Press to change the operating channel when you hear interference. (DELETE) Press and hold down to delete items or individual characters.
17. **FLASH/EDIT**  **Button:** (FLASH) Press to answer a call if you have Call Waiting. (EDIT) Press to edit listed items.
18. **CHARGE CONTACTS:** For charging the BATTERY PACK inside the **HANDSET**. We recommend cleaning the CHARGE CONTACTS periodically with a damp cloth.

BASE UNIT Controls

BASE UNIT Controls

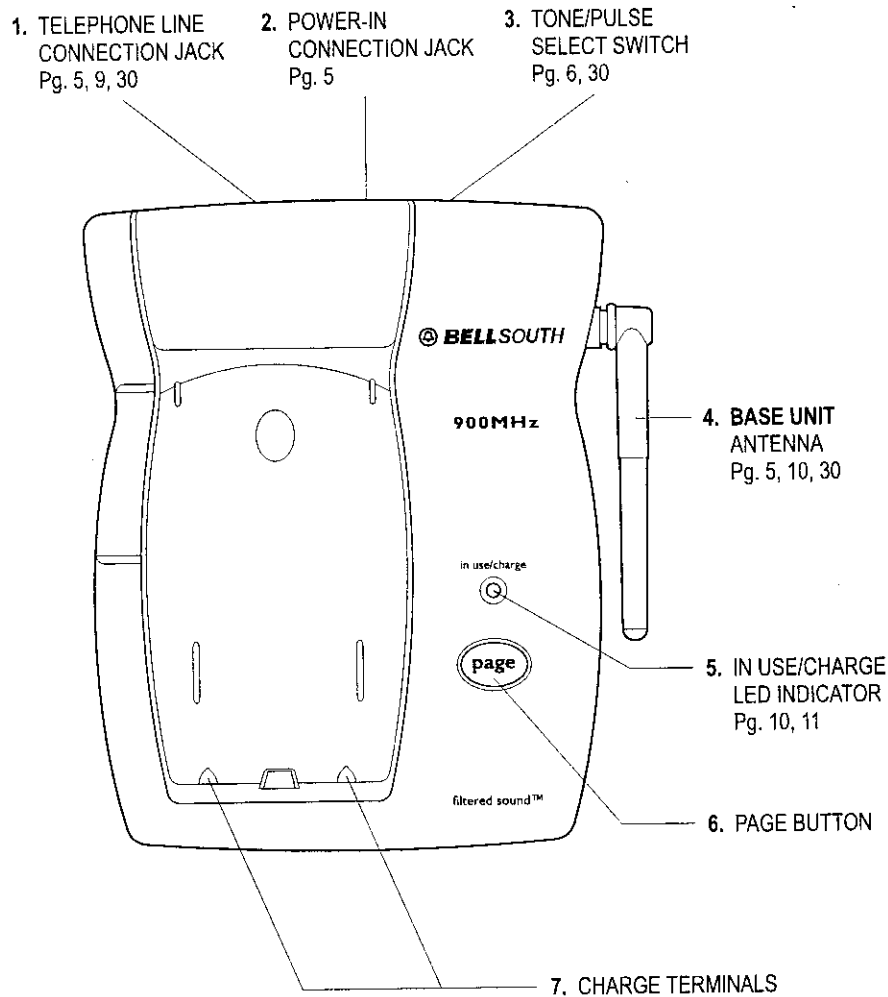

1. TELEPHONE LINE CONNECTION JACK
2. POWER-IN CONNECTION JACK
3. TONE/PULSE Select Switch
4. ANTENNA: Raise or reposition for the best reception.
5. IN USE/CHARGE LED Indicator: (IN USE) Lights up to indicate that the HANDSET is in TALK mode or an extension telephone is in use. (CHARGE) Lights up when the HANDSET is placed on the BASE UNIT for charging.
6. PAGE **page** Button: Press to page the HANDSET.
7. CHARGE TERMINALS: For charging the HANDSET BATTERY PACK. For best performance, clean the CHARGE TERMINALS periodically with a damp cloth.

IMPORTANT

Placing your **BASE UNIT** near appliances such as televisions, refrigerators, radios, or microwave ovens may cause interference.

Contents

Safety Instructions.....	3
Getting Started.....	5
Desk Mounting.....	8
Wall Mounting.....	9
Cordless Telephone Operation.....	10
Preparing for Use.....	10
Receiving Calls.....	10
Extension Phones.....	11
Placing Calls.....	11
Using the Headset Feature.....	12
Redial Feature.....	12
Caller ID System Operation.....	13
Caller ID System.....	13
Viewing Caller Information During Incoming Calls.....	13
Message Waiting.....	13
Call Waiting.....	14
Voice Mail Function.....	14
Forwarded Call.....	14
Long Distance Call.....	14
Caller List.....	14
Viewing the Caller List.....	15
Placing a Call from the Caller List.....	15
Editing the Caller List before Dialing.....	15
Saving the Name and Number in the Caller List into the Directory.....	16
Deleting All Records in the Caller List.....	16
Selective Deleting in the Caller List.....	16
Name and Telephone Number Directory.....	16
Viewing the Directory.....	16
Speed Viewing the Directory.....	17

Contents

Saving in the Directory.....	17
Preferred Calls.....	17
Blocked Calls.....	17
Editing Name and Number in the Directory.....	18
Editing the Number in the Directory Before Dialing.....	19
Placing Calls from the Directory.....	20
Deleting All Records in the Directory.....	20
Selective Deleting in the Directory.....	20
Function Operation.....	21
A. Language.....	22
B. Silent On/Off.....	22
C. Time Set.....	22
D. Ringer Volume.....	23
E. LCD Contrast.....	23
F. PBX Number.....	23
G. Flash Time.....	24
H. Pause Time.....	24
I. Voice Mail.....	25
J. MSG Waiting (Message Waiting).....	25
Telephone Keypad Characters.....	26
Security.....	27
Recharging the BATTERY PACK.....	28
Changing the BATTERY PACK.....	29
Problem Solving.....	30
Technical Information.....	31
FCC Requirements.....	32
Warranty Information.....	34
Wall Mount Template.....	37

Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock and/or injury, always follow these basic safety precautions when using your cordless telephone equipment.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the telephone.
3. Do not use this telephone near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, near a swimming pool, or anywhere else where there is water.
4. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
5. Do not use the telephone to report a gas leak in the vicinity of the leak.
6. Use only the power cord and BATTERY PACK indicated in the Owner's Manual. Do not dispose of the BATTERY PACK in a fire. The BATTERY PACK may explode. Check with local codes for possible special disposal instructions.
7. Unplug this telephone from the wall outlet before cleaning or replacing the BATTERY PACK. Do not use liquid cleaners or aerosol cleaners on the telephone. Use a damp cloth for cleaning.
8. Place this telephone on a stable surface. Serious damage and/or injury may result if the telephone falls.
9. Do not cover the slots and openings on this telephone. This telephone should never be placed near or over a radiator or heat register. This telephone should not be placed in a built-in installation unless proper ventilation is provided.
10. Operate this telephone using the electrical voltage as stated on the **BASE UNIT** or in the Owner's Manual. If you are not sure of the voltage in your home, consult your dealer or local power company.
11. Do not place anything on the power cord. Install the telephone where no one will step or trip on the cord.
12. Do not overload wall outlets or extension cords as this can increase the risk of fire or electric shock.
13. Never push any objects through the slots in the telephone. They could touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the telephone.
14. To reduce the risk of electric shock, do not take this telephone apart. If service or repair work is required on this telephone, take it to a qualified service representative. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
15. Unplug this telephone from the wall outlet and consult a qualified service representative in any of the following situations.
 - A. When the power supply cord is frayed or damaged.
 - B. If liquid has been spilled into the telephone.
 - C. If the telephone has been exposed to rain or water.
 - D. If the telephone does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment may require extensive work by a qualified technician to restore the telephone to normal operation.

Safety Instructions

- E. If the telephone has been dropped or the case has been damaged.
 - F. If the telephone exhibits a distinct change in performance.
16. Never install telephone wiring during a lightning storm.
 17. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
 18. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
 19. Use caution when installing or modifying telephone lines.

Battery Safety

CAUTION:

Danger of explosion if the BATTERY PACK is incorrectly replaced. Replace only with the same or equivalent type. To reduce the risk of fire or personal injury, read and follow these instructions:

1. Use only the following type and size of BATTERY PACK:
Cordless Telephone BATTERY PACK
3.6V, 600mAh
U.S. Electronics Inc.
Ni-Cd BATTERY PACK: Model B650
(See page 28 for ordering information.)
2. Do not dispose of the BATTERY PACK in a fire. It may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the BATTERY PACK. Released electrolyte from a BATTERY PACK is corrosive and may cause damage to the eyes or skin. Electrolyte may be toxic if swallowed.
4. Exercise care in handling the BATTERY PACK to prevent shorting the BATTERY PACK with conductive materials such as rings, bracelets and keys. The BATTERY PACK or conductor may overheat and cause burns.
5. Charge the BATTERY PACK provided with (or identified for use with) this telephone only in accordance with the instructions and limitations specified in this manual.
6. Observe proper polarity orientation between the BATTERY PACK and BATTERY CHARGER.
7. Dispose of used batteries according to the manufacturer's instructions.

SAVE THESE INSTRUCTIONS

ATTENTION:

The telephone that you have purchased contains a rechargeable BATTERY PACK. The BATTERY PACK is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this BATTERY PACK into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.


Connecting Your Phone

This section is a reference guide to the basic functions and operations of your cordless telephone. For more detailed descriptions of the operations and features of this telephone, refer to the Contents on page 1.


1. Carefully remove your cordless telephone from its shipping carton. If there is any visible damage, do not attempt to operate this equipment. Return it to the place of purchase.
2. Check to be sure you have all items that come with this cordless telephone system. You should have a **HANDSET**, **BASE UNIT**, **AC ADAPTOR**, **MOUNTING BRACKET**, **TELEPHONE LINE CORD**, **SHORT TELEPHONE LINE CORD**, **BELT CLIP** and **Owner's Manual**.



HANDSET

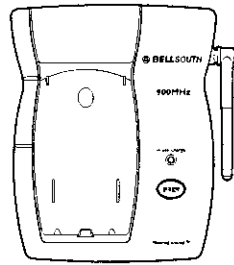


BASE UNIT

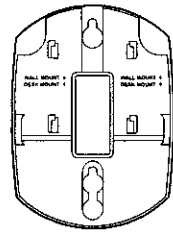


MOUNTING BRACKET



 
BELT CLIP



TELEPHONE LINE CORD

 


SHORT TELEPHONE LINE CORD


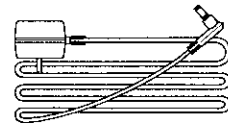


AC ADAPTOR

3. Insert the small plug on the end of the **AC ADAPTOR** into the **POWER-IN CONNECTION JACK** at the back of the **BASE UNIT**.
4. Plug the **AC ADAPTOR** into a 120V AC wall outlet.
USE ONLY WITH CLASS 2 POWER SOURCE 9V DC, 300mA.
5. Insert one plug of the **TELEPHONE LINE CORD** into the house **TELEPHONE JACK** and the other end into the **TELEPHONE LINE CONNECTION JACK** at the back of the **BASE UNIT**. (If you have an older 4-prong **TELEPHONE JACK**, you will need an **RJ-11C TELEPHONE JACK ADAPTOR**. This adaptor is available at the same place you purchased your telephone.)
6. Raise or reposition the **ANTENNA** on the **BASE UNIT** for the best reception.
7. We recommend not placing this unit next to appliances. Doing so may cause interference.

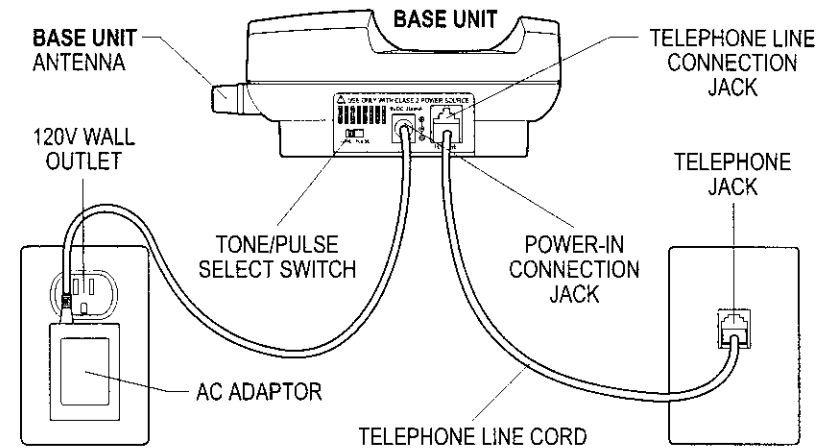

8. Install the **BATTERY PACK** by plugging it into the **BATTERY CONNECTOR** inside the **BATTERY COMPARTMENT**. The **HANDSET LCD Screen** will display "RING: HI."
9. Place the **BATTERY PACK** inside the **BATTERY COMPARTMENT**.
10. Slide the **HANDSET BATTERY COMPARTMENT COVER** firmly into place in its closed position.
11. **IMPORTANT: Before initial use, charge the HANDSET for 12 hours.**
12. **TONE/PULSE Select Switch:**
 - A. If your home is equipped with a tone dialing system, set the **TONE/PULSE Select Switch** to the **TONE** position.
 - B. If you have a rotary dialing system, set the **TONE/PULSE Select Switch** to **PULSE** position.
 - C. If you are unsure which system you have, set the **TONE/PULSE Select Switch** to the **TONE** position. Press the **talk** button on the **HANDSET** and make a call. If the call connects, leave the switch as is; otherwise set to the **PULSE** position.

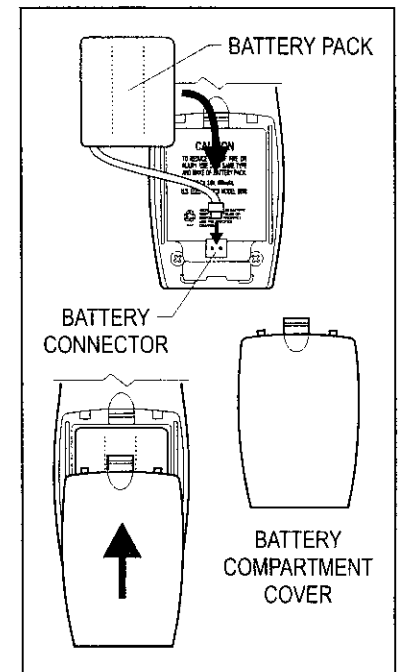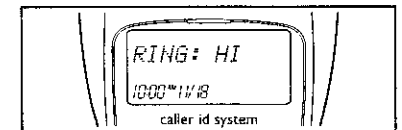

Desk Mounting

One of the special features of your telephone is the unique design of the MOUNTING BRACKET which can hold your phone at an angle of 30° when desk mounting. There are two positions to choose from:

1. NORMAL POSITION (MOUNTING BRACKET not required):

For normal position, as shown in Figure 1, place the **BASE UNIT** on any desired but suitable location.

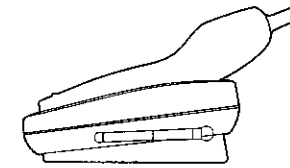


FIGURE 1

2. 30° POSITION (See Figure 2):

With the back of the **BASE UNIT** facing up, insert the hooks of the MOUNTING BRACKET (following the arrow direction for the DESK MOUNT) into the matching slots of the **BASE UNIT** (as shown in Figure 3). Then slide the MOUNTING BRACKET into place as indicated by the arrow.

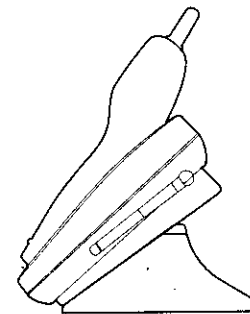


FIGURE 2




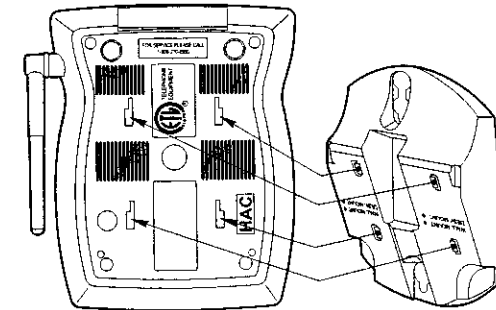


FIGURE 3

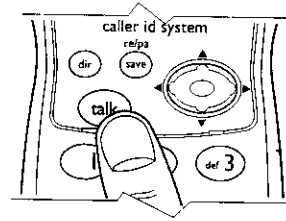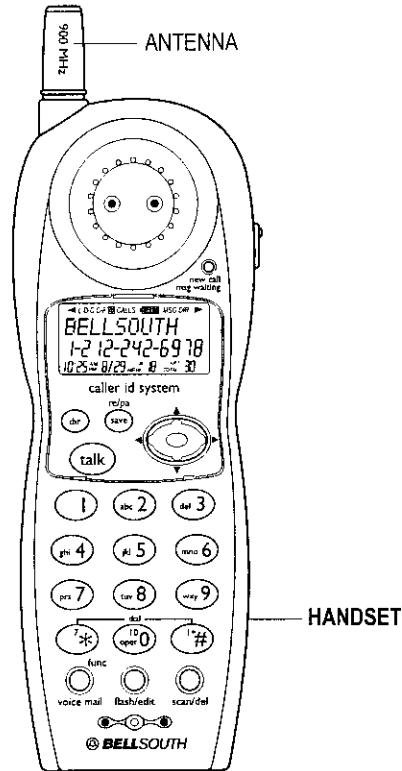

Press the **talk** button to confirm that you have a dial tone. If you do not get a dial tone, review steps 3 through 12. If you still do not have a dial tone, refer to the Problem Solving section on page 30.

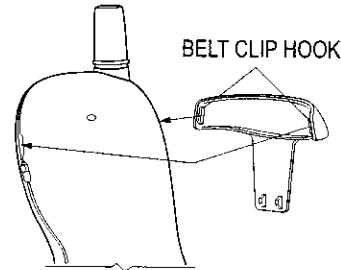

With the back of the **HANDSET** facing up, insert one side of the BELT CLIP HOOK into the matching slot at the top side of the **HANDSET**. Press down on the opposite side of the BELT CLIP until the other hook locks into the slot on the side of the **HANDSET**.

13. Set the date and time. (See page 22 for details.)

You are now ready to use your new BellSouth Cordless Telephone.

IMPORTANT


In order to utilize the Caller ID feature, you must subscribe to Caller ID service from your local telephone company.

Wall Mounting

Wall Mounting

You may choose to put the **BASE UNIT** of your cordless telephone on a wall.

1. With the back of the **BASE UNIT** facing up, connect the SHORT TELEPHONE LINE CORD to the TELEPHONE LINE CONNECTION JACK.
2. Insert the free end of the SHORT TELEPHONE LINE CORD through the hole of the MOUNTING BRACKET.
3. Insert the hooks of the MOUNTING BRACKET (following the arrow direction for the WALL MOUNT) into the matching slots of the **BASE UNIT** (as shown below). Then slide the MOUNTING BRACKET into place as indicated by the arrow. Plug the free end of the SHORT TELEPHONE LINE CORD into the MODULAR WALL JACK.
4. Align the upper keyhole on the MOUNTING BRACKET with the upper stud of the wall plate, so that the opening end of the MOUNTING BRACKET matches the lower stud, then pull the **BASE UNIT** down until it is securely seated.

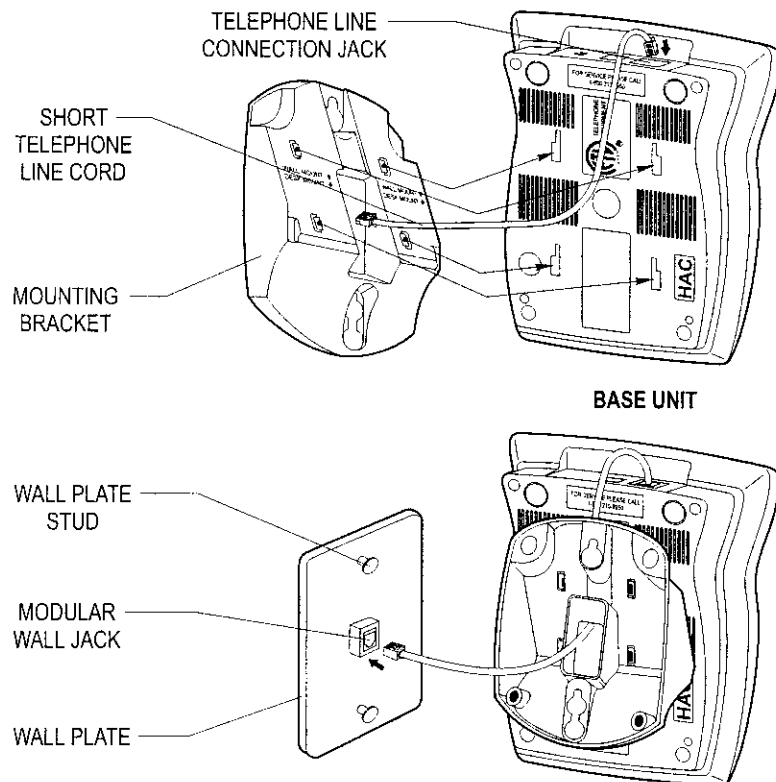

Cordless Telephone Operation

Preparing for Use

Before you can use your cordless telephone, you must charge the **HANDSET** for 12 hours. Failure to do so will require recharging of the BATTERY PACK more often.

1. Place the **HANDSET** on the **BASE UNIT** for 12 hours.
2. After 12 hours, remove the **HANDSET** from the **BASE UNIT**.
3. Raise or reposition the **BASE UNIT ANTENNA** for the best reception.


Before you can use your cordless telephone, you must charge the HANDSET for 12 hours. Failure to do so will require more frequent charging of the BATTERY PACK. See page 28 for more information on the BATTERY PACK.

NOTE:

Depending on the frequency of use, once the **HANDSET** is fully charged, it remains functional for approximately 4 hours of continuous use and approximately 5 days when the **HANDSET** is off the **BASE UNIT** in STANDBY mode.


Receiving Calls

1. When the phone rings, lift the **HANDSET** and press the **talk** button. The **HANDSET** LCD Screen will display "CALLS" and "TALKING", and the **BASE UNIT** IN USE LED indicator will light up.
2. Start your conversation.
3. To end your conversation, either press the **talk** button or place the **HANDSET** on the **BASE UNIT**. If you place the **HANDSET** on the **BASE UNIT** CHARGE CRADLE, you activate the automatic STANDBY feature.

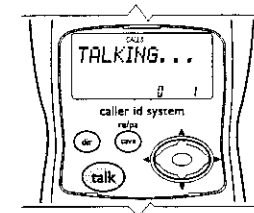

NOTES:


1. The Call Timer will start to count once you press the **talk** button.
2. The LCD Screen emits light for 5 seconds every time you press any of the TELEPHONE KEYPAD buttons.

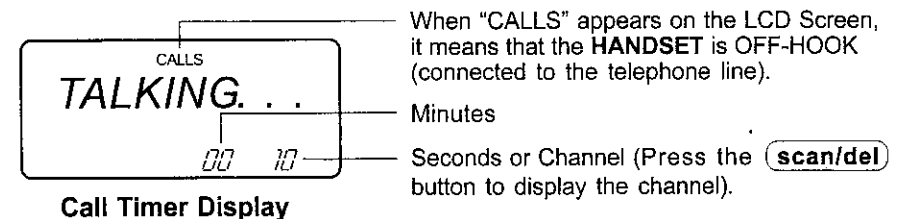

Extension Phones

Extension telephones can be connected. This telephone can detect when an extension phone is being used whether the **HANDSET** is ON-HOOK or OFF-HOOK. When you lift the **HANDSET** and an extension phone is being used, "EXT IN-USE" will be displayed and simultaneously the PRIVATE CALL indicator will blink on the LCD Screen. This means that an extension telephone is in use. You will have to wait until the line is free to make a call.

While you are having a phone conversation then suddenly the **BASE UNIT IN USE** LED indicator blinks, this indicates that an extension phone is lifted or goes OFF-HOOK.

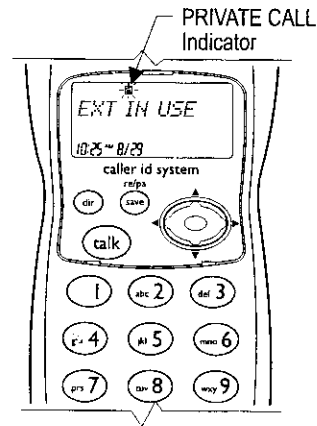


Placing Calls

1. Press the **talk** button, the Call Timer starts to count. The **HANDSET** LCD Screen will display "CALLS" and "TALKING", and the **BASE UNIT IN USE** LED indicator will light up.
2. Listen for a dial tone.
3. Dial the phone number.
4. When you have finished your call, press the **talk** button again or place the **HANDSET** on the **BASE UNIT**.

OR

1. Dial the phone number.
2. Press and hold down the DIAL 7 **7*** or the DIAL 10 **10** or the DIAL 1+ **1+** button. The **BASE UNIT IN USE** LED indicator will light up.
3. When you have finished with your call, press the **talk** button again or place the **HANDSET** on the **BASE UNIT**.

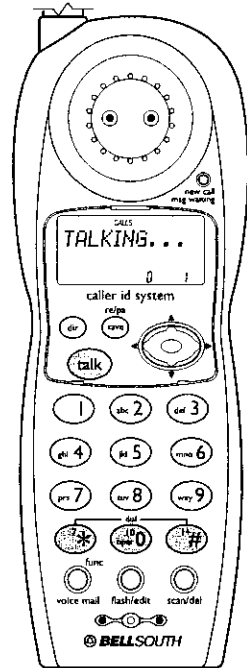


Using the Headset Feature

Your telephone can utilize a headset (not included) to be connected to your **HANDSET** for you to enjoy hands-free communication. Insert the small plug at the end of the headset into the **HEADSET JACK** at the right side of the **HANDSET**. Follow the procedures discussed in "Receiving Calls" and "Placing Calls" to receive and place a call.


NOTE: When you plug the headset plug into the **HEADSET JACK** it automatically mutes the **MICROPHONE** and **SPEAKER** of the **HANDSET**. Unplug the headset to return the **HANDSET** to normal use.

Headsets are available at most retail outlets that sell telephone equipment. The **HEADSET JACK** is compatible with 2.5 mm headset plugs only.

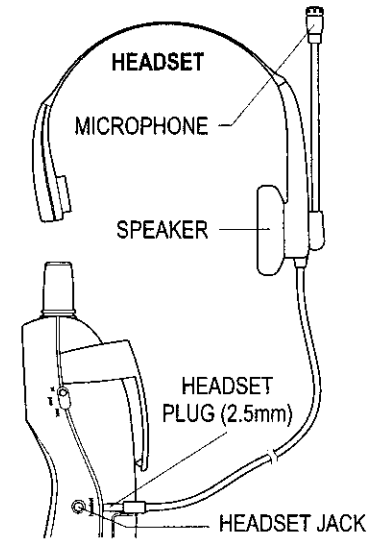

Redial Feature

1. If you get a busy tone, press the **talk** button or place the **HANDSET** on the **BASE UNIT** to hang up.
2. Later, press the **talk** button again.
3. Listen for a dial tone.
4. Press the **re/pa save** button. This will automatically redial the last telephone number you called.
5. When you have finished with your call, press the **talk** button again or place the **HANDSET** on the **BASE UNIT**.

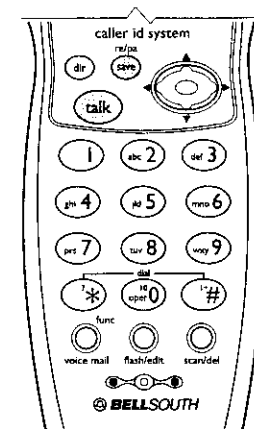

NOTE:

If you are too far away from the **BASE UNIT**, the **HANDSET** emits "beep" sounds to warn you that the background noise level is too high for proper communication between the **HANDSET** and the **BASE UNIT**. When you hear this sound, you should move closer to the **BASE UNIT** to reduce the noise level. Otherwise, the call will automatically cut off.


Caller ID System Operation


Caller ID System

This telephone automatically displays an incoming caller's name and telephone number together with the date and time of the call. It records up to 80 calls and stores the data in Memory.

IMPORTANT: You must subscribe to the Caller ID service from your local telephone company to utilize this feature.

Viewing Caller Information During Incoming Calls

1. When there is an incoming call, the name and the telephone number of the caller will automatically appear after the first ring. Press the SHIFT RIGHT  button to view a name of more than 11 digits.

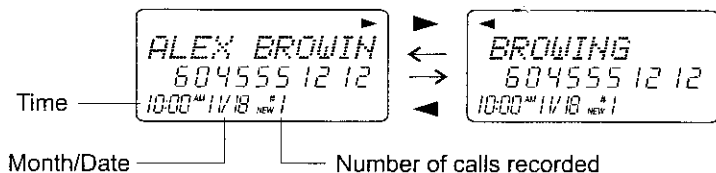


OR

Caller's telephone number will appear if the caller's name is not available.


OR

 "OUT OF AREA" will appear if the origin of the incoming call does not support the Caller ID system.



OR

 "UNKNOWN" will appear if the origin of the incoming call has no name and does not support the Caller ID system.



Unknown name
U is Out of Area

OR

"PRIVATE" and/or "P-- --- ----" will appear if the caller's name and/or telephone number is blocked.

OR

"EXT IN-USE" will appear when an extension phone is being used.

OR

"DATA ERROR" will appear if the wrong data was received from the telephone line.

OR

The name stored in the DIRECTORY will appear for an incoming call with matching telephone numbers.

"MSG WAITING" (Message Waiting)



The MSG WAITING GREEN LED indicator will blink when there is a message for you from your telephone company if you have subscribed to Voice Mail message service and if you have requested Visual Message Indication from your local telephone company. "MSG" will appear on the LCD Screen in STANDBY mode. (To remove the MESSAGE WAITING indicator, see page 25 for detail.)

Caller ID System Operation

Call Waiting

When you subscribe to a Call Waiting service from your local telephone company, this telephone will display the name and number of the second caller while you are having a phone conversation with your first caller.

1. When you are having a conversation, this telephone will automatically display the name and number of the second caller. The name will be blinking.
2. Press the **flash/edit** button to answer the second caller. The first caller's name and number will be displayed. The name will be blinking.
3. When you have finished, press the **flash/edit** button to continue with your conversation with the first caller.

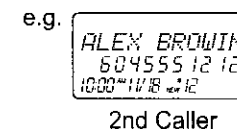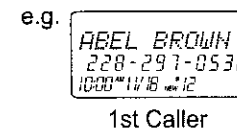

If you do not want to interrupt your phone conversation with the first caller, you can advise the second caller to leave a Voice Mail message instead.

Voice Mail Function

When there is a Voice Mail message for you, this telephone emits a Stutter Dial Tone and at the same time the "MSG" icon on the LCD Screen and the MESSAGE WAITING LED indicator will blink.

1. To access your Voice Mail message, press the **talk** button.
2. After you hear a dial tone, press the **talk** button. This will automatically dial the Voice Mail Post Code in your area and connect you to the Voice Mail service provider.

NOTE: You should store the Voice Mail Post Code number by using the VOICE MAIL function on page 25. You can also call your Voice Mail service provider by dialing the Voice Mail Post Code number after pressing the **talk** button.

"C-F" (Forwarded Call)

 
Appears on the upper left hand side, when the incoming call has been assigned to your telephone number.

"L-D-C" (Long Distance Call)

Appears on the upper left hand side, when the incoming call is a long distance call and the service is provided by your local telephone company.

Caller List


Records call information for up to 80 incoming calls such as caller's name and telephone number together with the date and time of the call. After recording a new incoming call, the NEW CALL indicator will blink and the LCD Screen will look as shown below:



No. of new calls.
Maximum calls = 80

Viewing the Caller List

 1. Press the SCROLL DOWN (▼) button to view the latest Caller ID record, or press the SCROLL UP (▲) button to view the first Caller ID record, press the SHIFT RIGHT (▶) button if the name has more than 11 digits.



2. Press the (dir) button to go back to STANDBY mode. (If no active buttons are pressed for 20 seconds or you have viewed the last Caller ID record in the Caller's List, the LCD Screen will automatically return to STANDBY mode.)

Placing a Call from the Caller List

1. Press the SCROLL DOWN (▼) button to select from the latest Caller ID record, or press the SCROLL UP (▲) button to select from the first Caller ID record.
2. Press and hold down the DIAL 7 (7*) button for a local call, or the DIAL 10 (10) button for a local call with area code, or the DIAL 1+ (1+*) button for a long distance call.
3. To end your conversation, either press the (talk) button or place the HANDSET on the BASE UNIT.

To place a call from the Caller List in TALK mode, press the (talk) button, then follow steps 1 to 3.

NOTE: You can edit the number before dialing.

Editing the Caller List before Dialing

1. Press the SCROLL UP (▲) or DOWN (▼) button to find the caller.
2. Press the (flash/edit) button.
3. Move the cursor by pressing the SHIFT LEFT (◀) or RIGHT (▶), SCROLL UP (▲) or DOWN (▼) button to the letter or number you want to change. To erase digit, press the (scan/del) button. To add digits, use the TELEPHONE KEYPAD (10) (0) ~ (9) buttons.
4. Press and hold down the DIAL 7 (7*) button for a local call, or the DIAL 10 (10) button for a local call with area code, or the DIAL 1+ (1+*) button for a long distance call.
5. To end your conversation, either press the (talk) button or place the HANDSET on the BASE UNIT.

To save the edited record from the Caller List, follow steps 1 to 3 then press and hold down the (rel/pa save) button.

 
Saving the Name and Number in the Caller List into the DIRECTORY

1. Press the SCROLL UP (▲) or DOWN (▼) button to find the caller.
2. Press and hold down the (rel/pa save) button.

NOTE: It is not advisable to save a telephone number without the corresponding name. This will lead to improper display on Private and Out of Area calls.


Deleting All Records in the Caller List

1. Press and hold down the (scan/del) button while in STANDBY mode.
2. The LCD Screen will automatically return to STANDBY mode.



Selective Deleting in the Caller List

 1. Press the SCROLL UP (▲) or DOWN (▼) button to find the Caller ID record while in STANDBY mode.
2. Press and hold down the (scan/del) button, then the LCD Screen will display the next Caller ID record in the Caller List.
3. Press the (dir) button to return to STANDBY mode.




Name and Telephone Number DIRECTORY


This DIRECTORY lets you scroll through the list to find the record you need for one touch dialing. You can store up to 40 names and telephone numbers in the Memory.

Viewing the DIRECTORY

 
1. Press the (dir) button.



No. of records stored.

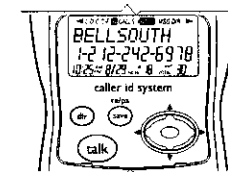

 2. Press the SCROLL UP (▲) or DOWN (▼) button to find the one you need, press the SHIFT RIGHT (▶) button if the name or telephone number is more than 11 digits.



NOTE: To exit the DIRECTORY List at anytime, press the (dir) button.