


TRX220 User Guide


2015 08 04

traXX Activity Tracker


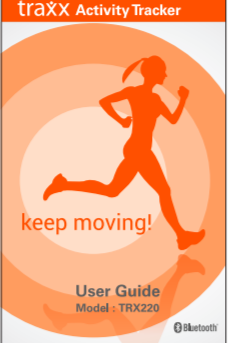
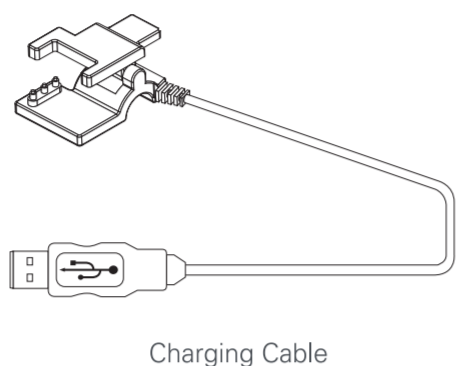


keep moving!

User Guide Model : TRX220



In the box






Fitness Band

User Guide

Charging Cable

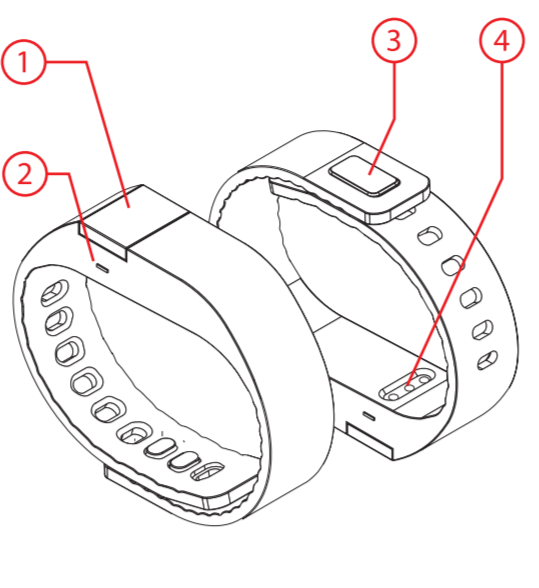
Location of controls



1 LED Screen 3 Clasp
2 Mode Button 4 Charging Contact

Charging

- Open the clamp on the charging cable.
- Pair the three charging contacts on the back of the fitness band with the three charging pins on the clamp.
- Gently release the clamp to dock the band.
- Plug the USB cable into a computer or a USB power adaptor (not included).

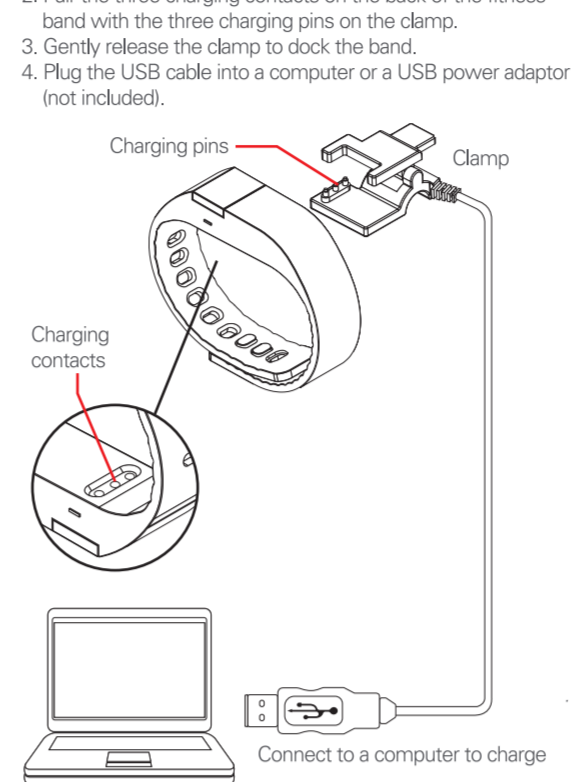



Charging pins Clamp

Charging contacts

Connect to a computer to charge

Modes


When the band is fully charged, you are ready to begin. The device will remain on until the battery is drained.

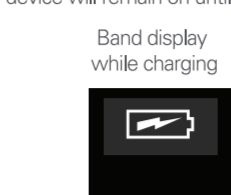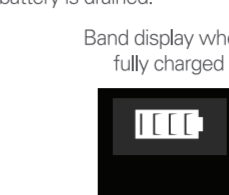Band display while charging Band display when fully charged

i It takes approximately 4 hours to fully charge the band.
When the band is fully charged the standby time is 10-12 days.
You can use the Move! by Traxx app to check the battery status of your band.

Battery level indicator (Settings)

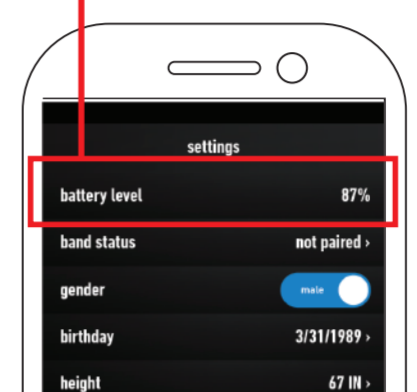


battery level 87%

band status not paired

gender male

birthday 3/31/1989


height 67 in

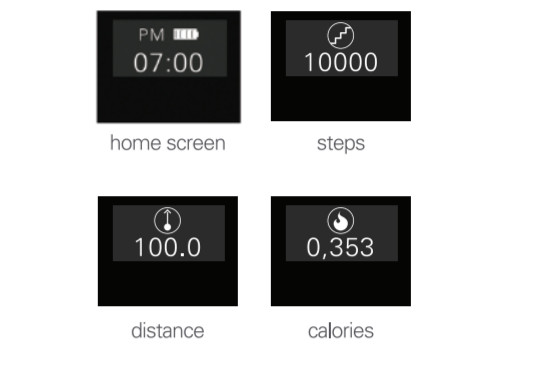

home screen steps

distance calories

Press the **mode button** to toggle through the different modes of the band.

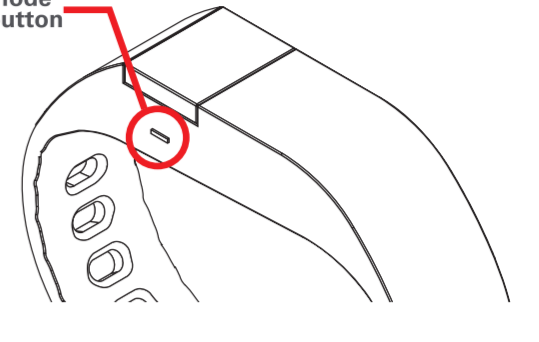

mode button

App installation

Launch the Google Play store or iOS app store (Apple devices) on your smartphone or tablet.



i The device is only compatible with:
• Android devices that run OS 4.3 or later, and that supports Bluetooth 4.0.
• Apple iPhone 4S and later, iPod Touch (5th gen.), iPad 3 - 4, Mini, and Air.

Search for "Move! by Traxx" on the app store.

Select "Move! by Traxx"



Install the "Move! by Traxx" app.



Pairing & connecting to a Bluetooth® device

Before launching the app, make sure your device's Bluetooth feature is enabled, and the band is charged.

When you open the app for the first time, you will be prompted to connect your device to the band.

- Select "PAIR NOW" as shown below.



1. Select "PAIR NOW" as shown below.



2. When the "pairing screen" appears, press the "mode" button of the band.

3. When the band is connected and paired to your device, "connected" is displayed on the bottom of the home screen.

When the band is not connected or paired to device, "disconnected" is shown.



connected



disconnected - tap to connect


home screen (connected) home screen (disconnected)

If you are not paired or connected to your band, you will see disconnected on the bottom of the home screen. Tapping on "disconnected" will pair and connect the band to your device.

i The band will disconnect when separated from your device (over 20 ft)

Home Screen

After connecting your device, you will be taken to the home screen where your daily activities will be displayed.

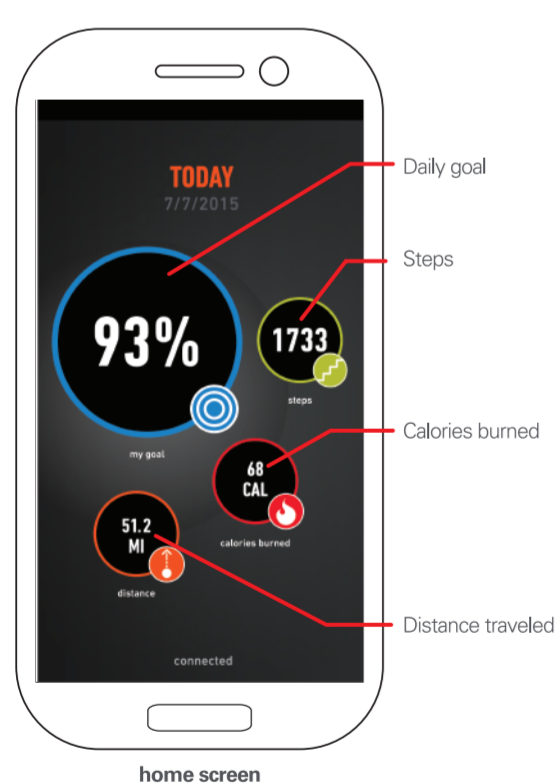

Daily goal

Steps


Calories burned

Distance traveled

home screen

Syncing

Swipe down on the home screen to sync the band to the app and update your activity data.

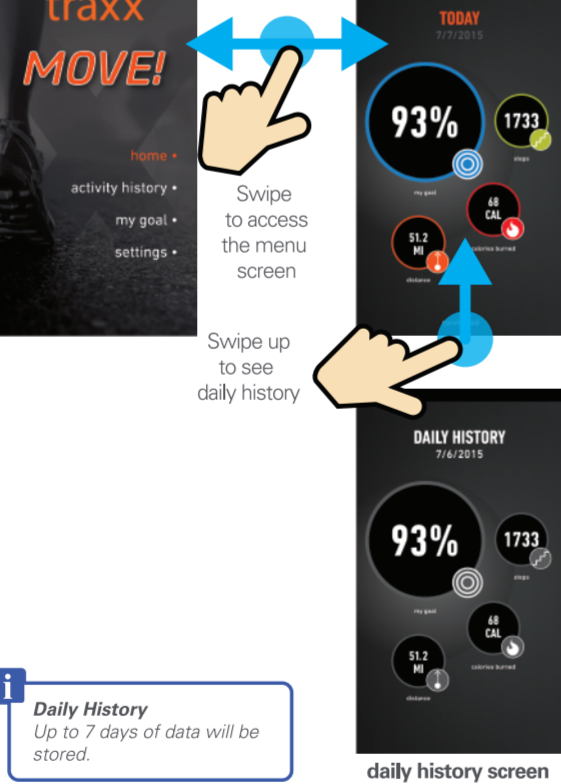

menu screen


home screen

home screen

i About Syncing
1. Make sure that the band is connected to your device when syncing.
2. After using the band, be sure to sync it with your device within 48 hours so that you do not lose your data.

Menu

On the menu screen, you can view activity history, adjust your goal, or access settings.

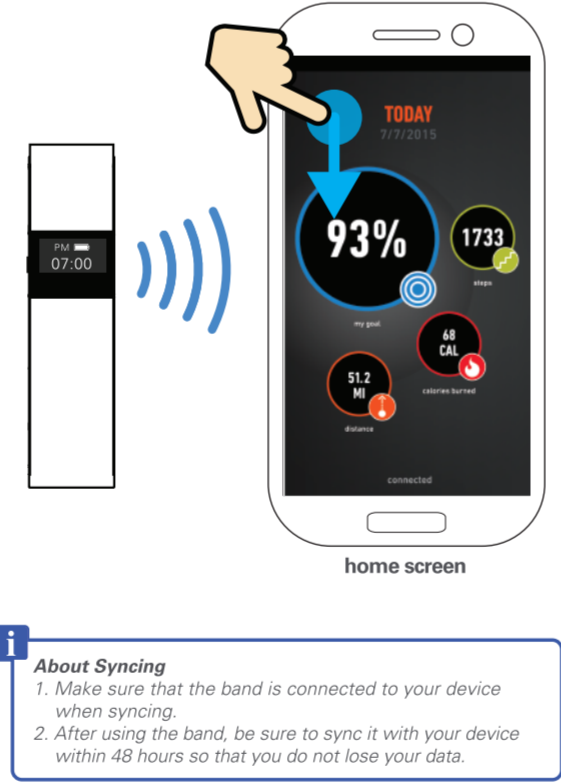

menu screen


activity history

my goal

settings

Goal

Your daily goal is set to 10,000 steps by default. You can change the goal by using the arrows as shown below.



my goal screen

my goal


STEPS

SUBMIT

You can only adjust the first two digits.

15000

Settings

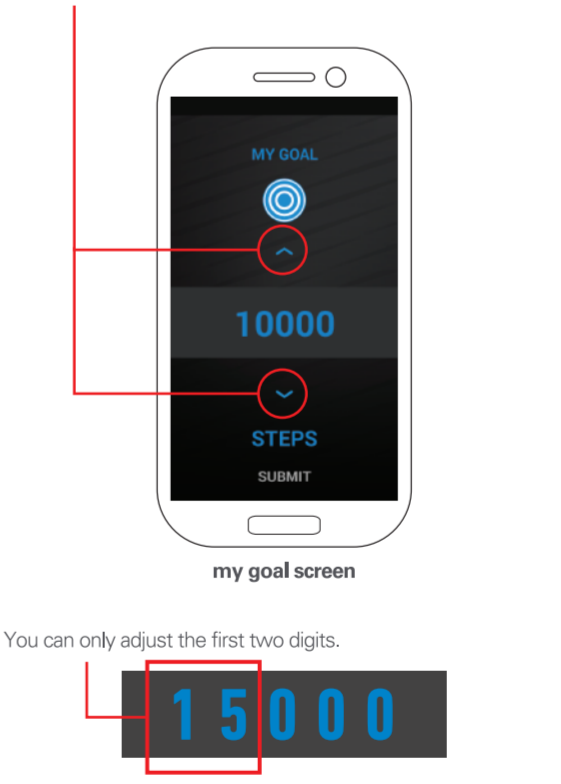

settings screen

Pair or unpair your band by tapping on band status

i Updating the software of your band
1. To check for updates, tap "band software" in "settings".
2. If there is an update available, your band will begin updating automatically.

Care & safety tips

Keep the following tips in mind when caring for your Traxx band:

- Wash and dry the Traxx band regularly, particularly under the band.
- Wash your Traxx band frequently enough to allow air circulation.
- Use skin care products sparingly on the areas of the wrist covered by the Traxx band.

Important Safety Instructions

- Do not expose your Traxx band to liquid, moisture, humidity, or rain while charging. Exposure of the Traxx band to moisture while charging could result in electric shock.
- Do not tamper with or abuse the Traxx band. For example, without limitation, do not drop, disassemble, open, cut, modify, or alter the band, or use the band for purposes other than those intended.
- Do not use abrasive cleaners to clean your Traxx band.
- Do not expose your Traxx band to extreme heat or cold.
- Do not leave your Traxx band in direct sunlight for extended periods of time.
- Do not leave your Traxx band near open flames such as cooking burners, candles, or fireplaces.
- Do not bring your Traxx band into contact with any sharp objects. This could cause scratches and damage.
- Do not insert anything into your Traxx band unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your Traxx band; it does not contain any user-serviceable components.

Built-in Battery Precautions

- Use only the supplied USB cable to charge the Traxx band.
- Only charge the battery in accordance with the user instructions supplied with the Traxx band.
- Avoid charging your Traxx band in extremely high or low temperatures.
- Do not wear your Traxx band while you are charging it.
- Do not attempt to disassemble the Traxx band or force open the built-in battery.
- Do not charge the Traxx band in damp areas because this could result in electric shock.
- Do not clean the Traxx band when it is being charged. Always unplug the charger first before cleaning the Traxx band.
- Do not charge your Traxx band in a fire. The battery could explode causing injury or death.
- Do not dispose of your Traxx band in a fire. The battery could explode causing injury or death.

WARNING TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER OR MOISTURE.

WARNING RISK OF ELECTRICAL SHOCK DO NOT OPEN

WARNING THE LIGHTING IS ALIGNED WITH APPROVED STANDARDS. THE LIGHTING IS INTENDED TO ILLUMINATE THE USER'S FACE AND NOT TO BE USED AS A SOURCE OF LIGHT. DO NOT STARE INTO THE LIGHTS. THE LIGHTS ARE NOT TO BE USED AS A SOURCE OF LIGHT. DO NOT STARE INTO THE LIGHTS.

Legal information

FCC Part 15B
This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15B of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an isolated outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Do not attempt to repair or modify this equipment.
Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15B of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Disabled USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Battery Disposal & Recycle
This device contains a lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal. ☎ 1-800-822-8837

Traxx is a trademark of Southern Telecom Inc.
© 2015 Southern Telecom Inc. All Rights Reserved.
The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.
Android, Google, Google Play and other marks are trademarks of Google Inc.
iOS, Apple, App Store and other marks are trademarks of Apple Inc.
All other trademarks and trade names are those of their respective owners.

Limited Warranty

This Product (including any accessories included in the original packaging) as supplied and distributed here by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

Product Type: Fitness band Warranty: United States/ Canada: 90 days
Labor Warranty: 90 days

To obtain warranty service:

- Call the Customer Support number located below, or go to our website portal to receive an RMA number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Preserve all shipping costs to the authorized service center, and remember to insure your return.
- Contract the requirements into an isolated outlet on a circuit different from that to which the receiver is connected.
- Include a return shipping address (no R.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Customer Support
☎ 1-877-766-8481 (Toll Free)
Monday - Friday: 8AM - 10PM (EST)
☎ www.southern telecom.com
Click on "Product Support"

To receive Warranty service, the original consumer purchaser must contact Southern Telecom, an authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period, MUST be presented to distributor, or an authorized service provider or the distributor, in order to obtain the requested service.
This Warranty covers manufacturing defects or materials and workmanship encountered in the normal, non-commercial use of the product, and does not cover consumer misuse, delivery, installation, software issues, setup, adjustments, cosmetic damage or damage due to acts of nature, accidents, misuse, abuse, negligence, commercial use or modification of, or any part of the product. In addition, this Warranty does not cover "burnt" into the screen.
This Warranty applies to the original consumer only and does not apply to resellers or anyone WITH ALL FAULTS, such as Reconditioned, Refurbished or Re-manufactured, or consumables (e.g., fuses, batteries, bulbs, etc.). The Warranty is void if the factory-supplied serial number has been altered or removed from the Product. This Warranty is valid only in the country where the consumer purchased the product, and only applies to products purchased and resold in that country.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE, SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STARTS ABOVE. NO OTHER EXPRESS WARRANTIES SHALL APPLY. THIS WARRANTY SHALL BE EXTENDED TO ANY OTHER PURCHASER OF THE ORIGINAL PURCHASE PRICE. AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURER BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN). HOWEVER, DISTRIBUTOR SHALL NOT BE RESPONSIBLE FOR THE PURCHASE PRICE OF THE PRODUCT, SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT BE EXTENDED TO ANY OTHER PURCHASER OF THE ORIGINAL PURCHASE PRICE. THE PRODUCT AND IS NOT TRANSFERABLE.
Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if in-state warranty applies.

