

AOC



USER'S MANUAL
D70J10

Table of Contents

Table of Contents.....	1
Features.....	2
Unit at a Glance	3
Getting Started.....	4-5
About Applications.....	5-6
Preinstalled Applications.....	6
Connect to a Wi-Fi network.....	7-8
Optional Connections.....	9
Reset.....	10
Specifications.....	14

Features

Browse the Web.
Visit your favorite websites

Check your e-mail
Keep in touch with friends and family

Watch YouTube videos
Browse the world's most popular video-sharing community

Read your favorite books
Download thousands of books with the included E-book reader

Discover thousands of apps for Android Games, applications, and more with marketplace(need for customer installed)

Connect to the Internet wirelessly
High-speed Wi-Fi 802.11 b/g/n networking

 
Enjoy your media library anywhere
Portable powerhouse plays popular music, video, and photo formats
microSD memory card reader
Increase your storage capacity (up to 32 GB supported)

Built-in camera
Convenient front-facing & rear camera

Automatic orientation detection
Read any way you want; the display adjusts automatically!

Reading books in the ePub format requires the included E-book reader application.

Unit at a Glance

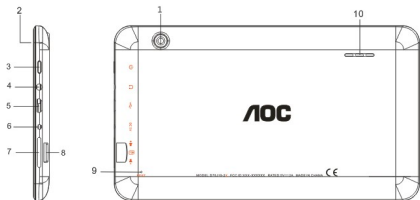

1. Rear Camera.

2. Front-facing Camera.

3. Power

Hold to turn the unit on, or short press to turn the screen on or off.

Press and hold to access the Power Off menu.

4. Earphones/MIC

Audio output connection for Earphones.

MIC: Use internal MIC to record voice.

5. USB OTG

Connect to a USB device or a computer to transfer data (e.g. music, videos, photos, files).

6. DC Adapter In

Charge and power the tablet with adapter.

7. Vol+/Vol-

Press to adjust the volume

8. TF Card

Load external microSD memory cards here.

9. RESET

Press this button to reset the system when the device is halted.

10. Speaker

External audio speakers output.

Getting Started

 
Turning the Tablet on and off

To turn the tablet on:

Press and hold the Power key until the LCD screen turns on. Wait until the Home screen appears; the tablet is now ready for use.

To turn the tablet off:

1. Press and hold the Power key until the Device Options menu appears.

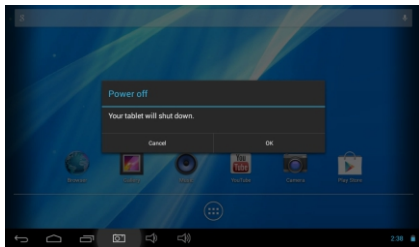

2. Touch ok the screen to turn off the tablet.

Turning the Screen On and Off (Standby)

When the tablet is on, you can turn off the screen to conserve battery power. Simply press the Power key once to turn the screen off. Press the Power key again to turn the screen back on.



 
To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This Screen timeout option can be found in the Display menu.

Getting Started

Unlocking the Screen

When the screen turns off, you will have to unlock the screen when you turn it back on.


To unlock the screen, drag the lock icon across the screen towards the lock icon.

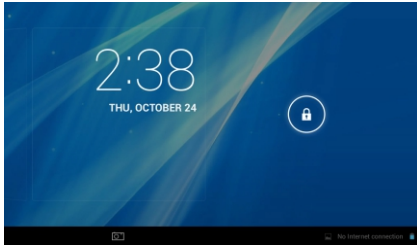

About Applications

To open an application, touch the application icon on the home screen or in the Launcher where you can tap the top right icon on the home screen to get in.

 Launcher screen:

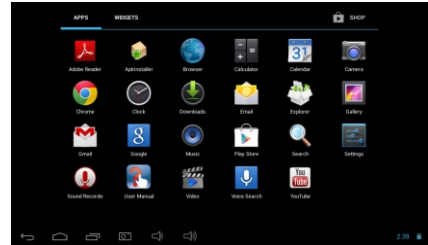

The screen shown above is for illustrative purposes only. Reserves the right to modify and improve the final list of applications available on the tablet.

About Applications

Preinstalled Applications

Some applications have been installed on your tablet for your convenience.

These applications include:



Browse the web.



Perform simple mathematical operations.



Take pictures or videos with the frontfacing camera.



Check your e-mail.



Play music.



Access the Settings menu to adjust the tablet's options.

Preinstalled Applications

Installing Applications

You can also download and install additional applications from the device's applications marketplace, the web browser, or other sources.

The tablet must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the Application settings menu.

Connect to a Wi-Fi network

The Notification bar displays icons that indicate your tablet's Wi-Fi status.



Notification that an open Wi-Fi network is in range.



Connected to a Wi-Fi network (waves indicate connection strength).

[no icon] There are no Wi-Fi networks in range, or the Wi-Fi radio is off.

1. Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:

a. Go to the Home screen: Press the Home key.

b. Open the Settings menu: tap the top right icon on the home screen to get into the launcher, then touch Settings icon.

c. Open the Wireless & networks menu: Slide the icon to ON status.



When Wi-Fi is on, the tablet will look for and display a list of available Wi-Fi networks.



If a network that you have connected to previously is found, the tablet will connect to it.

If you don't see your network in the list, you can force the tablet to re-scan. To scan for networks, tap the Menu key, and then touch Scan.

Connect to a Wi-Fi network

 
2. Select an available Wi-Fi network to connect to:

In the same Wi-Fi settings menu above, touch a network in the list.

If the network is open, the tablet will prompt you to confirm connection to the network. Touch Connect to confirm.

If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch Connect to confirm.

When you have successfully connected to a Wi-Fi network, the Notifications bar at the the low of the screen will show a Wi-Fi signal indicator.

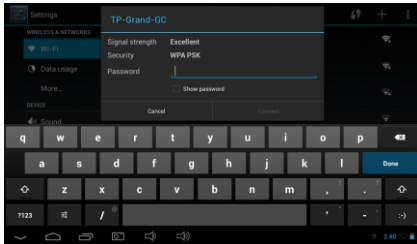

Optional Connections

Connecting to a Computer

Connect the tablet to a computer to transfer files.

1. Connect your tablet to the computer.

 
With the included USB cable: Plug the small end of the cable into the USB 2.0 high speed connector of the tablet. Plug the large end of the cable into an available USB 2.0 high speed port on the computer.

2. When your tablet is connected, slide up the USB bottom right icon on the screen and then touch icon USB connected.



3. Mount the storage.

Touch button Turn on USB storage to mount the tablet's built-in storage. When it is mounted, you can copy files to or from your tablet.

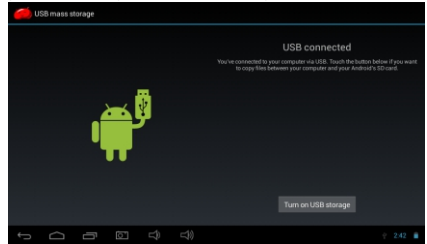


RESET

Warning:

1. This process will erase all user information and bring it back to Factory status.
2. Keep Tablet at full charge

 
1. Shut down the Tablet.
2. Press and hold the power and volume (+) button at the same time until the AOC logo is displayed about 15 seconds.

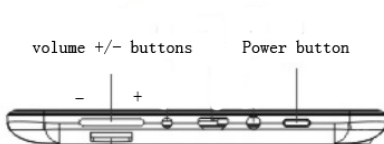

3. the recovery system will display after the AOC logo is displayed.


WIPE DATA/FACTORY RESET.

 It will take you into recovery options, scroll down with volume (-) button until **WIPE DATA/FACTORY RESET.** Press power button on it.

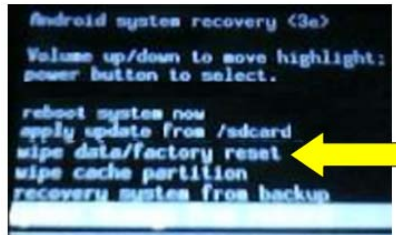


3. YES – DELETE ALL USER DATA. Scroll down with volume (-) button until

 YES – DELETE ALL USER DATA and then press power button.

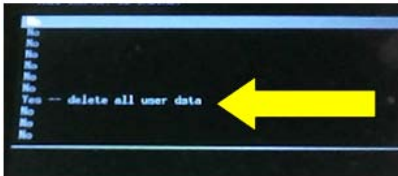


4. After about 1 min, below message will be displayed.
 
```
--- WIPING DATA...  
FORMATTING / DATA...  
FORMATTING /CACHE...  
DATA WIPE COMPLETE...
```



 5. Then choose REBOOT SYSTEM NOW to reset the Tablet.

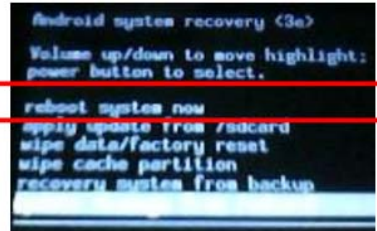

6. Done.

Specifications

Processor	RK3026 1.0 GHz(Dual core,cortex-A9)
RAM	1GB DDR3
Storage	8 GB flash built-in; microSD card slot (max.32GB supported)
Display	7 "TFT LCD(1024x600), Capactive touch screen
Wi-Fi Networking	IEEE 802.11 b/g/n
Bluetooth	V2.1+EDR
Audio Output	3.5mm headphone
PC Interface	USB 2.0 high speed
Additional Features	Built-in microphone Front facing camera(0.3MP) Rear camera (2 MP) 8Ω/1W*1 Speaker
Operating System	Android 4.2.2

Power	Rechargeable Li-poly battery power Adapter(DC 5V,2A)
Playback Time(hours)	About 6 hours for music, About 4 hours for video,

Accessories: AC Adaptor,USB Cable,
OTG Cable,Warranty Card.
Quick Guide.

FCC RF Exposure Information and Statement

Note: The device has no ad-hoc function.

Note: The device has no ad-hoc function. The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: D70J10-2N (FCC ID: RBD-D70J10) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 0.880W/kg. This device was tested for typical body-worn operations with the back of the handset direct with the body. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes and modifications to this equipment. Such changes and modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.