




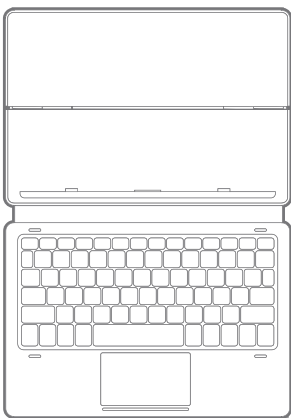 
airBook™ 10.1"
TABLET/LAPTOP

USER GUIDE
M10500






 
10.1" tablet




Keyboard folio



User guide




Micro USB cable



Charger

- During charging, keep your device and charger near room temperature for efficient battery charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- The included charger is intended for indoor use only.
- Service should only be provided by an authorized service provider.
- Never attempt to disassemble, repair or modify the tablet yourself.
- Do not use the tablet in rain or other wet locations.
- Avoid spilling any liquid on the tablet.
- In case the tablet gets wet, unplug all cables and turn off the tablet.
- Do not attempt to dry the tablet with an external heat source.
- Unplug all cables and turn off the tablet before cleaning.
- Use a soft, lint-free cloth to clean the tablet and display.
- Avoid getting moisture in open ports.
- Do not use household cleaners, solvents, alcohol, or abrasives to clean the tablet.
- Routinely check the tablet for proper and safe conditions. If there is any damage, or broken parts, remove the tablet from use.
- If for any reason the screen (display) is fractured or cracked, immediately remove this product from use and contact Customer Support. It is rare but, possible for seizures to be triggered by light flashes or patterns such as those on computer or TV screens. To reduce exposure to this potential hazard, play/watch in a well-lit room, sit an appropriate distance from the screen and take 10-to 15-minute breaks every hour.
- Cords could be a strangulation hazard.
- Keep out of reach of children under 3 years of age.
- Children pulling on the cord could cause the computer monitor or other equipment to which the device is connected to fall with possibility of property damage, serious injury, or death. Adult supervision required during use.
- Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss.
- When using headphones or earbuds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment; turn the volume down if you cannot hear the people speaking near you.
- Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected.
- If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.


WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



 
THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.

WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN


WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).
NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




THE EXCLAMATION POINT WITHIN THE EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE PRODUCT.

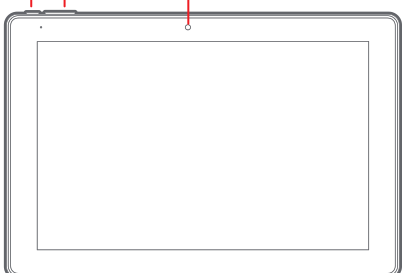


1 2 3

 

5 6 7 8 9 10

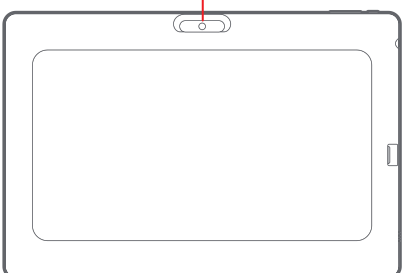 

4



11

- 1 Power button

2 Volume buttons

3 Front camera

4 Rear camera

5 Microphone

6 Headphone jack

7 Micro USB port
- 8 Reset button

9 Micro SD card slot

10 Speaker

11 Quick connector

 
12 Quick connector pins

13 Touchpad


Specifications:

- 10.1" IPS display (1280 x 800)
- Android™ 8.1, Oreo™ (Go edition)
- 64-bit, quad-core processor
- 1GB RAM
- 16GB internal storage* (expandable with optional Micro SD™ card)
- 5,000 mAh Li-ion battery
- Front + rear cameras
- Wi-Fi 802.11 b/g/n
- Bluetooth 4.0

*Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

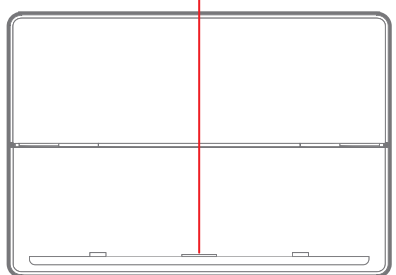

12

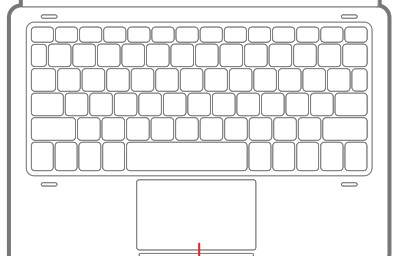 


13

Inserting a Micro SD card


The tablet supports Micro SD cards up to 64GB (not included).

To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.

To remove the Micro SD card, gently press it inward to eject.




Micro SD card

 


Charging


Connect the tablet to a wall outlet using the included power adaptor as shown below.




Wall outlet




Charger

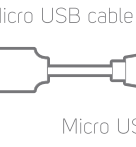 


Micro USB cable



 
Micro USB port




Tablet (SIDE)



When charging, the lightning indicator will appear in the battery icon.



08:10



Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet (turning the display off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.
- It is recommended to keep the brightness level at 50% or under if the tablet is in use while charging.

Power ON / OFF & Reset

Turning on the tablet

Press & hold the  button until the startup screen appears.

Power off the tablet

Press & hold the  button until the "Power off" option appears.

Briefly press the  button. (Lock the tablet to conserve the battery).

Unlock the tablet


Briefly press the  button, and slide the "Lock icon" up.

Resetting the tablet


If the tablet malfunctions or freezes, you can use the reset button to restart it.

To reset the tablet, take a metal pin (such as the end of a paper clip) and gently push the recessed reset button on the side of the tablet as shown below.

 
The tablet will restart.




Power button




Tablet (front view)

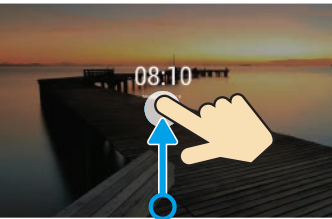

Lock screen





Metal pin



Reset button

 
Turning on

1 Press and hold the  Power button to get started.




Startup screen

2 Follow the initial setup wizard prompts.

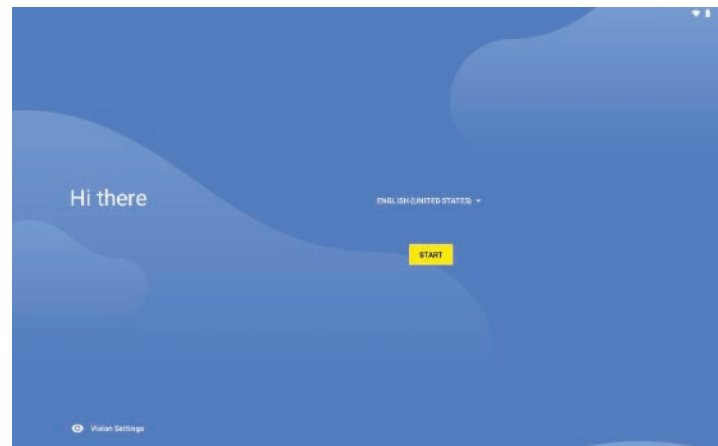


Setup wizard

 3 To use the Google Play store, sign into or create a Google account.

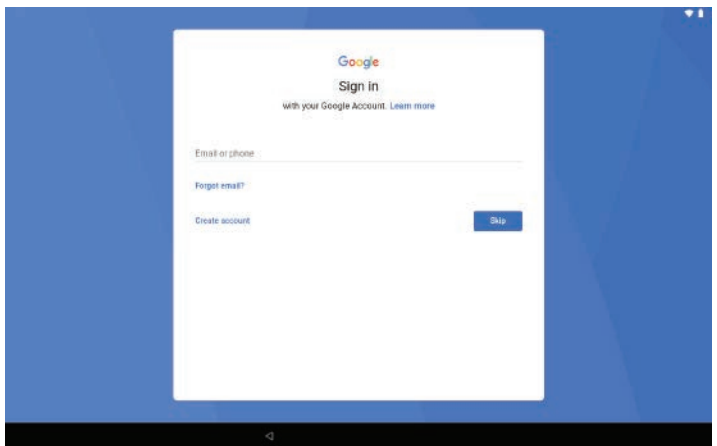


Google account




If you use Gmail, you already have a Google account —if not, you can create an account now.

Google Play




Google Play

Google Play is a digital content experience from Google™ where you can find and enjoy your favorite music, movies, TV shows, books, and Android apps and games. It's your entertainment hub: you can access it from the web or from your Android device, and all your content is instantly available across your devices.



Play Movies



Play Music