


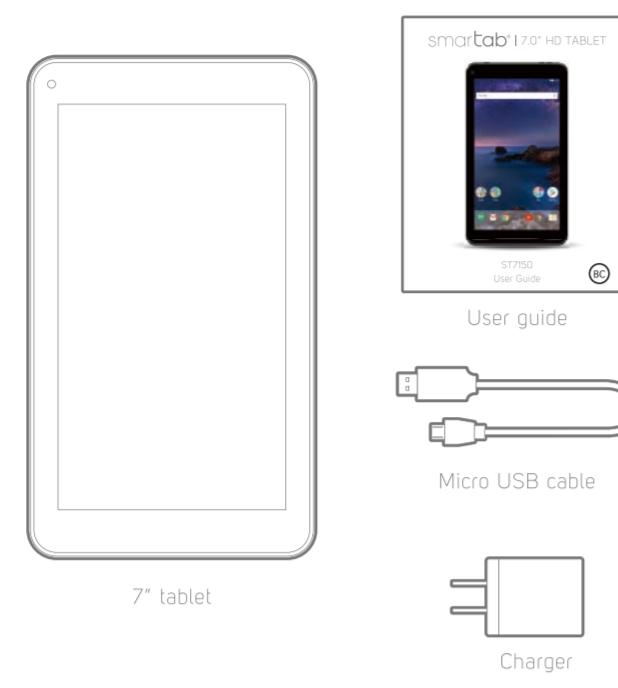 
ST7150 User Guide

07/14/2017

smartab® | 7.0" HD TABLET




In the box




Care & safety precautions

- During charging, keep your device and charger near room temperature for efficient battery charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may lose more time to charge.
- The included charger is intended for indoor use only.
- Service should only be provided by an authorized service provider.
- Never attempt to disassemble, repair or modify the tablet (user).
- Do not use the tablet in rain or other wet locations.
- Avoid getting any liquid on the tablet.
- In case the tablet gets wet, untangle all cables and turn off the tablet.
- Do not attempt to dry the tablet with an external heat source.
- Unplug all cables and turn off the tablet before cleaning.
- Use a soft, lint-free cloth to clean the tablet and display.
- Avoid getting moisture in open ports.
- Do not use household cleaners, solvents, alcohol, or abrasives to clean the tablet.
- Regularly check the tablet for cracks and safe conditions. If there is any damage, or broken parts, remove the tablet from use.
- If for any reason the screen (display) is inoperative or cracked, immediately remove the product from use and contact Customer Support.
- It is rare but possible for screens to be triggered by light flashes or patterns such as those on computer or TV screens. To reduce exposure to this potential hazard, always watch in a well-lit room at an appropriate distance from the screen and take 10- to 15-minute breaks every hour.
- Cards could be a strangulation hazard.
- Keep out of reach of children under 3 years of age.
- Children playing on the cord could cause the computer, monitor or other equipment to which the device is connected to fall with possibility of property damage, serious injury, or death. Adult supervision required during use.
- Loudness reduces to loud sounds, at high volume, may result in permanent hearing loss.
- When using headphones or earbuds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment, turn the volume down if you cannot hear the device speaking near you.
- Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected.
- If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 <p>THE LIGHTNING BOLT WITH WHEELS symbol indicates that the product contains lithium-ion or lithium-polymer batteries. DO NOT REMOVE COVER OR BATTERY.</p>	<p>WARNING risk of electric shock do not open</p> <p>NO USER SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE QUARANTEED BY PERSONNEL.</p>	<p>THE EXPLANATION POINT WITHIN THE REGULATION, THROUGHOUT THE USER TO THE PRESENCE OF HAZARDOUS MATERIALS. THE USER SHOULD FOLLOW THE INSTRUCTIONS TO PROTECT HIMSELF FROM HAZARDOUS MATERIALS.</p>
--	---	--

 Buttons, ports & hardware

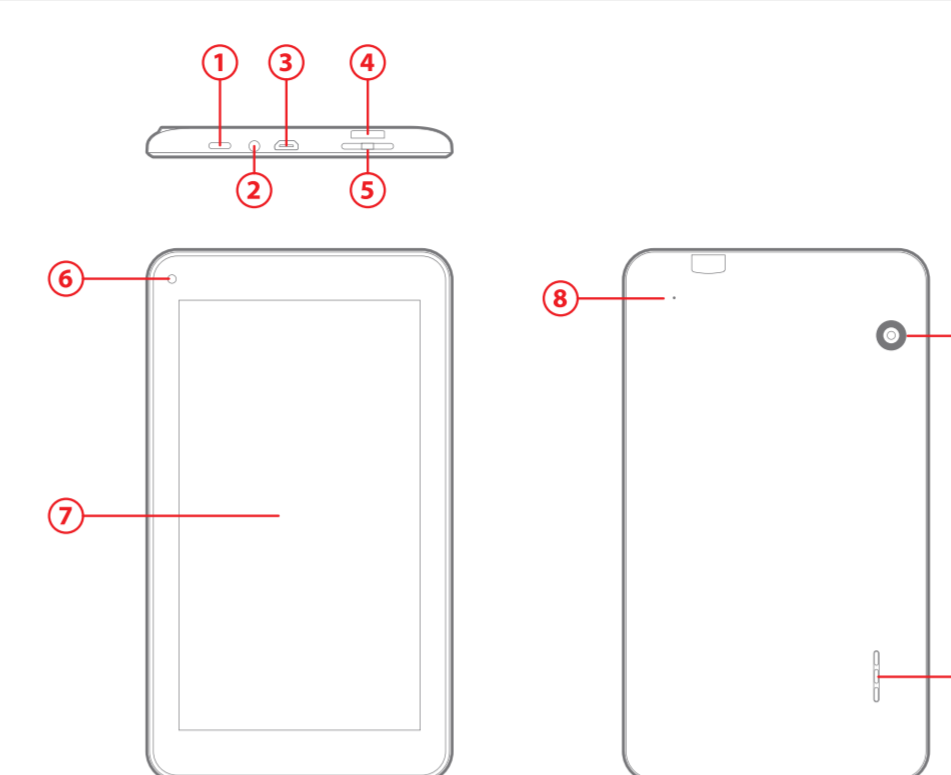

- 1 Power button
- 2 Headphone jack
- 3 Micro USB port
- 4 Micro SD card slot
- 5 Volume buttons
- 6 Front camera
- 7 7" display
- 8 Reset button
- 9 Rear camera
- 10 Speaker

 
SPECIFICATIONS:

- 7" HD, IPS display (1024x600)
- Android 7.1, Nougat
- Quad-core processor
- 1GB RAM
- 16GB storage* (expandable with optional Micro SD card)
- Front & rear HD cameras
- Bluetooth
- Wi-Fi 802.11 b/g/n
- 2,500 mAh battery

*Actual internal memory may vary depending on the operating system of the device and the pre-installed apps.
Micro SD* card sold separately.

Charging

Connect the tablet to a wall outlet using the included Micro USB cable and charger as shown below.

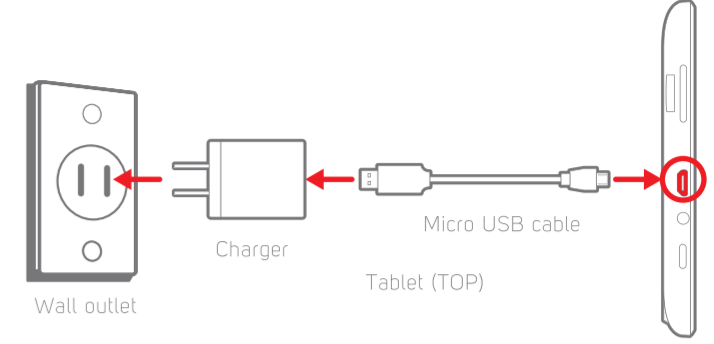

When charging, the lightning indicator will appear in the battery icon.

Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet (turning the display off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.
- It is recommended to keep the brightness level at 50% or under if the tablet is in use while charging.

Power ON / OFF

Turning on

- 1 Press and hold the **Power button** to get started.
- 2 Follow the initial setup wizard prompts.
- 3 To use the Google Play store, sign into or create a Google account.

Turning on the tablet

Press & hold the **Power button** until the startup screen appears.

Power off the tablet

 
Press & hold the **Power button** until the "Power off" option appears.

Lock the tablet (standby)


Briefly press the **Power button**. (Lock the tablet to conserve the battery).

Unlock the tablet


Briefly press the **Power button**, and slide the **Lock icon** up.

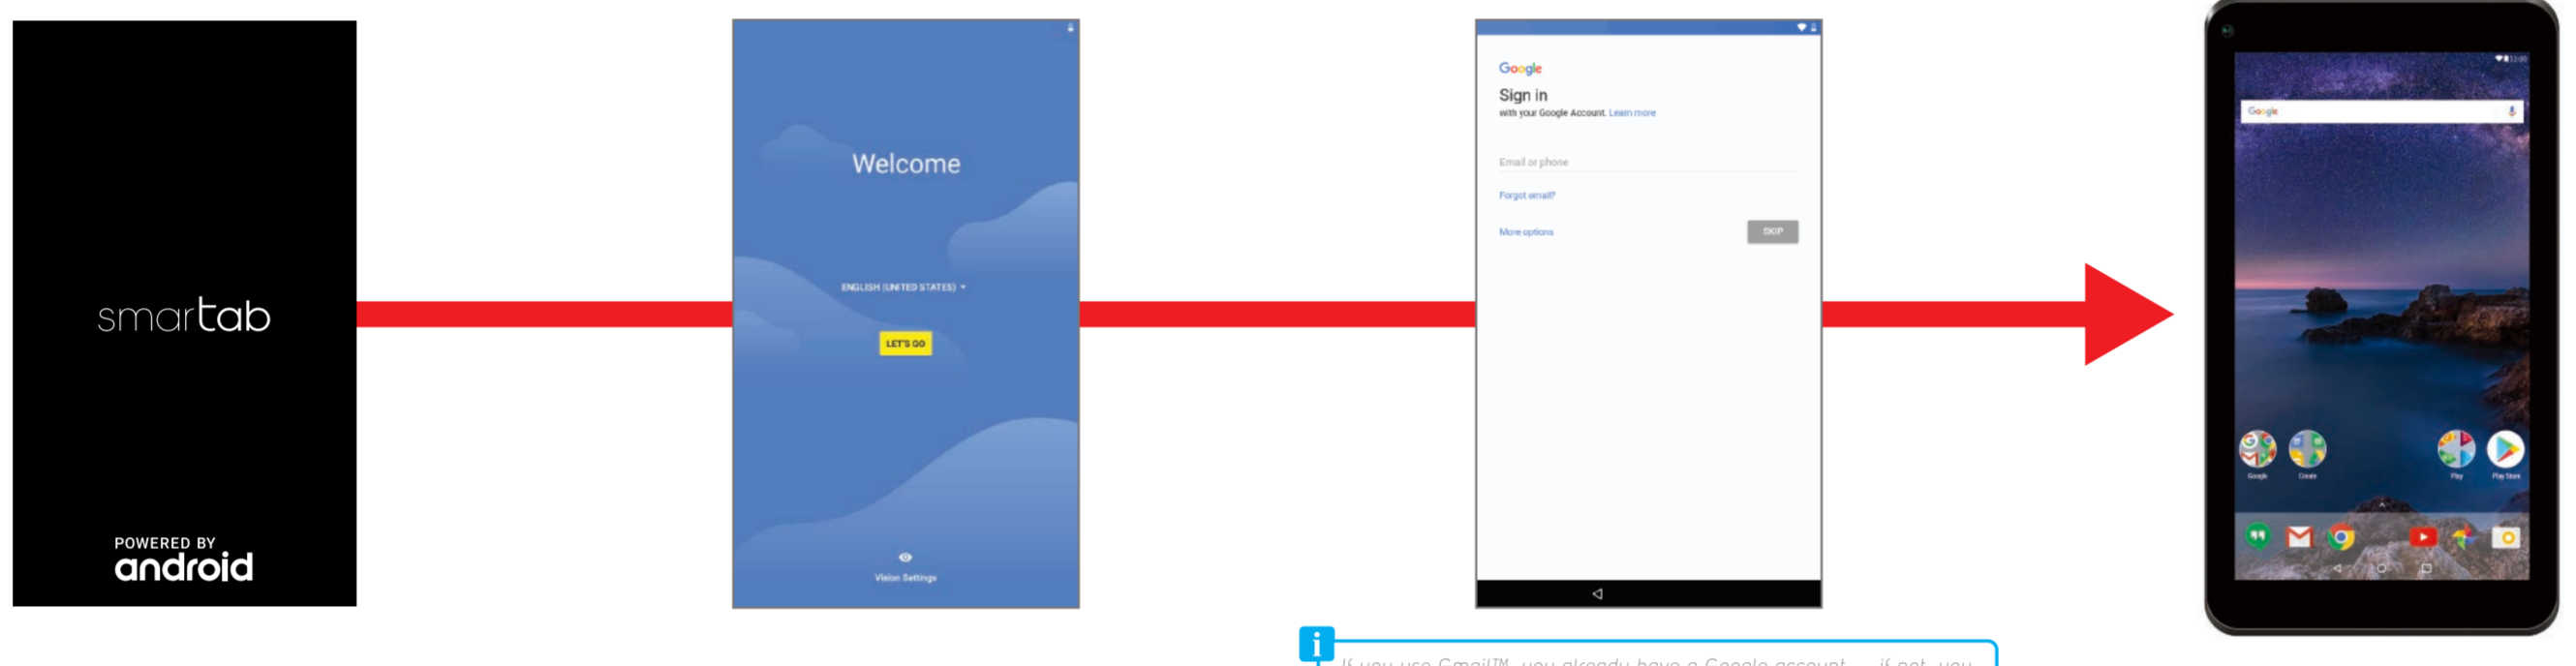

Google Play™



 
Google Play™ is a digital content experience from Google where you can find and enjoy your favorite music, movies, TV shows, books, and Android™ apps and games. It's your entertainment hub: you can access it from the web or from your Android device, and all your content is instantly available across your devices.

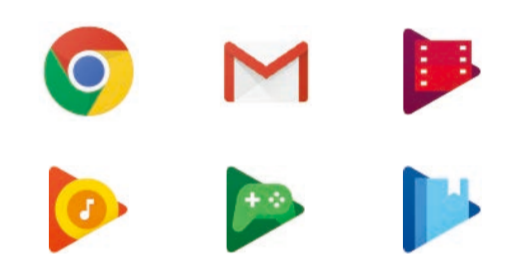

Home screen

Press and hold widgets to place them on the home screen as shown below.

Swipe up  indicator on the home screen to access the Apps Screen.

Notifications and Quick Settings

Notifications panel

Swipe down from the top edge of the screen to display the Notifications panel where you can browse and reply to your emails, check software updates, reminders and more.


Quick Settings panel

 
Swipe down twice from the top edge of the screen to display the Quick Settings panel where you can quickly turn on/off Wi-Fi, Bluetooth, Airplane mode, and more.

Connecting

Wi-Fi and Bluetooth®

To enable/disable Wi-Fi or Bluetooth®, simply tap the icons on the Quick Settings panel as shown below.

To access more settings options, select the  icon.

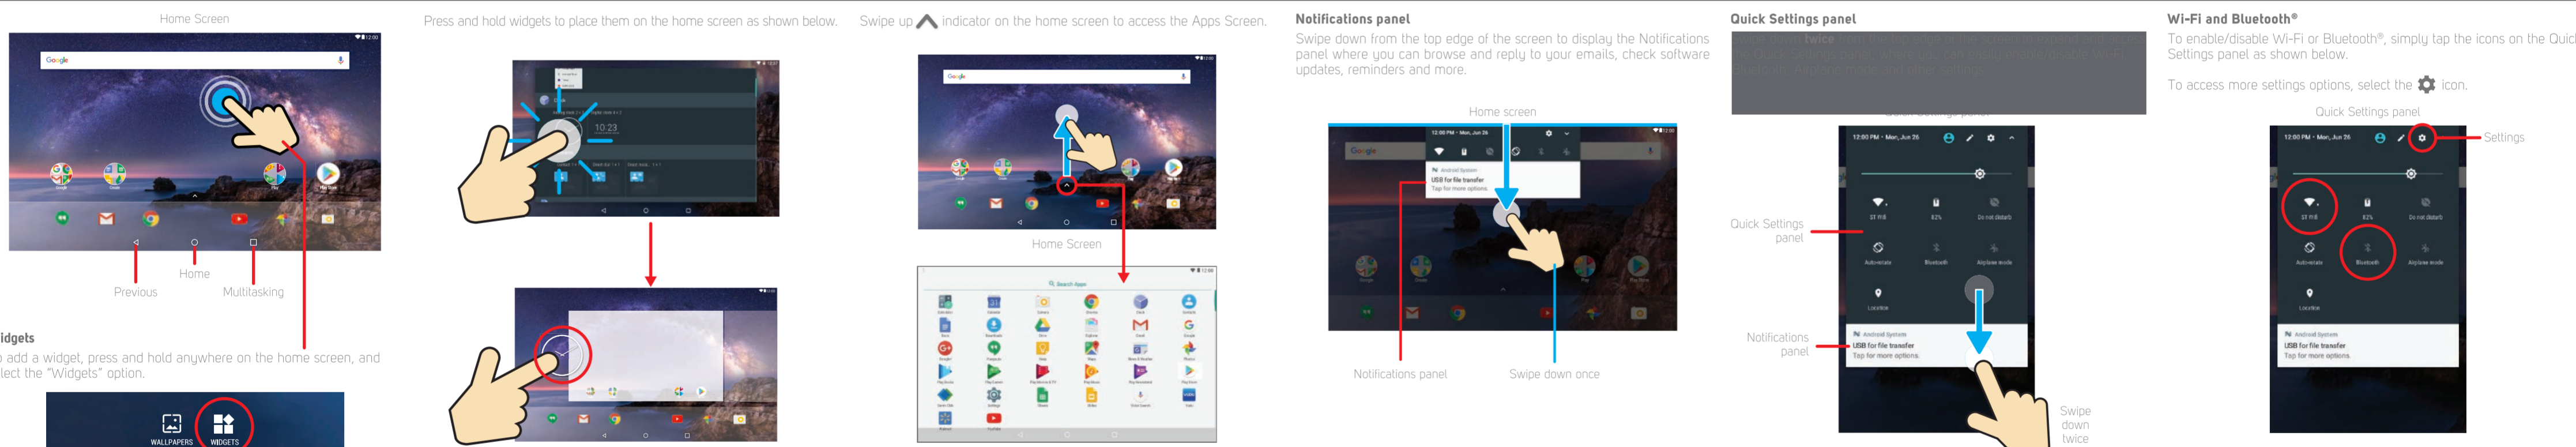


Expanding the storage

Inserting a Micro SD card

To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.


To remove the Micro SD card, gently press it inward to eject.

 Micro SD card is not included.

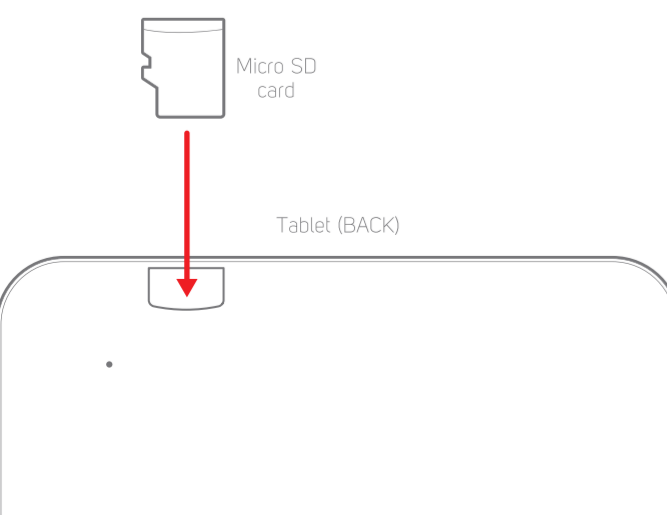

Transferring files

 
- 1 Connect the tablet to the computer using the included Micro USB cable as shown below.
- 2 Tap the notification on the tablet screen.
- 3 Select "Transfer files".
- 4 The internal storage of the tablet will appear on your PC.

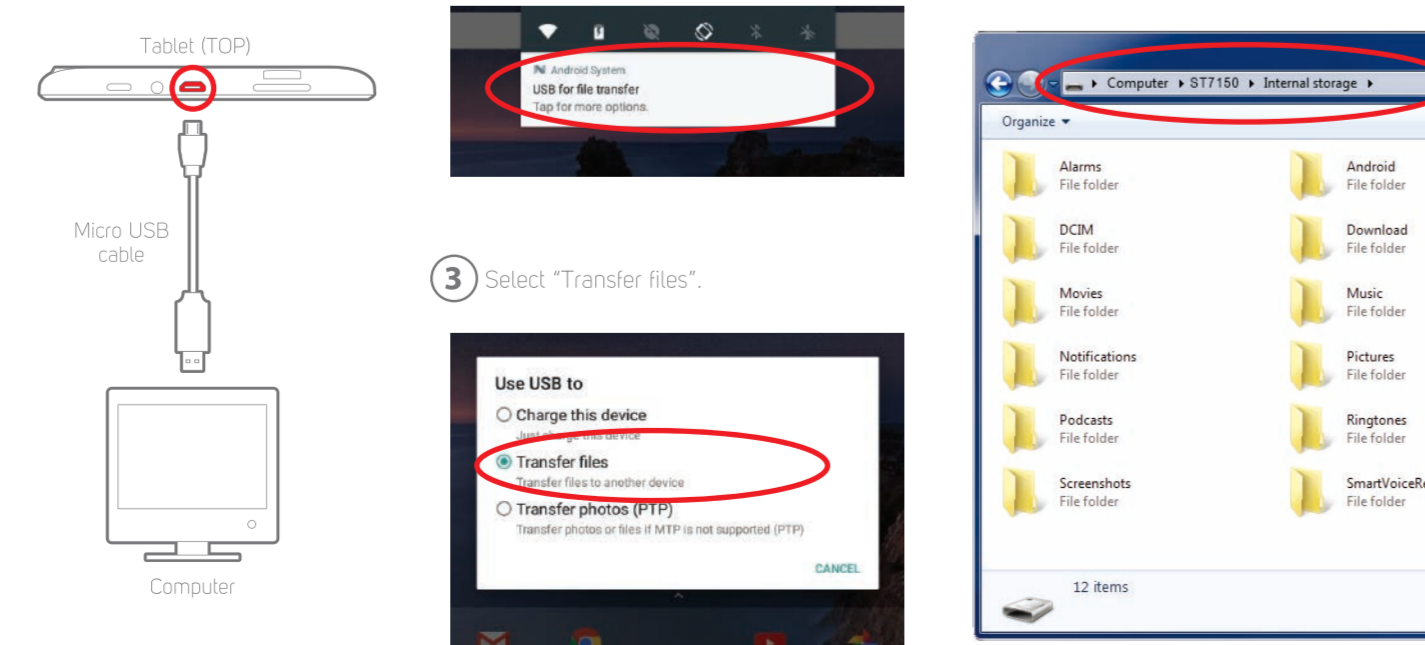

Miscellaneous

Reset

 To reset the tablet, take a metal pin (such as the end of a paper clip) and gently push the recessed Reset button on the back of the tablet as shown below.

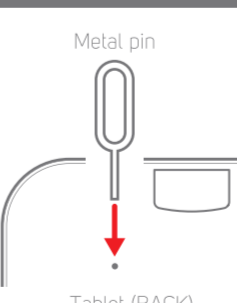

The tablet will restart.

Text-To-Speech

Google Text-to-speech powers applications to read the text on your screen aloud. For example, it can be used by:

- Google Translate to speak translations aloud so that you can hear the pronunciation of a word
- TalkBack and accessibility applications for spoken feedback across your device
- ... and many other applications in the Play Store

To use Google Text-to-speech on your Android device, go to **Settings > Languages & Input > Text-to-speech output**. Select **Google Text-to-speech Engine** as your preferred engine.

Legal information

FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Information Regarding Exposure to Radio Frequency Energy

This product is designed and manufactured not to exceed the specific limits for exposure to RF energy set by the Federal Communications Commission of the United States (FCC). Information on your device is on the back of the device, which can be found under the Display/Grant section of <http://www.southernlecom.com>.

If your electronic device has internal wiring, on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to ensure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to consult the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Battery Disposal & Recycle

This device meets the government's requirements for exposure to radio waves. The Specific Absorption Rate (SAR) limit set by the FCC is 1.6W/kg. The highest SAR value reported for the FCC is this device is 1.35W/kg and complies with the limit.

Design and distributed by Southern Telecom Inc. 5600 1st Avenue Brooklyn, NY 11220
© 2017 All Rights Reserved. Made in China.
SmartTab is a registered trademark of Southern Telecom Inc.
Android, Google, Google Play and other marks are trademarks of Google Inc.
The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc.
All other trademarks and trade names are those of their respective owners.

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

This Product (including any accessories included in the original packaging) as supplied and distributed new by an authorized reseller is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

Product Type: Tablet, Territory: United States/Canada, Parts Warranty: 1 Year, Labor Warranty: 1 Year

To obtain warranty service:

- Call the Customer Support number located below, or go to our website portal to receive an SR# number.
- Provide proof of the date of purchase within the package (date of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address for R.O. (boxed), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Customer Support:
1-877-768-6461 (Toll Free) www.southernlecom.com
Monday - Friday: 9AM - 10PM (EST) Click on "Product Support"

Customer Service Dept. 36
c/o Southern Telecom
400 Kennedy Drive
Savannah, GA 31402

Warranty service not provided:
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmwares. The warranty is voided in the event any unauthorised person opens, alters or repairs the product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. UNLESS OTHERWISE SPECIFIED BY THE CUSTOMER'S WARRANTY, ALL WARRANTIES ARE LIMITED TO THE PRODUCT PURCHASE PRICE. AT NO TIME SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE. AT NO TIME SHALL BE BINDING ON DISTRIBUTOR TO USE THE EXCLUSIVE SERVICES OF THE CONSUMER AND/OR DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS REVENUE, DATA OR RECORDS CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY OTHER THAN THE ORIGINAL CONSUMER'S WARRANTY. DISTRIBUTOR SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or provisions do not apply to you. This warranty gives you specific legal rights, and you may have other rights that may vary from state to state or province to province. Contact your authorized reseller to determine if another warranty applies.