 



nixplay n  
Welcome!

## Get to know your frame

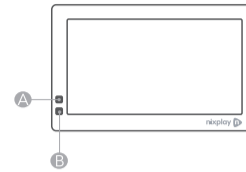

 - A Motion Sensor**  
Senses movement and turns the Cloud Frame ON and OFF
- B Infra-red Sensor**  
Receives signals from the remote control


## Remote

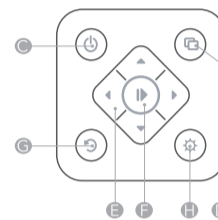

- C ON / OFF**  
Turns Digital Frame on or puts it into standby
- D Playlist**  
Display playlists
- E UP / DOWN / LEFT / RIGHT**  
Menu navigation / video playback control
- F Play**  
Select / Play / Pause
- G Back**  
Go back a step
- H Settings**  
Go to settings menu

Front

## Quick Start Guide

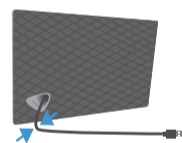 


### 1. Stand Frame using power cable

- ▶ Bend the power cable to stand and support the frame.
- ▶ **IMPORTANT:** Place the frame next to a computer / tablet for the set up process.



### 2. Plug power cable to adaptor and power source

 - ▶ Once plugged in, the frame will automatically start up.
- ▶ When you reach the 'Welcome Screen', please use the **remote** to navigate your frame set up.
- ▶ **IMPORTANT:** The USB cable can only be powered from the supplied power adaptor (5V, 2A). It cannot be plugged into a computer or tablet device.



### 3. Connect to WiFi network

- ▶ Using the remote, select the WiFi network you wish to connect to and press Play. If required, please enter the WiFi password and select **CONNECT**.
- ▶ **Note:** An automatic software update may take place. Please wait a few minutes and do not switch off or unplug your frame during this process.



### 4. Add Frame to a Nixplay Cloud Account

- ▶ Once your frame is connected to a WiFi network, please follow the instructions on your frame's display.
- ▶ Please visit [www.nixplay.com](http://www.nixplay.com) to create an account and follow the instructions in your browser to complete the set up process (if you are an existing Nixplay user, simply log in to pair your frame).
- ▶ **IMPORTANT:** Please ensure that your computer is using the latest browser version.

Congratulations, you have now successfully activated your frame. Start your Nixplay experience!

For warranty information, please visit our website: [www.nixplay.com](http://www.nixplay.com) If you need help, please contact our support team at: <http://support.nixplay.com>

Back

## **FCC Warning Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **FCC Radiation Exposure Statement**

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.