



MODEL: RT-1708

USER MANUAL

Preface

Thank you for buying this MID. Please read and retain all the operating instructions before operating the unit.


I. Note

1. Avoid the unit being dropped. Avoid the display been shaken seriously, or the display will be damaged unusually.
2. Do not use metal object to touch the device to prevent it from

short circuit.

3. Please backup your data in case your important data is lost, especially before you upgrade the firmware.
4. Do not disassemble. Do not wipe the surface of the unit by alcohol, thinner or benzene.
5. Do not disconnect the unit while it is formatting or uploading/downloading, or the procedures may lead to errors.
6. Avoid water or foreign objects enter the unit.
7. Do not use the unit in places that are extremely hot, cold, dusty, or humid.
8. Specifications are subject to change and improvement without notice.

II. Introduction of cover

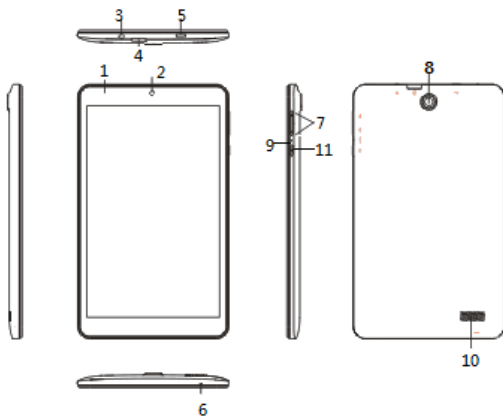

1. TP
2. Front Camera
3. Earphone Jack Micro
4. (SD)TF-CARD interface
5. Micro USB interface
6. Bottom edge of the device
7. volume+ / volume-
8. Rear Camera
9. Reset
10. Speaker
11. Power on/of

III. Operation Instruction

1. Basic Operation

1.1. Power On/Power Off

Power On;

Press and hold the power button for 5 seconds then release; the unit will display the start-up logo and enters in working mode.

Power Off;

Press and hold the power button for 3 seconds to turn the unit off.

Sleep;

While the device is at working status, press the power button once, it will enter in sleeping mode and the screen will be off. Press the power button again; it will shift back to the normal mode. You may use this function when you don't use the device temporary to save power.


1.2. Charging

When the device prompts "low battery", please charge it with provided power charger.

Please connect the USB charger to "port 5"


In general, it takes 4 to 5 hours charging from 0% to 100% when the screen is powered off, it will take longer to charge when screen is on.


For safety, we do not recommend overcharge more than 12 hours.

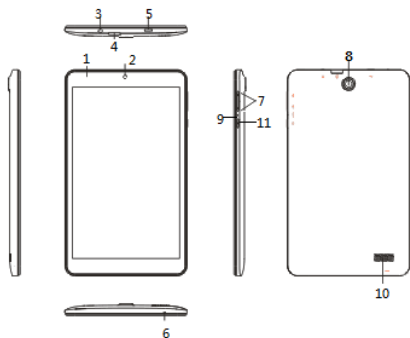

Note: To improve the longevity of the battery, you may charge for another 15 minutes after it prompts the battery is full.


1. Settings

 Click “Settings”  in the main interface to enter the setting interface. Click the corresponding setting items to operate. Here you can make adjustments for example; change display settings, adjust date & time, set password under Security, adjust sound and notifications, set data limits, check battery performance, set users, and much more.

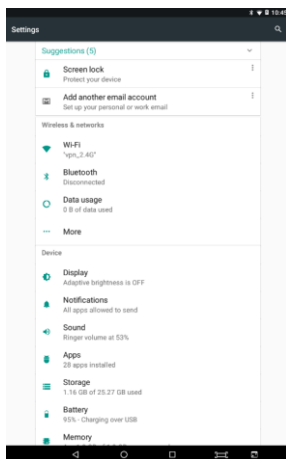


1.1. Date and Time Setting

 Click on “Date & time” in the setting interface, to make date and time adjustments. You may set the date, time zone, time, time format and date format etc. in the menu.

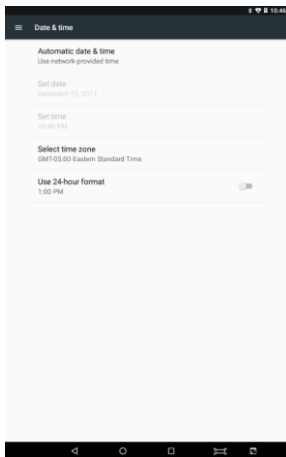


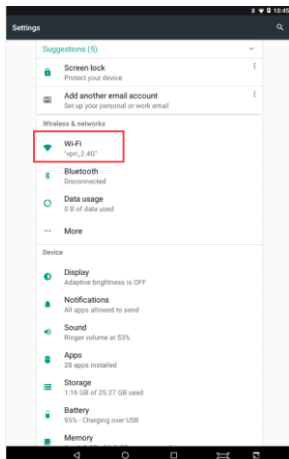 
1.2. Brightness

Select “Display” in the setting interface. Click on “Brightness” to enter and slide the bar to adjust the brightness.

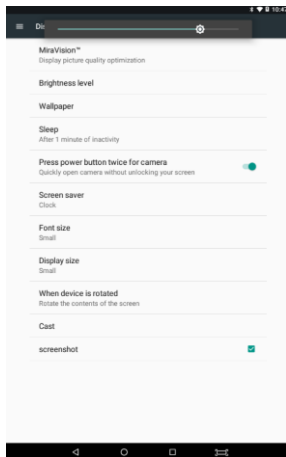

 
1.3. Wi-Fi connection

Click “Settings”  in the main interface. Click on Wi-Fi to turn on the WIFI, it will lists the open networks in that area. Click the name of the network; it will display a password window. You may connect it to WIFI according to the prompts. You need to input the user name and password if networks are encrypted.



1.4 Bluetooth:

Turn on the Bluetooth, Click Bluetooth setting to set and manage Bluetooth Devices access. Click “SEARCH FOR DEVICES”, it lists the open devices. Click the name of the devices; it pops up the setting window. Choose the device, pairing it, and then you can transfer pictures, movies, music and etc with it.

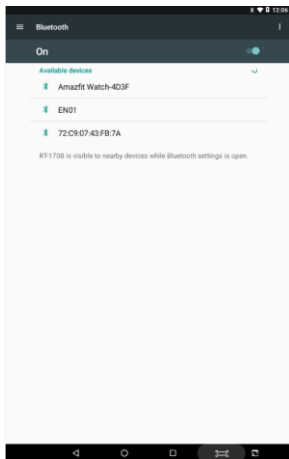


2. Install & Uninstall and Run applications;


2.1 Install

There are many ways to download and install applications under Android. You can download APK apps from other alternate App Market places other than Google Play Store. In order to install your downloaded apps you will need to open the file and install it.

Select the APK file you want Install then Click “Install” application will install automatically. After installation is complete, it prompts “Open” and “Finish”. Click “Open” to open the application. Click “Finish” to exit.


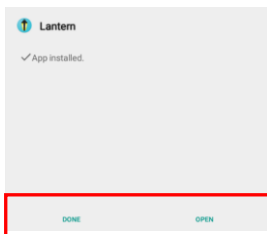


NOTE: (You will need to go to Settings> Security>Unknown sources and Turn it ON in order to Install downloaded APK apps).

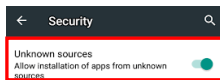

You may use a third party application to install an application that already comes with uninstall applications.

 
Select "Setting/Apps"/Downloaded to select the installed applications and check the attribute of it or uninstall it.

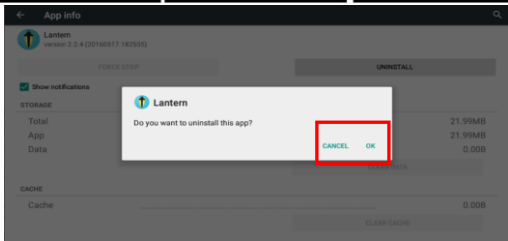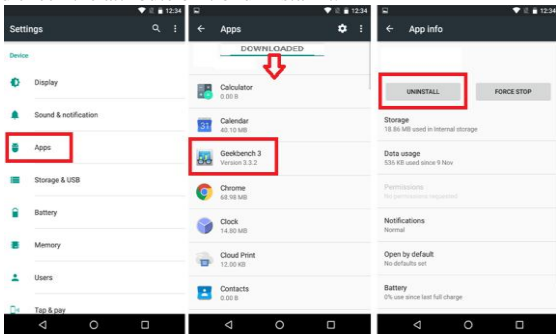

3. Connect to internet



3.1. After connecting with WIFI, open the browser and input the web address, you can browse the web then.

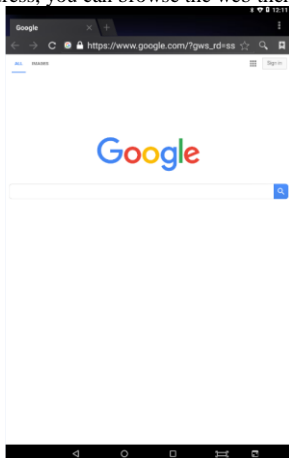

4. Audio and video playback

4.1. Audio playback



Select the “Music” App . You can find your music playlist and mp3 audio files, search for media devices, and select streaming playlist.


4.2. Video Playback



Open “Photos ” App to find your list of videos recorded. For Video Playback select video you want to play.

5. Picture viewing




Select “Gallery” App . You will find a list of all your picture files stored in your internal storage drive, also your picture files from your external drive (SD). Select the picture file name and it will display.

6. Camera



Open “Camera App” in the App’s menu.

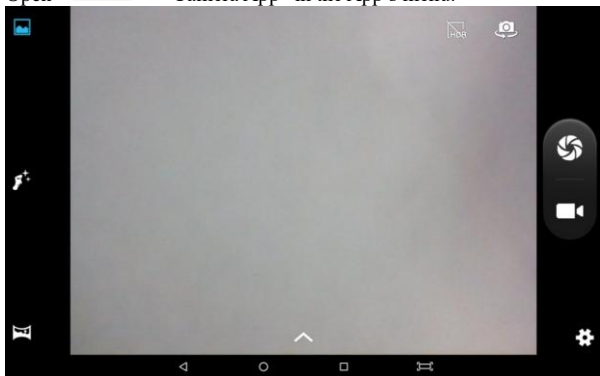

6.1 Camera

Click  to take picture.


6.2 Video

Click  to record video.

7. Connect with external device


7.1. Connect Micro USB to Computer PC

Connect your Android tablet to a PC computer with a micro USB cable. It will automatically recognize it as an MTP (Media Transfer Protocol) device. Auto play windows come up. Your PC will show two disk drives after connected successfully. One is the (SD) card, and the other is the built-in flash.

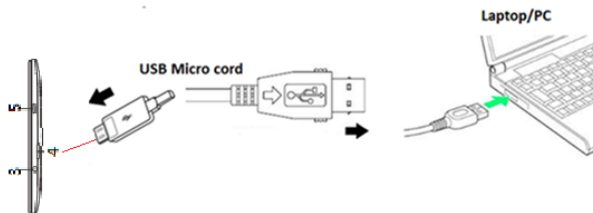


8. Explorer App

Connect a Micro SD card chip to android tablet SD card slot. It will auto detect. You can open the Explorer App to see your files folders from your SD card and also from your internal drive.

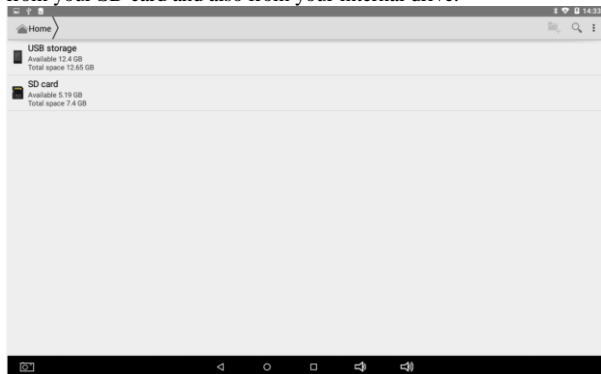

9. Applications


For convenient usage, we installed some third party App software. For detailed App operation methods, please check with the Developer's website for details or app instruction. Some of the Apps software may require Wi-Fi access.

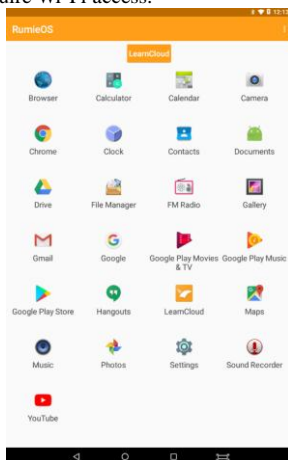

10. Voice recorder





Click “Sound Recorder” Sound Recorder in the main menu to recorder voice

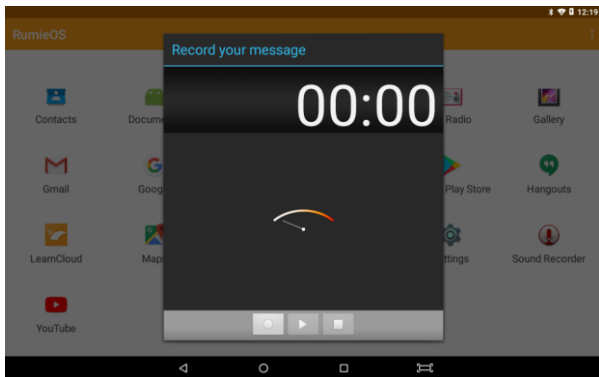

11. Add Google Account

Select “Accounts” in the setting interface, then add your accounts according to the steps.

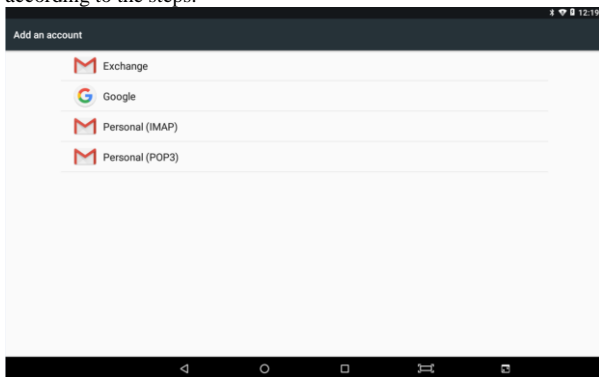

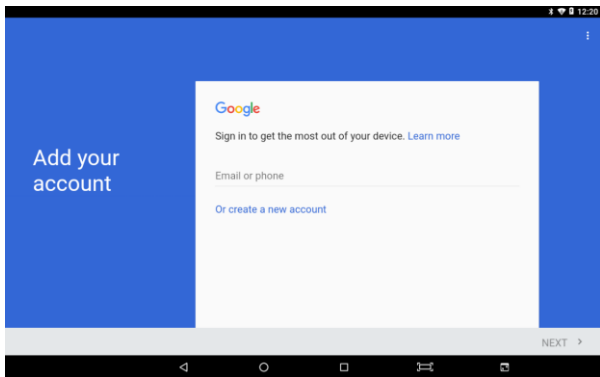

IV. Troubleshooting

1. What if the device is abnormal during operation?

Answer: 1) Reboot the device to see if it works OK.

2) Charge the device by the charger to activate the battery. Make sure it has power before you operate it.

3) It is suggested to upgrade the OS of the device by professional.

2. Why the standby time is so short sometimes?

Answer: the use time of the battery is all depending on the temperature and use distance. If the temperature is too high or too low, the use time of the battery might be effected. It is suggest using the device in normal temperature. The using time is also affected by increased volume and frequent operation.

VI. Specifications

Item	RT-1708
Display	800X1280
Touch panel	Capacitive touch screen
OS	Android 7.0
Input method	Soft keypad
Capacity	32GB
External Capacity	Support TF-CARD
Video	AAC, FLAC, MP3, OGG,WAV,etc.....
Audio	3GP,MP4,MPG,AVI,etc.....

E-book	Support
Wireless network	Support WIFI
Language	Multi-language
OTG	Support
Temperature	-20 °C to 60°C
Power supply	AC 100~240V 50/60 Hz; DC 5V/1.5A
Battery	poly-lithium battery 3500MAH

MEANING OF THE DUSTBIN SYMBOL



Protect our environment: do not dispose of electrical equipment in your domestic waste. Please return any electrical equipment that you will no longer use to the collection points provided for their disposal. These simple steps can help to avoid the potential effects that incorrect waste disposal can cause on the environment and human health. This will contribute to recycling and other forms of re-use of electrical and electronic equipment. Information concerning where the equipment can be disposed of can be obtained from your local authorities.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.