

## Erasing Programmed HomeLink® Buttons

Individual buttons cannot be erased, however, to erase the three programmed buttons:

- \* Press and hold the two outside buttons until the indicator light begins to flash – after 20 seconds. Release both buttons. Do not hold for longer than 30 seconds.

HomeLink is now in the train (or learning) mode and can be programmed at any time beginning with step two in the "Programming" portion of this text.

## Accessories



If you would like additional information on the HomeLink® Universal Transceiver, HomeLink compatible products, or to purchase other accessories such as the HomeLink® Lighting Package, please contact HomeLink at 1-800-355-3515 or on the Internet at [www.homelink.com](http://www.homelink.com).

This device complies with FCC rules part 15. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference that may be received including interference that may cause undesired operation. **WARNING:** The transmitter has been tested and complies with FCC and DOC/MDC rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

DOC: ISTC 1763 102 264

Prince MODEL/FCC ID: CB2V94800

HomeLink® is a registered trademark owned by Johnson Controls, Inc.

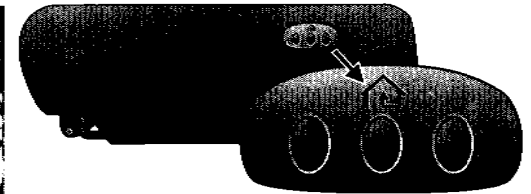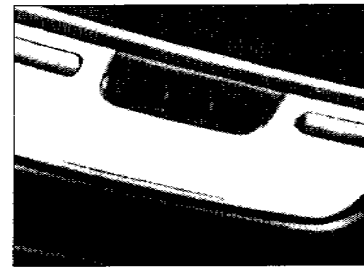

Before programming refer to **PRECAUTIONS** section.

## Programming

Note: Some vehicles may require the ignition switch to be turned to the second (or "accessory") position for programming and/or operation of HomeLink. It is also recommended that a new battery be replaced in the hand-held transmitter of the device being programmed to HomeLink for quicker training and accurate transmission of the radio-frequency.

1. Press and hold the two outside buttons releasing only when the indicator light begins to flash after 20 seconds. (Do not perform this step to train additional hand-held transmitters.)
2. Hold the end of the hand-held transmitter of the device you wish to train approximately 1 to 3 inches away from the HomeLink surface - keeping the indicator light in view. (For placement questions, please contact HomeLink at 1-800-355-3515 or on the Internet at [www.homelink.com](http://www.homelink.com).)
3. Using both hands, simultaneously push the hand-held transmitter button and the desired HomeLink button. Do not release the buttons until step 4 has been completed.

Note: Some gate operators and garage door openers may require you to replace step #3 with the "cycling" procedure noted in the "Canadian Programming" section of this document.

4. The HomeLink indicator light will flash, first slowly and then rapidly. When the indicator light flashes rapidly, both buttons may be released. (The rapid flashing light indicates successful programming of the new frequency signal.)

Note: Additional programming may be required for rolling code equipped devices. See "Rolling Code Programming" noted on the following page.

To program the remaining two buttons, follow steps 2 through 4.

Call toll-free for customer assistance at 1-800-355-3515 or on the Internet at [www.homelink.com](http://www.homelink.com).

## Precautions!

When programming the HomeLink Universal Transceiver, you may be operating a garage door or gate operator. Make sure that people and objects are out of the way of the moving door or gate to prevent potential harm or damage.

Do not use the HomeLink Universal Transceiver with any garage door opener that lacks the safety stop and reverse feature as required by federal safety standards. (This includes any garage door opener model manufactured before April 1, 1982.) A garage door opener which cannot detect an object, signaling the door to stop and reverse, does not meet current federal safety standards. Using a garage door opener without these features increases risk of serious injury or death. For more information, call 1-800-355-3515 or on the Internet at [www.homelink.com](http://www.homelink.com).

Retain the original transmitter for future programming procedures (i.e., new vehicle purchase). It is also suggested that upon the sale of the vehicle, the programmed HomeLink Universal Transceiver buttons be erased for security purposes (follow step 1 in the "Programming" portion of this text)

To operate, simply press the programmed HomeLink button. Activation will occur for the trained product (garage door, security system, entry door lock, gate operator, or home or office lighting). For convenience, the hand-held transmitter of the device may also be used at any time.

## Rolling Code Programming

To program a garage door opener (or other rolling code equipped device) with the rolling code feature, follow these instructions after completing the "Programming" portion of this text. A second person may make the following training procedures quicker & easier.

1. Locate the "learn" or "smart" button on the device's motor head unit. Exact location and color of the button may vary by manufacturer. If there is difficulty locating the "learn" or "smart" button, reference the device's owner's manual or contact HomeLink at 1-800-355-3515 or on the Internet at [www.homelink.com](http://www.homelink.com).
2. Press and release the "learn" or "smart" button on the device's motor head unit.

Note: Following step 2, there are 30 seconds in which to initiate step 3.

3. Firmly press and release the programmed HomeLink button. Press and release the HomeLink button a second time to complete the training process. (Some devices may require you to press the HomeLink button a third time to complete the training.)

The rolling code equipped device should now recognize the HomeLink signal and activate when the HomeLink button is pressed. The remaining two buttons may now be programmed if this has not previously been done. Refer to the "Programming" portion of this text.

Once programmed, the HomeLink Universal Transceiver or the original hand-held transmitter may be used to activate the device (e.g. garage door, entry door lock, etc.). In the event that there are still programming difficulties, contact HomeLink at 1-800-355-3515 or on the Internet at [www.homelink.com](http://www.homelink.com).

## Gate Operator Programming & Canadian Programming

If programming a garage door opener or gate, it is advised to unplug the device during the "cycling" process to prevent possible motor burn-up.

During programming, your hand-held transmitter may automatically stop transmitting. Continue to press and hold the HomeLink button (note steps 2 through 4 in the "Programming" portion of this text) while you press and re-press ("cycle") your hand-held transmitter every two seconds until the frequency signal has been learned. The indicator light will flash slowly and then rapidly after several seconds upon successful training. If necessary, follow the procedures referenced in "Rolling Code Programming" to complete the training.

## Reprogramming a Single HomeLink® Button

To program a device to HomeLink using a HomeLink button previously trained, follow these steps:

1. Press and hold the desired HomeLink button. Do NOT release until step 4 has been completed.
2. When the indicator light begins to flash slowly (after 20 seconds), position the hand-held transmitter 1 to 3 inches away from the HomeLink surface.
3. Press and hold the hand-held transmitter button (or press and "cycle" – as described in "Canadian Programming").
4. The HomeLink indicator light will flash, first slowly and then rapidly. When the indicator light begins to flash rapidly, release both buttons.

The previous device has now been erased and the new device can be activated by pushing the HomeLink button that has just been programmed. However, it may be necessary to follow the procedures in "Rolling Code Programming" to complete the training. This procedure will not affect any other HomeLink programming.