

USING YOUR LEGO® WALKIE-TALKIE


POWER SUPPLY

Your new LEGO® Walkie-Talkies use 4 AAA batteries for each unit. Only use batteries specified by the manufacturer. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

To install the batteries:

You will need an adult to help you install the batteries. Using a small philips' head screwdriver, remove the battery door and set it aside. Insert the batteries, following the polarity markers, then replace the battery door and screw it back into place.

WALKIE-TALKIE COMPONENTS

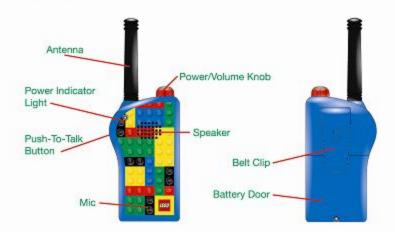

TALKING AND LISTENING

To turn the Walkie-Talkie on, turn the Power/Volume knob control clockwise. The Power Indicator Light will turn on.

To turn the Walkie-Talkie off, turn the Power/Volume knob control counter-clockwise until you hear a click. The Power Indicator Light will turn off.

To talk to the other Walkie-Talkie, press and hold the Press-To-Talk button and speak into the Mic. To hear a reply, let go of the Push-To-Talk button and listen to the Speaker.

CONTENTS:

2 Walkie-Talkies

REQUIRES:

4 AAA batteries per Walkie-Talkie (Not Included)



HELPFUL HINTS

Use the Belt Clip to keep the Walkie-Talkie securely on your belt or pocket.

To get the best reception, keep the Antenna vertical when talking to listening to your Walkie-Talkie.

NEED ADDITIONAL HELP?

Please visit www.digiblue.com for additional support, and select Customer Service. If you are still having problems with the product, contact Customer Service at 888-800-0502 Monday-Friday from 9am-6pm CST.

Notice: The FRS service is only applied to the device.

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.

The equipment compliance with FCC radiation exposure limit set forth for uncontrolled environment.

This transmitter must be operated in push-to-talk mode with a duty factor not exceeding 50%. The antenna used for this transmitter must be kept and provided a separation distance of at least 2.5 cm from all persons. End users must be provided with transmitter operating of the face-held for satisfying RF Exposure compliance.