

***iTrak***  
by *Encore Technology*

*Instruction Manual*

BLUETOOTH  
SPEAKER SYSTEM






Model: BT111GB

Read these instructions carefully before use

## Safety instructions

- Please avoid placing the unit in places with high humidity, high temperature, grease, contamination, etc. Please do not place the unit in direct sunlight or rain. Avoid dropping the unit.
- When the unit gets dirty on the surface, please clean with damp cloth. Do not use any organic solvents, paint thinner or abrasive cleaners.
- Never privately disassemble, repair or modify unit. Contact our service center for repair information

## LOCATION OF CONTROLS

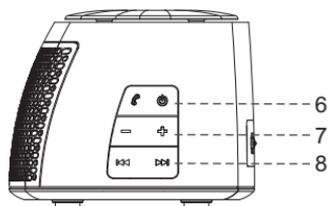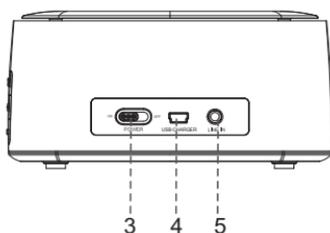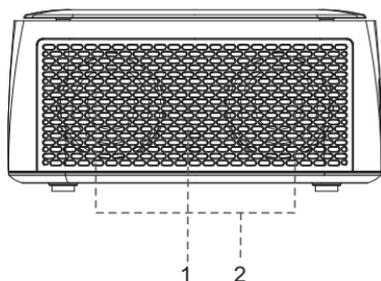

1. Indicators
2. Speakers
3. Power ON/OFF switch
4. USB Charger: USB cable only for charging
5. Line in jack
6. Hands-off/Power button
7. Volume+- button
8. ◀◀ / ▶▶ Previous/Next button

## Bluetooth Connection

1. Connect the Bluetooth speaker via USB cord (included).
2. Move the Power On/Off button on the rear of the unit to On position. The red indicator light will come on.
3. Press the Power Button on the right side of the unit to turn on the unit. The blue indicator light will turn on and flash. Press and hold Power Button to turn the unit to Standby mode. During playback, press Power Button to pause and press again to resume the playback.  
When the unit is powered on the Bluetooth indicator blue light will turn on and flash and the unit will enter Bluetooth mode.
4. Allow your cell phone to enter the Bluetooth connection mode. During searching, the blue Bluetooth indicator will keep flashing. When searching is completed, select BT111 as the target equipment.  
When connected, the Bluetooth indicator blue light will stay lit.
5. Press **⏮** to skip to the previous track. Press **⏭** to skip to the next track.
6. Press **+** button to increase the volume. Press **-** button to decrease the volume.
7. The built-in Mic of this unit enables hands-free function in Bluetooth mode.  
When the call comes in press Hands-free button to answer the call.  
Press Hands-free button again to hang up.  
Press Hands-free button to redial the last outgoing call.

## Line in connection

1. Connect an audio connection cable with 3.5mm stereo plug (not included) to the line in jack on the rear of the unit.
2. Connect the other end to the audio out jack/ phone jack on the MP3 or other external device.
3. Turn on the external device and press Play button to start playing the music.
4. Press **+** button to increase the volume. Press **-** button to decrease the volume.

## Battery Charging

The unit provides a built-in 3.7V 1000mAh Lithium battery. The standard voltage is 3.7V. The maximum voltage is 4.2V.

1. The minimum working voltage of the unit is 3.5V. When the battery voltage is under 3.5V, the red indicator will stay lit to indicate the low voltage status and the battery needs to be recharged.
2. Connect one end of the USB charging cable (included) to the DC in jack on the rear of the unit. Connect the other end to your PC. Or you can connect the other end to a 5V AC/DC adapter (not included) to power and charge the unit. Then the green indicator will stay lit to indicate that the battery is in charging status.
3. When the voltage reaches the Maximum voltage 4.2V, the green indicator will turn off to indicate that the charging process is completed.

## SPECIFICATIONS

Bluetooth technology	-----	2.0+EDR
RMS Output	-----	2x 2W
Effective distance of Bluetooth	-----	approximately 33 feet
Speaker impedance	-----	4 Ohm 3Wx2
Playback time	-----	approximately 3 hours (With volume set to ½ of Maximum volume)

## ACCESSORIES

User Manual	-----	1PC
USB charging cable	-----	1PC

## TROUBLE SHOOTING GUIDE

<b>Check the followings before requesting service:</b>		
<b>SYMPTOM</b>	<b>POSSIBLE CAUSE</b>	<b>POSSIBLE SOLUTION</b>
No power	The built-in battery runs out	Recharge the battery
	Power switch is in OFF position	Move the power switch on the rear of the unit to ON position
	Power button on the unit not pressed	Press the POWER button on the right side of the unit to turn on the unit
No sound	Volume in minimum position of the unit	Raise volume by pressing the VOL+ button
	The connected device is not in playback mode	Play the music in the connected device
	Sound output of the connected device weak	Raise the volume level of the connected device
	Input source incorrect	Set input source as Line-in or Bluetooth mode
Bluetooth reception failure	Not in Bluetooth mode	Set to Bluetooth mode and the blue indicator will turn on
	Line in cable in the Line in jack	Disconnect the line in cable
Hands free not working	Not in Bluetooth mode	Set as Bluetooth mode(Hands free function is only available in Bluetooth mode)

# LIMITED WARRANTY



## 3-YEAR LIMITED WARRANTY

ELECTRO BRAND INC. (EBINC) warrants to the original consumer of this Encore Technology product that it will furnish a replacement for, or, at its sole option, repair any part which proves (upon inspection by EBINC) to be defective under normal use within 3 years of the original purchase date.

This warranty does not apply to appearance items, including, but not limited to, antennas, knobs, cabinets or cases, and in the case of batteries, for damage caused by leaking batteries. It also does not apply to the product, or to any part thereof, that has been damaged through misuse or negligence.

Furthermore, this warranty will become invalid if, in the judgment of EBINC the product or any part thereof has been installed incorrectly, repaired or altered by other than EBINC Warranty Service Department.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

**For Service, Warranty, or Product Information,  
Please contact the Electro Brand, Inc.,  
Customer Service Department at:**

**1-800-982-3954, Ext. 117**

between the hours of 8:00 a.m. and 4:00 p.m. Central Standard Time  
Monday through Friday.

PLEASE SAVE THIS CARD TOGETHER WITH ORIGINAL DATED PROOF OF PURCHASE  
FOR YOUR RECORDS AND FOR CUSTOMER SERVICE.

Date purchased \_\_\_\_\_ Model number \_\_\_\_\_

**FCC Statement**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.