 






DUAL PORTABLE WIRELESS SPEAKERS

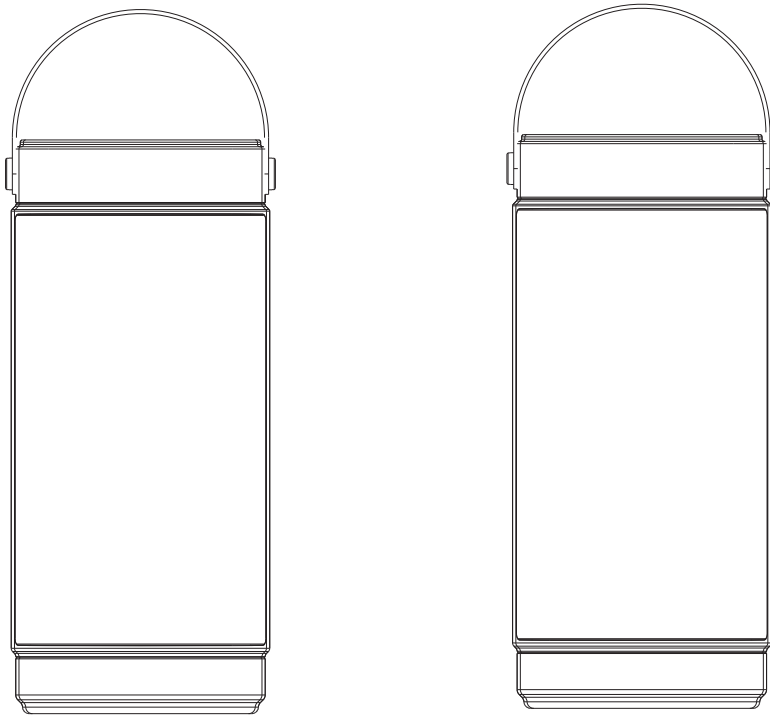

MODEL No.: ISBW2116B

PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT

  Important Safety Instructions

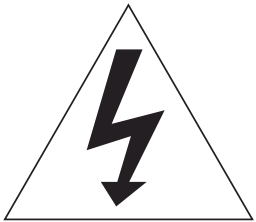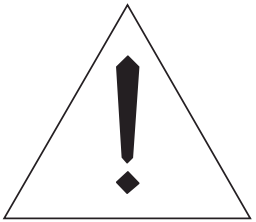	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.


WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

WARNING: USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD. This unit has a long cord that can be easily tripped on or pulled on, causing injury. Please make sure it is arranged so that it will not drape over a tabletop, etc., where it can be pulled on by children or tripped over accidentally.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

 
Important Safety Instructions

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.


1. Read these instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Keep these instructions – The safety and operating instructions should be kept for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operation and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
6. Clean only with dry cloth – The appliance should be cleaned only as recommended by the manufacturer.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance should not be exposed to dripping or splashing water and no object filled with liquids such as vases should be placed on the apparatus.
16. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
17. Battery should not be exposed to excessive heat such as sunshine, fire, etc.
18. Replace remote control battery only with the same or equivalent type.
19. Do not attempt to dismantle, open or repair this product yourself. If a problem occurs, seek advice from your local qualified service technician or contact the distributor at the telephone number at the back of this instruction manual.
20. Caution marking and nameplate are located on back or bottom of product.

PRODUCT OVERVIEW


TOP VIEW

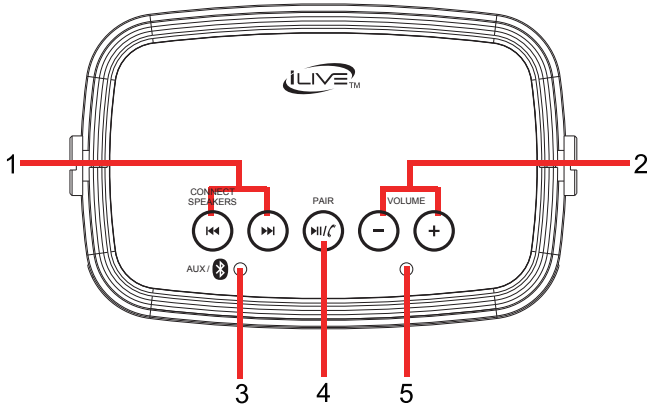

REAR VIEW

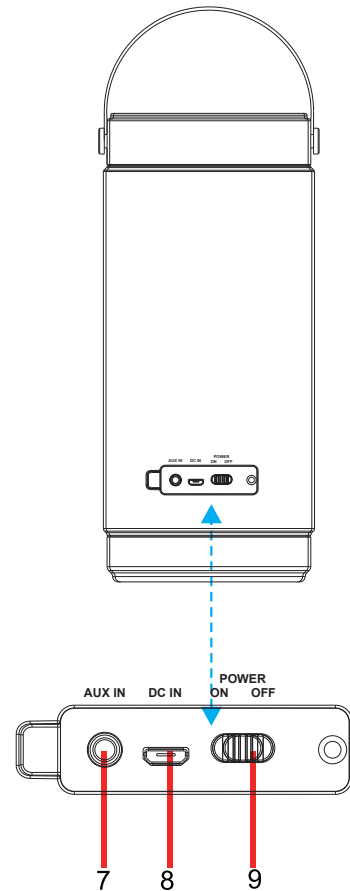 

FRONT VIEW

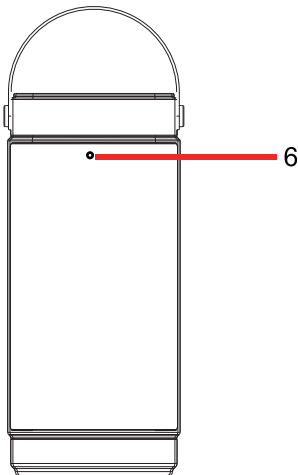 

1. ◀◀ / ▶▶ (Previous/Next) Button
2. Volume Down/Volume Up Button
3. Bluetooth(Blue)/AUX IN(Green) Indicator
4. ▶||/⏸ (Play/Pause/Handsfree/Pair) Button

5. Charging(RED)/Pairing(Yellow) Indicator
6. Built-in Microphone
7. AUX IN Jack
8. DC IN Jack
9. Power On/Off Switch

BATTERY CHARGING

1. Connect the micro-USB plug into the DC IN jack on the unit.
2. Connect the USB plug into a USB port on a computer or a DC 5V USB power supply device.

NOTE:

During charging, the indicator light on the unit will turn red. Once the unit is fully charged, the indicator light will turn off.

AUX IN OPERATION

1. Connect the Headphone/Earphone; Aux out jack or Line out jack from the external audio player (such as MP3 player; Discman...etc) to the AUX IN jack on the rear panel of the unit by the supplied Audio Connection Cable as the figure below:



2. Push the power switch to "ON" position to power on the unit.
3. Power on the connected external player and start playback as usual.

BLUETOOTH PAIRING AND CONNECTION

NOTE:

- Before pairing, make sure the AUX IN cable is not plugged into the AUX IN jack.
- If the two units were connected and paired before, the two units will connect and pair with each other automatically.

FIRST TIME PAIRING

1. Switch on the two units.
2. Press the **⏮** button on one unit, then press the **⏮** button on another unit, wait until they send a piece of chime, now the two units connect with each other.
3. Open the bluetooth on external bluetooth enabled device to search the two units, the pairing name "ISBW2116" will appear, select it and make connection. After successful connection with one of the two units, the unit which send a sound will be the main unit.

NOTE: The unit on which the blue indicator stay lit is main unit, the unit on which the blue indicator flash is deputy unit.

4. Play music on external bluetooth enabled device as usual.

During playing:

A: Touch **⏮** or **⏭** button to skip to previous or next track.

B: Touch **⏸/⏵** button to pause, touch again to resume playing.

C: Touch Volume + or - button to increase or decrease the volume.

The A, B, C operation above are simultaneous during playing.

For example, touch Volume + button on one of the two units, the volume on both units will increase.

Note:

During playing, if AUX IN cable plugged into the deputy unit, the deputy unit will disconnect with main unit. If AUX IN cable plugged out again, the deputy unit will reconnect with main unit.

During playing, if AUX IN cable plugged into the main unit, the main unit will disconnect with deputy unit and external bluetooth enabled device. If AUX IN cable plugged out again, the main unit will reconnect with external device and deputy unit.

PAIRING AFTER FIRST TIME PAIRING

1. Switch on the two units, wait until the two will pair and connect with each other automatically, they will send a piece of chime after successful connection.
2. Open the bluetooth on external bluetooth enabled device to search the two units, the pairing name "ISBW2116" will appear, select it and make connection. After successful connection with one of the two units, the unit on which blue indicator stay lit will be the main unit.
3. Play music on external bluetooth enabled device as usual.

BLUETOOTH PAIRING AND CONNECTION

DISCONNECTION / RE-CONNECTION

✳ Press and hold the ►||/📶 or ◀◀ button on main unit to disconnect with both deputy unit and the external bluetooth enabled device.

If using same external bluetooth enabled device to pair with the main unit again, select the "ISBW2116" of main unit again to connect with main unit again, then wait deputy unit automatically connect with the main unit.

✳ Press and hold the ►||/📶 button on deputy unit to disconnect with main unit, press and hold the ◀◀ button on deputy unit to reconnect with main unit.

✳ Press and hold the ◀◀ button on deputy unit to disconnect with main unit, wait a few seconds, the deputy unit will reconnect with main unit again.

SWITCHING MAIN UNIT

Press and hold the ◀◀ button on main unit, then press and hold the ►||/📶 button on deputy unit, wait until they reconnect again, the deputy unit will become the main unit.

NOTE:

The two units will enter standby mode without any audio output or operation after about 30 minutes. Please restart two units and make connection again for operation.

INCOMING CALLING DURING PLAYING IN BT MODE

An incoming call received during playback in bluetooth mode, works as follows:

- Touch " ►||/📶 " button on the main unit to answer the incoming call.
- Touch " ►||/📶 " button on the main unit again to end the call after conversation.
- Holding the " ►||/📶 " button on the main unit to refuse the call.
- Double press " ►||/📶 " button on the main unit to redial the last called number.



NOTE:

Secondary unit will not function when in calling mode.

TROUBLESHOOTING GUIDE

Check the followings before requesting service		
SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOULTION
No power	The power is consumed	Recharge the unit.
No sound	Volume in minimum position	Raise volume level by pressing the (Volume) + button.
	The paired/connected device is not in playback mode	Play music/movie in the paired/connected device as usual and make sure the volume level of it is in high level.
Sound distortion /rattle	Volume level too high	Reduce the volume level by pressing the (Volume) - button.
		Reduce the volume level of the paired/connected device.
Bluetooth reception failure	The external device is far from the unit	Put the external BT device close to the unit.
	Have not paired	Pair the unit with the BT Device as the procedures stated in this manual.

SPECIFICATION

Speaker output power.....	2X3W
Built-in battery.....	3.7V,1000mAh
Charging power.....	DC 5V  500mA 
Bluetooth working range.....	approximately 33 feet (10m)
Playing time.....	around 5 hours (with 50% volume)



Bluetooth[®] is a trademark on a registered trademark of Bluetooth SIG Inc. All other trademarks and trade names are those of their respective owners.

ACCESSORY

- 1 X Instruction manual
- 1 X Micro USB charging cable
- 1 X 3.5 mm AUX IN cable

Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.