



**CAB-92080**

**Tailgate Wireless Speaker System**



## **INSTRUCTION MANUAL**

**PLEASE READ ALL INSTRUCTIONS CAREFULLY AND  
RETAIN FOR FUTURE USE**

## **Getting Started**

- Remove the unit from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

## **Package Contents**

- Bluetooth portable speaker
- AC/DC power adapter
- Aux-in cable
- Instruction Manual

## **Product Features**

- Blast your music anywhere, anytime you want
- Powerful speaker system for iPhone, iPad, iPod, Android smart phones, MP3 players and other audio devices
- Streams music from any Bluetooth enabled devices
- Perfect for parties, BBQ's and more
- Microphone mic input x 2
- Built-in Aux jack
- Built-in rechargeable battery
- Speaker includes rugged wheels and telescoping handle


## **SAFETY INSTRUCTIONS**

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

## Description of Parts



## Location of Controls

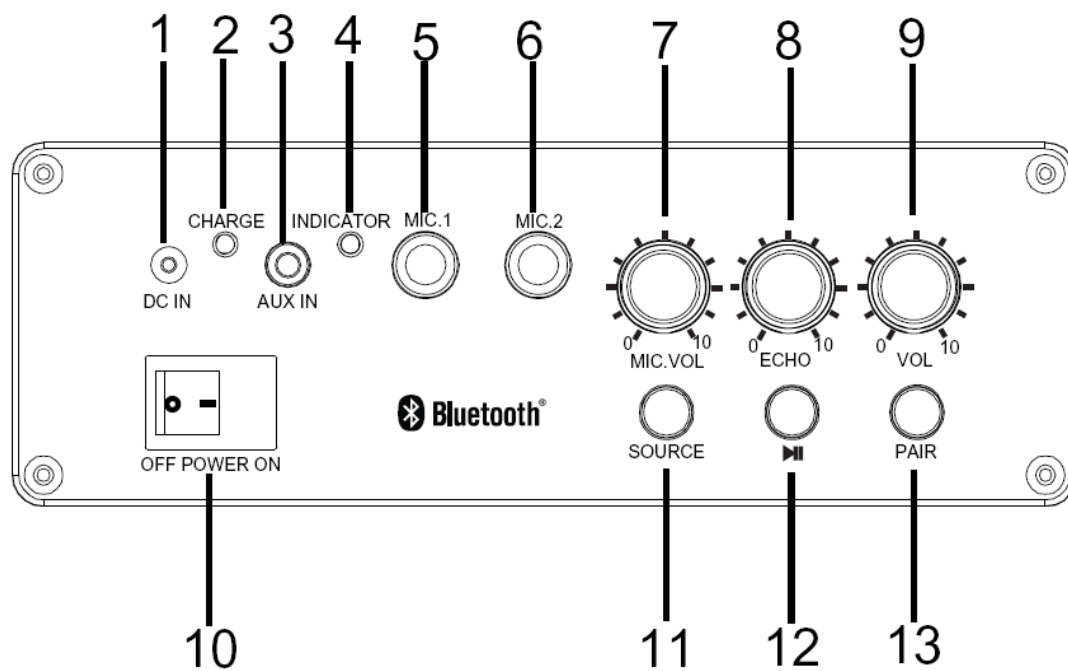

1	DC IN	8	ECHO
2	CHARGE INDICATOR	9	MAIN VOLUME
3	AUX IN	10	POWER ON/OFF SWITCH
4	LED INDICATOR	11	SOURCE BUTTON
5	MIC INPUT 1	12	PLAY/PAUSE BUTTON
6	MIC INPUT 2	13	PAIR BUTTON
7	MIC VOLUME		

## INSTRUCTIONS FOR USE

### Charging the Tailgate Bluetooth Speaker

For best results, fully charge the unit before use.

1. Connect the provided adapter to the DC IN of the speaker and plug the adapter to a wall port.
2. While charging, charge indicator turns RED in POWER ON mode, and it will turn ORANGE when fully charged.

Note: Before using the unit for the first time, please charge it for around 5 hours or until the charge indicator turns ORANGE.

### Turn on/off the Speaker

Press POWER ON/OFF SWITCH to ON position to turn on the speaker, or OFF position to turn off the speaker.

### Pairing your device with the Speaker –

Your **Bluetooth Tailgate Speaker** can stream wireless audio from any Bluetooth enabled device within the range of 27-33 Feet. Simply follow the below steps.

1. Turn on the speaker.
2. Blue LED light will begin to blink. The speaker is now in pairing mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for available Bluetooth devices.
5. Bluetooth Tailgate Speaker would appear as “**SL TAILGATE SPK**”, in the list of searched devices. Select it from the available list of devices.
6. If required, enter the password ‘0000’ to confirm pairing.
7. Once paired successfully, the Blue LED will stay on.
8. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favorite song on the Bluetooth source device and music would now stream through the

speaker.

### Listening to Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Turn MAIN VOLUME knob located on the control panel to adjust the volume to your desired level, or Adjust volume from the source device.
Pause	Playing music	Short press PLAY/PAUSE button once to pause music
Play	Pause	Short press PLAY/PAUSE button once to resume music

### Tips!!

1. Short press the SOURCE button to switch different functions of the speaker. The functions are – Bluetooth / AUX.
2. When the speaker is not in use, turn OFF the device to save the battery power.
3. Always use the adapter included with the pack to charge the internal battery of the speaker. Charging through unauthorized adaptor may damage the product, and will terminate all warranty privileges instantly.
4. Do not overcharge the speaker.

### Do's and Don'ts

- Do not play music at excessive levels as damage to hearing and/or equipment may result.
- Do not use outdoors in wet or in damp surroundings.

### Listening to Music using AUX-In

1. Turn on the speaker.
2. Plug the 3.5 mm Aux-in cable (included) into the AUX IN port of the speaker for AUX function. And, the other end of the cable to the audio device (such as computer / tablet / MP3 Player etc.).
3. Press the SOURCE button to AUX function until the LED Indicator shows purple.
4. Select your favorite song at the source device.

(**Note:** While using AUX IN function, functions such as play/pause can be controlled only through your source device).

### Using the Microphone

1. Turn on the speaker.
2. Insert the plug of the Microphone (not included) into the MIC INPUT 1 or 2 of the speaker.
3. Turn on the Microphone, and speak for microphone operation or sing for Karaoke operation.
4. Turn MIC VOLUME (and ECHO knob) to adjust the desired level (and echo output) respectively.

### Care and maintenance

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

### Product Specifications:

- Bluetooth version : 2.1 + EDR
- Speaker output : 10 Watts
- Unit size : 18.8" x 11.3" x 7.9"
- Unit weight : 17.9 lb
- Power supply : AC/DC adaptor (Input: AC 100-240V 50/60Hz 0.5A, Output: DC 9V 1300mA centre positive)
- Bluetooth range : 27 - 33 Feet
- Built-In Rechargeable Battery: Li-ion Battery 7.4V, 2000mAh

### TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC/DC adapter plug not connected to the wall outlet	Plug to the wall outlet.
No sound	Volume in minimum position. The connected device is not in play mode. Input source incorrect.	Turn MAIN VOLUME knob to increase the volume. Play the music in the connected device and make sure the volume level is in high level. Press the SOURCE button to set the input source to the desired function.
Sound distortion	Volume level too high	Turn MAIN VOLUME knob to decrease the volume.

## **FCC Instructions**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **Limited Warranty**

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is

effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.