


SYLVANIA

BLUETOOTH NEON LIGHT UP SPEAKER

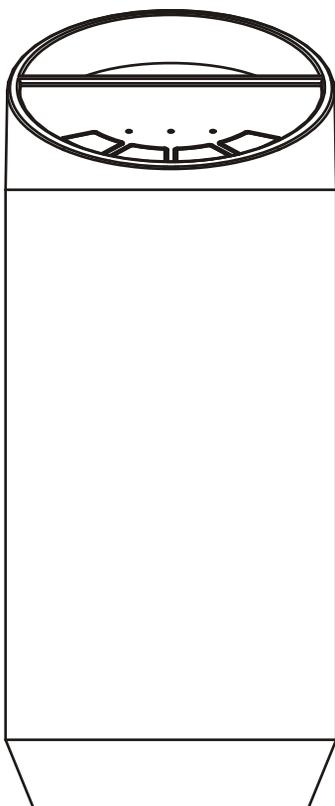

MODEL:SP606_PDQ-EO-PL

Please read this instruction manual carefully before using and keep it for future reference

SYLVANIA is a registered trademark of OSRAM SYLVANIA INC. Used under license.

Important Safety Instructions

 <p style="font-size: small; margin-top: 5px;">The lightning flash with arrowhead within an equilateral triangle is intended to alter the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> <p style="margin: 0;">CAUTION</p> <p style="margin: 0; background-color: black; color: white; padding: 2px;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> </div> <p style="font-size: x-small; margin-top: 5px;">TO PREVENT RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PROFESSIONAL</p>	 <p style="font-size: small; margin-top: 5px;">The exclamation point within an equilateral triangle is intended to alter the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
---	---	---

Before using the unit, be sure to read all operating instruction carefully, please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. Read these instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Keep these instructions –The safety and operating instructions should be kept for future reference.
3. Heed all warnings – All warnings on the appliance and in operating instructions should be adhered to.
4. Follow all instructions – All operation and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
6. Clean only with dry cloth – The appliance should be cleaned only as recommended by the manufacturer.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Product the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Industry Canada Conformity
CAN ICES-3 (B)/NMB-3(B)

FCC Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PRODUCT OVERVIEW


Top View

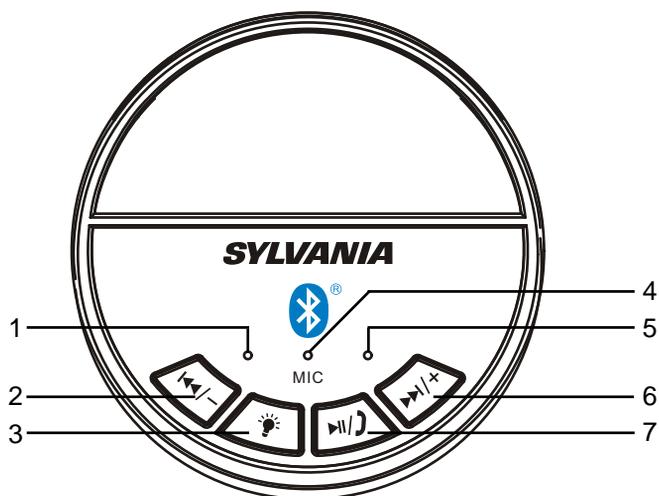

Front View

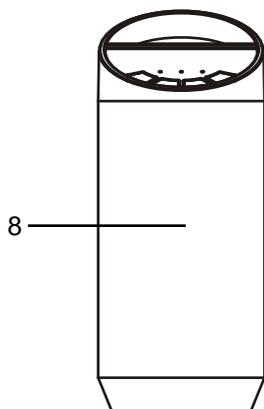

Rear View

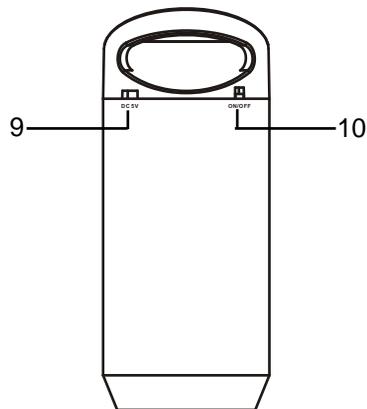

1. Charge Indicator
2. ◀◀/- (Previous/Volume Down)Button
3. 💡 LED ON/OFF Button
4. Microphone Hole
5. Bluetooth Indicator

6. ▶▶/+ (Next/Volume Up) Button
7. ▶||/▶ (Play/Pause/Handsfree) Button
8. Speakers and LED Lights
9. DC IN Jack
10. Power ON/OFF Switch

Charging

There will be a voice sounding "Low Battery" when the battery being out of power.

1. Before charging your speaker, slide the **ON-OFF** switch to the **OFF** position.
2. Insert the micro-USB end of the USB cable (supplied) into the DC 5V power socket on the speaker.
3. Slot the other end of the USB cable into either a USB port on a laptop, computer or USB mains plug adaptor.
4. The charging light on the the speaker will be red when the speaker is charging.
5. When the charging light turns off, the speaker is fully charged, and the USB cable can be removed.

NOTE: Please charge by 5V, 1A power supply.

PLAYING AUDIO VIA BLUETOOTH SOURCE

Selecting BT Mode

- Push the power switch to ON position to power on the unit, the Bluetooth indicator will turn Blue and blink, and there is a voice tone sounds "Bluetooth Mode", now the unit is in pairing mode.
 - ~ The unit will start searching for the device last connected, if the device is found, the unit will reconnect the device automatically.
 - ~ Please note, only one Bluetooth device can be connected to the unit at one time.
- Activate Bluetooth on your device (smart phone, tablet, computer, etc.).
- In the Bluetooth menu of your device, there should be an option to search for Bluetooth devices. Select this option.
 - ~ Your device will now scan for other Bluetooth device and should find the unit, identified as "**SYLVANIA SP606**".
- Choose to pair with "**SYLVANIA SP606**".
- After successful pairing, there will be a voice tone sounds "Bluetooth device connected". After pairing for the first time, the audio system will appear on the connection menu of your Bluetooth device.
- If you want to connect another Bluetooth device to the unit, deactivate the current connection by holding the **▶|/)** button for around 5 seconds. Follow the steps above to connect the new device.

During playback:

- Press the **▶|/)** button to change between Play and Pause mode at any time.
- Press **◀|/)** or **▶|/)** button to select the next or previous track.
- Press and hold **◀|/)** or **▶|/)** button to adjust volume.
- Press the **☀** button on the unit to turn on/off the LED lights.

Phone Call Function

- When a call comes in, press **▶|/)** button to answer.
- During a call, press the **▶|/)** button to end the call.
- Quickly press the **▶|/)** button twice to redial the last dialed number.
- When a phone call comes in, press and hold the **▶|/)** button to reject.

TROUBLESHOOTING GUIDE

If you are having problems with your unit, please review the guide below before requesting.

TROUBLE	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	The built-battery is out of power	Recharge the battery
No sound	Volume is set to minimum	Increase volume level
	The connected device is not in playing mode	Play the music from the connected device
	Sound output of the connected device is set too low	Increase the volume level of the connected device
Sound distortion	Volume level is too high	Reduce the volume level
	Volume level of the connected device is set too high	Reduce the volume level of the connected device
Bluetooth fail to pair	The external device is too far from the unit	Put the external BT device close to the unit.
	Fail pairing and connection	Pair the unit with BT device as the procedures stated in this manual.

SPECIFICATIONS

Power Source.....	5V	==	1A	⊖	⊕
Speaker.....	1X2W				
Bluetooth Working Range.....	up to 32ft(10m)				
Charging Time.....	around 1.5 hours				
Playing Time.....	around 5 hours(with 50% volume and front LED light off)				

Accessories

- Instruction Manual
- USB Cable

 **Bluetooth**® is a trademark on a registered trademark of Bluetooth SIG Inc.

For service assistance and product information, please call: 1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3
www.curtisint.com