

VICTROLA™

by *innovative* technology.



MUSIC CENTER

MODEL: JPB-17016

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USING
AND KEEP IT FOR FUTURE REFERENCE.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

- DO NOT REMOVE THE EXTERNAL CASES OR CABINETS TO EXPOSE THE ELECTRONICS. NO USER SERVICEABLE PARTS ARE WITHIN!
- USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION

The product shall not be exposed to dripping or splashing and no object filled with liquids, such as vases, shall be placed on the product.

Do not install this equipment in a confined space such as a book case or similar unit.



WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.
PRODUCT COMPLIES WITH DHHS RULE 23 CFR SUBCHAPTER J IN EFFECT AT DATE OF MANUFACTURE.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third

prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - Do not expose this apparatus to drips or splashes.
 - Do not place any objects filled with liquids, such as vases, on the apparatus.
 - Do not install this apparatus in a confined space such as a book case or similar unit.
 - The apparatus draws nominal non-operating power from the AC outlet with its POWER switch in the OFF position.



CALIFORNIA PROP 65 WARNING

"WARNING" This product contains chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on to the following website address:

<http://www.oehha.ca.gov/prop65.html>

TABLE OF CONTENTS

Before Using the Unit	1
Compact Discs	2
Vinyl Records.....	3
How to Replace the Stylus.....	4
How to Open/Close the Turntable Cover	5
Parts of the Turntable	5
Assembly Instructions	6
Unit Functions	7
Listening to the Radio	9
Listening to an Auxiliary Source	9
Listening to a Record	10
Listening through Bluetooth.....	12
Listening to a CD.....	13
Troubleshooting.....	15
Specifications	16

BEFORE USING THE UNIT

Read this before attempting any operations

- As the unit may become warm during operation, always leave sufficient space around the unit for ventilation.
- The voltage supplied to the unit should match the voltage as printed on the rear panel. If you are in any doubt regarding this matter, consult an electrician.
- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- Do not place the unit on an amplifier/receiver.
- Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the unit, contact your dealer or service company.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank the cord.
- To keep the laser pickup clean do not touch it and always close the disc tray.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Keep this manual in a safe place for future reference.

DO NOT MOVE THE UNIT DURING PLAYBACK

During playback, the disc rotates at high speed. DO NOT lift or move the unit during playback. Doing so may damage the disc or the unit.

 
WHEN MOVING THIS UNIT

When changing the unit's location, or packing the unit for moving, be sure to remove the record or disc. Moving this unit with the record or disc loaded may result in damage to this unit. If the unit is to be packed and moved a great distance, it is also advisable to tighten the turntable transport locking screw. See page 5 for instructions.

COMPACT DISCS

Discs which can be played on this unit:

- Conventional audio CD
- Properly finalized CD-R and CD-RW discs
- Always place the disc on the disc tray with the label side up. (Compact discs can be played or recorded only on one side.)
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges. Should the disc become dirty, wipe the surface radially (from the center hole outward towards the outer edge) with a soft, dry cloth.



How to remove the disc

 


How to hold the disc



How to clean the disc


- Never use such chemicals as record sprays, antistatic sprays or fluid, benzine or thinner to clean the discs. Such chemicals will do irreparable damage to the disc's plastic surface.
- Discs should be returned to their cases after use to avoid dust and scratches that could cause the laser pickup to "skip."
- Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the disc.
- Do not play any disc that is warped, deformed or damaged. Playing such discs may cause irreparable harm to the playing mechanisms.
- CD-R and CD-RW discs are more sensitive to the effects of heat and ultraviolet rays than ordinary CDs. It is important that they are not stored in a location where direct sunlight will fall on them, and away from sources of heat such as radiators or heat-generating electrical devices.
- Printable CD-R and CD-RW discs are not recommended, as the label side might be sticky and damage the unit.
- Do not stick papers or protective sheets on the discs and do not use any protective coating spray.
- Use a soft oil-based felt-tipped pen to write the information on the label side. Never use a ball-point or hard-tipped pen, as this may cause damage to the recorded side.
- Never use a stabilizer. Using commercially available CD stabilizers with this unit will damage the mechanisms and cause them to malfunction.
- Do not use CDs with an irregular shape (octagonal, heart shaped, business card size, etc.). CDs of this sort can damage the unit:



- If you are in any doubt as to the care and handling of a CD-R/CD-RW disc, read the precautions supplied with the disc, or contact the disc manufacturer directly.

VINYL RECORDS

 - Do not touch the record's grooves. Only handle records by edges or label. Make sure your hands are clean. Skin oils from even clean hands can leave a residue on the record surface that will gradually deteriorate the quality of your record.

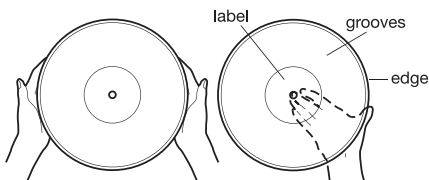

- Keep your records away from dust. Store in a cool, dry place.
- Keep records in sleeves and jackets when not in use to avoid dust and scratches.
- Store records upright on edges. Records stored horizontally will bend and warp.
- Do not expose records to direct sunlight or high humidity and temperature. Long exposure to high temperatures will warp records.
- Do not store records in the trunk of a car.
- Store records in an area with a stable temperature and low humidity.
- Should the record become dirty, gently wipe surface in a circular motion, using a soft anti-static cloth.



HOW TO REPLACE THE STYLUS

 
The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. Wear and tear on the stylus will be accelerated when playing 78 RPM records. The higher speed of 78 RPM records can wear the stylus more quickly.

Caution:

- Do not bend the stylus.
- To avoid injury, do not touch the needle.
- Turn off the unit's power before you replace the stylus.
- Keep out of the reach of children.
- Handle with care, as the stylus is delicate. Use of a bent or broken stylus may damage the record and cause the turntable to malfunction.
- Do not expose stylus to extreme heat.
- Contact a qualified repair company if you experience difficulty in changing the stylus.


Removing an Old Stylus

1. Set a screwdriver at the tip of the stylus and push down to the direction "A".
2. Pull the stylus out toward direction "B".

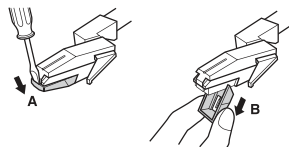

Installing a New Stylus

 1. Hold the tip of the stylus and insert the other edge by pressing toward direction "C".
2. Push the stylus up toward direction "D" until it locks at the tip.

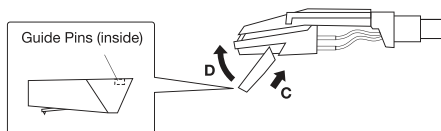


HOW TO OPEN/CLOSE THE TURNTABLE COVER

To Open:


1. Lift up the turntable cover all the way until it stops.
2. The cover will stay open on its own.

To Close:

 
1. Lower the turntable cover all the way until it stops.
2. The cover will now stay closed.
3. Make sure you don't pinch your fingers as it closes.

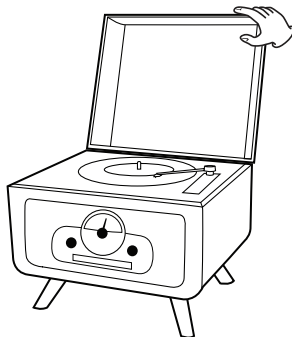

PARTS OF THE TURNTABLE

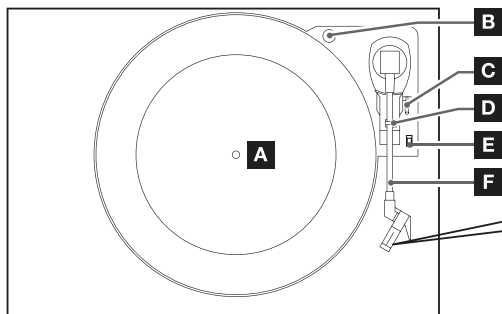 

 Before use, detach stylus guard (white plastic cover) by pulling it straight off the front of the cartridge in the direction of the arrow.

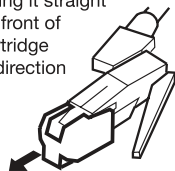

A TURNTABLE

B TRANSPORTATION SCREW

Before use, completely loosen the screw by turning it clockwise with a coin or screwdriver. When you transport the unit, turn the screw counter clockwise to secure the turntable.

C LIFT LEVER

Use this lever to lift the tone arm.

D TONE ARM HOLDER

 
E SPEED SELECTOR

F TONE ARM





ASSEMBLY INSTRUCTIONS - ATTACHING THE LEGS

Turn over the unit and place it onto a flat, smooth surface. Line up the drill holes on the plastic feet to the drill holes on the bottom of the unit. Using a Phillips Head screwdriver (not supplied) drive the supplied screws into the bottom of the unit all four feet are secure. When finished turn over the unit and make sure it stands firmly on a flat surface.


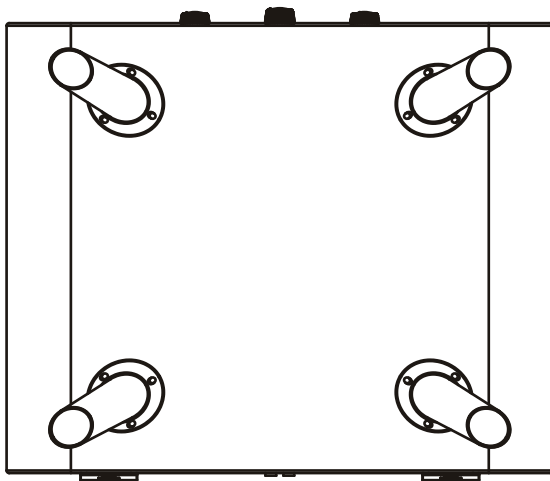


UNIT FUNCTIONS

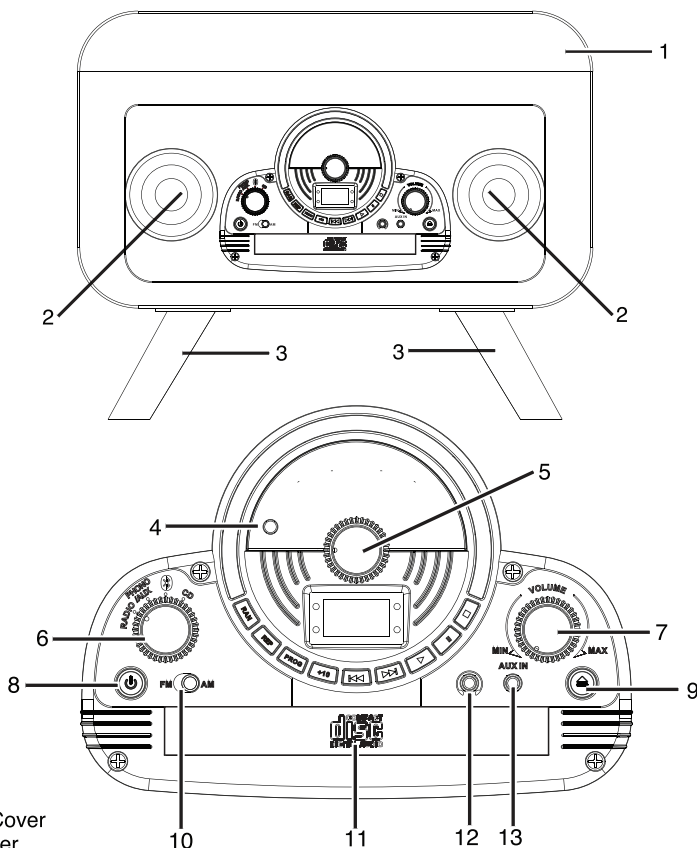 

1. Dust Cover
2. Speaker
3. Machine Feet
4. FM LED Indicator: In FM mode, the LED will light RED when a station signal is strong.
5. Tuning Knob: Turn the knob to tune in the FM/AM station while in Radio Mode.
6. Function Knob
 - Turn the knob to RADIO to listen to radio.
 - Turn the knob to PHONO/AUX to play through an audio device or a record.
 - Turn the knob to  to listen through Bluetooth.
 - Turn the knob to CD to play a CD.
7. Volume Knob: Turn to adjust volume.
8. Power Button: Press the button to turn "ON" or "OFF" the unit.
9. Open/Close Button: Press the button to open or close the disc tray.
10. FM/AM Button: Switch this button to select FM or AM mode.
11. Disc Tray
12. HEADPHONE Jack: Insert headphones to listen to music privately.
13. AUX IN Jack: When a device is plugged in, the record with stop playing and the Auxiliary device will become the primary function.

  UNIT FUNCTIONS

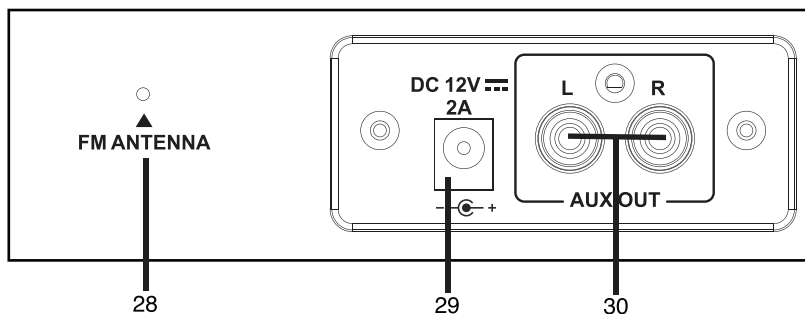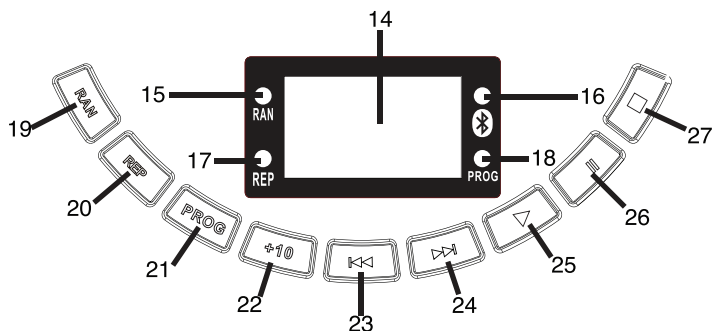


- 14. LCD Display
- 15. Random LED Indicator
- 16. Bluetooth LED Indicator
- 17. Repeat LED Indicator
- 18. Program LED Indicator
- 19. Random Button
- 20. Repeat Button
- 21. PROG (Program) Button

- 22. +10 button: Press to skip the next 10 tracks.
- 23. Previous (Skip Backward) Button
- 24. Next (Skip Forward) Button
- 25. Play Button
- 26. Pause Button
- 27. Stop Button
- 28. Antenna
- 29. DC IN Jack
- 30. AUX OUT Jack

LISTENING TO THE RADIO

 1. Turn the unit ON by pressing the POWER button.
2. Set the FUNCTION KNOB to the RADIO position.

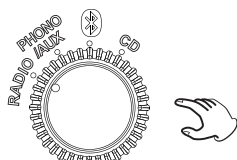

3. Select AM or FM using the band switch.



4. Turn the TUNING KNOB to tune to a station.
5. In FM mode, the LED Indicator will light RED when a station signal is strong.
6. Turn the VOLUME knob to adjust the volume.

 
If reception is poor:

- **AM broadcast**
Rotate the unit to find the best position for AM stations.
- **FM broadcast**
Extend and move the FM antenna until you receive the station clearly.

LISTENING TO AN AUXILIARY SOURCE


Playing via 3.5mm AUX-IN Jack on the Front of Unit:

1. Turn the unit ON by pressing the POWER button
2. Set the FUNCTION KNOB to the AUX position.
3. Connect the 3.5mm aux-in cable (included) into the 3.5mm AUX-IN Jack to play an external audio source, such as CD player, tablet, MP3 player, etc.

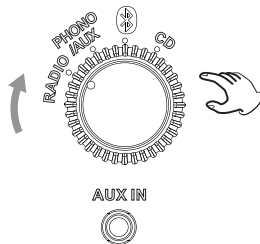


AUX OUT Jacks on the Back of Unit:

 You can connect a CD player, tablet, MP3 player, etc. to this unit. Connect the external source with an RCA component cable (not included). Make sure to connect the white plug to the white jack (left) and the red plug to the red jack (right).

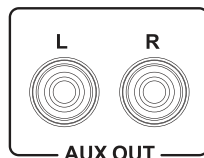


LISTENING TO A RECORD

 
1. Before use, completely loosen the TRANSPORTATION SCREW by turning it clockwise with a coin or screwdriver.
2. Detach the stylus guard (white plastic cover).
3. Turn the unit ON by pressing the POWER button.
4. Set the FUNCTION KNOB to the PHONO/AUX position.

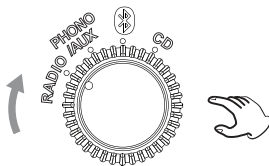

 
5. Gently open the dust cover.
6. Select the speed.



 7. Put the record on the turntable. When playing a 45 RPM record, use the included 45 adaptor.
8. Gently push the CLAMPER to the right to release the TONE ARM.

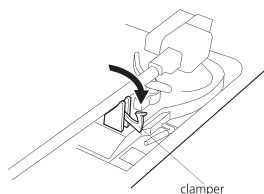


 9. Raise the LIFT LEVER to lift the TONE ARM off the tone arm support.

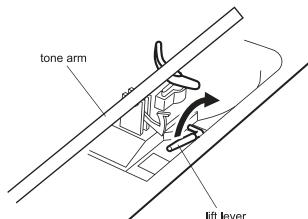


LISTENING TO A RECORD (CONTINUED)

 10. Move the TONE ARM gently to the edge of the record (or the starting point of a track). The turntable will begin to turn.

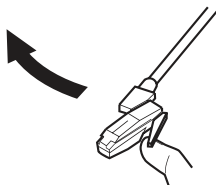


 11. Gently lower the TONE ARM by slowly releasing the LIFT LEVER. You can lower the TONE ARM manually if the LIFT LEVER has not been raised.

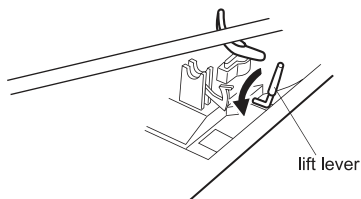


12. Turn the VOLUME KNOB to adjust the volume.

 
13. When playback has finished, slightly lift the tone arm using the LIFT LEVER and return it to the TONE ARM holder. The rotation stops.

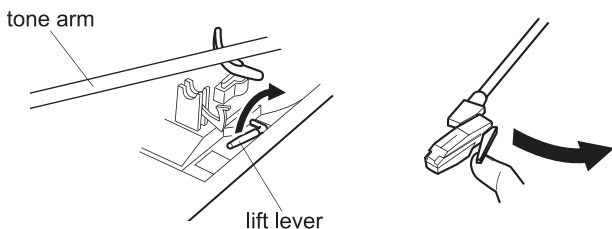

LISTENING THROUGH BLUETOOTH

NOTE: An external Bluetooth enabled device can be automatically connected with the unit after first time pairing.

 
1. Turn the unit ON by pressing the POWER button.
2. Set the FUNCTION KNOB to the  (Bluetooth) position.
The Bluetooth indicator will light up and “bt” will show on the LCD display.

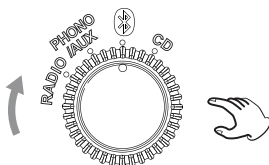


3. Ensure that the Bluetooth function is activated on your device (e.g. Mobile phone).
Set your external device to search to pair. The pairing name “**VTA-30**” will appear on your device’s selection list.
4. Select the “**VTA-30**” on your external device to pair. A sound will indicate after the unit is successfully paired and connected. *A password may be required to enter depending on the device manufacturer, model, and software version. if a password is asked, type “0000” and press enter.*
5. Begin to play music from your external device.
6. Turn the volume knob to adjust volume.

LISTENING TO A CD

 1. Turn the unit ON by pressing the POWER button.
2. Set the FUNCTION KNOB to CD. The word "Cd" will show on the display.

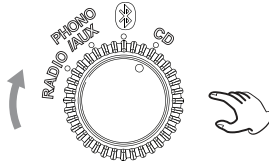

 3. Press the OPEN/CLOSE button (▲).
4. Place a disc on the tray with the printed label face up.

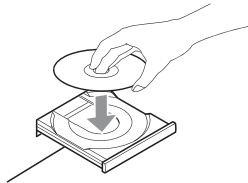

- Never place more than one disc on the tray.
 - The disc must be placed in the center of the disc tray. If the disc is not correctly loaded, it may not be possible to open the tray again once it has closed. To avoid this possibility you should be sure that the disc is always centered on the tray.
 - Do not force the tray by hand during opening and closing operations.
5. Press the OPEN/CLOSE button (▲) to close the tray.
 6. Turn the VOLUME KNOB to adjust the volume.

LISTENING TO A CD (CONTINUED)

To suspend playback temporarily (PAUSE mode)

- Press the PAUSE button (⏸) during playback. Playback stops at the current position.
- To resume playback, press the PLAY button (▶).

To STOP playback

- Press the STOP button (■) to stop playback.

To SKIP to the next or previous track

- Press the ► or ◀ button to skip to next or previous track.

SEARCH for a part of a track

- During playback, hold down ► or ◀ button and release it. when the part you want to listen to is found.

To SKIP the next 10 tracks

- Press + 10 button and release it.

RANDOM Function

Press RAN button and release it.

REPEAT Function

- Press the REP button once to repeat a single track.
- Press the REP button one more time to repeat all tracks.

PROGRAM Function

- In stop mode, press the PROG button, the display will show "P01". Press the ◀ or ► button to select your ideal track and press the PROG button again to save the track. If you want to save another track, repeat the above steps. This unit can program up to 20 tracks.
- To play the programmed track, press the PLAY (▶) button. Press the STOP(■) button to erase the programmed track.

TROUBLESHOOTING

If you experience any problems with the unit, please take a moment to look through this guide and see if you can solve the problem yourself before you call your dealer.

General

No power:

- Check the connection to the AC power source. Make sure the AC source is not a switched outlet and if it is, turn the switch on. Make sure there is power to the AC outlet by plugging another item such as a lamp or fan.

No sound:

- Adjust the volume.

The sound has interference:

- The unit is too close to a TV set or similar appliance. Relocate the unit further away from them, or turn the other appliances off.

Radio

Cannot listen to any station, or signal is too weak:

- Tune in the station properly.
- If a TV is near the unit, turn it off.
- Rotate the unit or antenna wire for the best reception position.

Record Player

Will not play:

- Turn the VOLUME KNOB clockwise.
- Loosen the screw and detach the stylus guard. The stylus guard is a white plastic cover that protects the stylus during transportation. Failing to remove this guard will not allow the needle to contact the grooves of the record and no sound will be heard!
- If the stylus is worn-out, change the stylus. Select the correct playback speed.

Sound skips:

- Place the unit on a stable surface to avoid vibration and shock. Make sure the unit is level both front to back and side to side.
- Clean the surface of the record/disc.
- Do not use scratched, damaged or warped records/discs.

CD Player

Will not play:

- Turn the VOLUME knob clockwise, and rotate the FUNCTION KNOB to "CD".
- Load a disc with the playback side facing down.
- If the disc is dirty, clean the surface of the disc.
- A blank disc has been loaded. Load a pre-recorded disc.
- Depending on the disc, it may not be possible to play back CD-R/CD-RW discs. Try again with another disc.
- You cannot play back unfinalized CD-R/CD-RW discs. Finalize and try again.

TROUBLESHOOTING (CONTINUED)

If normal operation cannot be obtained, unplug the power cord from the outlet and plug it again.

Beware of condensation

When the unit (or a record/disc) is moved from a cold to warm place, or used after a sudden temperature change, condensation may form; vapor in the air could condense on the internal mechanism, making correct operation erratic or impossible. To prevent this, or if this occurs, leave the unit turned off for one or two hours. The unit will stabilize at the temperature of its surroundings.

Maintenance

Always keep the turntable clean. If the surface of the unit gets dirty, wipe with a soft dry cloth or use a diluted mild liquid soap. Be sure to remove any excess liquid completely. Do not use thinner, benzine or alcohol as they may damage the surface of the unit. Allow the surface of the unit to dry completely before using.

SPECIFICATIONS

Amplifier Section

Output Power 2 x 5 W

Bluetooth Section

Working Range 32 feet

CD Player Section

Frequency Response 20Hz to 20,000Hz (\pm 1dB)

Tuner Section

Frequency Range (FM) 88MHz to 108.00MHz

Frequency Range (AM) 530kHz to 1710kHz

Record Player Section

Motor..... DC servo motor

Drive System Belt Drive

Speed 33-1/3 rpm, 45 rpm, 78 rpm

Stylus..... CSC-015

Speaker System Section

Unit..... 1-way

Impedance..... 8 ohms

General

Power Requirements.....	AC 120V/60Hz
Power Consumption.....	24W
Dimensions	(Assembled) L 425 x W 350 x H 331mm
Dimensions	(Unassembled) L 425 x W 350 x H 245mm

Standard Accessories

Owner's Manual
Turntable Operation Sheet
AC Power Adaptor
Aux-In Cable
45 RPM Adaptor
Plastic Legs (4x)
Assembly Screws (12x for Assembly, 2x Spare)

- **Design and specifications are subject to change without notice.**
- **Photos and illustrations may differ slightly from production models.**

Victrola is a registered trademark of Innovative Technology Electronics Corp.

Innovative Technology Electronics Corp. Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.ithomeproducts.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- **USD\$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD\$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- **USD\$16.00, for items \$100.00 and up. (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics Corp. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.ithomeproducts.com/support.

Innovative Technology Electronics Corp.

1 Channel Drive

Port Washington, NY 11050

Toll free: 1-877-483-2497

Website for support: www.ithomeproducts.com/support

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED/C Radiation Exposure Statement:

This equipment complies with ISED/C RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet appareil est

conforme aux limites d'exposition de rayonnement RF ISED/C établies pour un environnement non contrôlé. Ce émetteur ne doit pas être co-implanté ou fonctionner en conjonction avec toute autre antenne ou transmetteur.

This device complies with ISED/C licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED/C applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.