
6-IN-1 NOSTALGIC ENTERTAINMENT CENTER

Model:VTA-200B



Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USING AND KEEP IT FOR FUTURE REFERENCE.

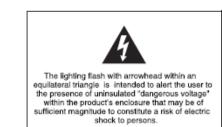





WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

 DO NOT REMOVE THE EXTERNAL CASES OR CABINETS TO EXPOSE THE ELECTRONICS. NO USER SERVICEABLE PARTS ARE WITHIN! USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS

RADIATION EXPOSURE.

CAUTION The product shall not be exposed to dripping or splashing and no object filled with liquids, such as vases, shall be placed on the product, Do not install this equipment in a confined space such as a book case or similar unit



WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam. PRODUCT COMPLIES WITH DHHS RULE 23 CFR SUBCHAPTER J IN EFFECT AT DATE OF MANUFACTURE,

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions. Keep these instructions.
- Heed all warnings. Follow all instructions.
- 5. Do not use this apparatus near water. 6. Clean only with a dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the
- manufacturer's instructions. 8. Do not install near any heat sources such as radiators, heat registers, stoves, or
- other apparatus (including amplifiers) that produce heat. 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type

plug has two blades and a third grounding prong. The wide blade or the third

Vinyl Records...... How to Replace the Stylus..... Connections How to Open/Close the Turntable Cover..... Parts of the Turntable5 Unit Functions Listening to a CD..... Listening to an Auxiliary Source......9 Listening to a Record Listening to the Radio11 Listening to a Cassette Tape..... Troubleshooting......14 & 15

prong are provided for your safety. If the provided plug does not fit into your

13. Unplug this apparatus during lightning storms or when unused for long periods of

apparatus has been damaged in any way, such as power-supply cord or plug is

damaged, liquid has been spilled or objects have fallen into the apparatus, the

apparatus has been exposed to rain or moisture, does not operate normally, or

· Do not place any objects filled with liquids, such as vases, on the apparatus.

The apparatus draws nominal non-operating power from the AC outlet with its

Do not install this apparatus in a confined space such as a book case or

"WARNING" This product contains chemicals known to the State of California to

TABLE OF CONTENTS

.....

cause birth defects or other reproductive harm. For more information on these

regulations and a list of chemicals, log on to the following website address:

Before Using the Unit.....

14. Refer all servicing to qualified service personnel. Servicing is required when the

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

12. Use only with the cart, stand, tripod, bracket, or table specified by the

manufacturer, or sold with the apparatus. When a cart is used, use

caution when moving the cart/apparatus combination to avoid injury

outlet, consult an electrician for replacement of the obsolete outlet.

11. Only use attachments/accessories specified by the manufacturer.

Do not expose this apparatus to drips or splashes.

POWER switch in the OFF position.

CALIFORNIA PROP 65 WARNING

http://www.oehha.ca.gov/prop65.html

Compact Discs......

from tip-over.

has been dropped.

BEFORE USING THE UNIT

- Read this before attempting any operations As the unit may become warm during operation, always leave sufficient space
- around the unit for ventilation. The voltage supplied to the unit should match the voltage as printed on the rear
- panel. If you are in any doubt regarding this matter, consult an electrician. Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and
- excessive dust, heat, cold or moisture.
- Do not place the unit on an amplifier/receiver. Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the unit, contact your dealer or service
- When removing the power plug from the wall outlet, always pull directly on the
- plug, never yank the cord. To keep the laser pickup clean do not touch it and always close the disc tray.
- · Do not attempt to clean the unit with chemical solvents as this might damage the
- finish. Use a clean, dry cloth. Keep this manual in a safe place for future reference.

WHEN MOVING THIS UNIT

- DO NOT MOVE THE UNIT DURING PLAYBACK
- During playback, the disc rotates at high speed. DO NOT lift or move the unit during playback. Doing so may damage the disc or the unit.

When changing the unit's location, or packing the unit for moving, be sure to remove

UNIT FUNCTIONS

\@@@@\

WISUJVNLMT

- the record or disc. Moving this unit with the record or disc loaded may result in direct sunlight will fall on them, and away from sources of heat such as radiators or damage to this unit. If the unit is to be packed and moved a great distance, it is also heat-generating electrical devices. advisable to tighten the turntable transport locking screw. Printable CD-R and CD-RW discs are not recommended, as the label side might See page 5 for instructions.
 - be sticky and damage the unit. Do not stick papers or protective sheets on the discs and do not use any protective coating spray. Use a soft oil-based felt-tipped pen to write the information on the label side.

Discs which can be played on this unit:

Properly finalized CD-R and CD-RW discs

be played or recorded only on one side.)

Conventional audio CD

with a soft, dry cloth.

plastic surface.

How to remove the disc

could cause the laser pickup to "skip."

- Never use a ball-point or hard-tipped pen, as this may cause damage to the
- Never use a stabilizer, Using commercially available CD stabilizers with this unit will damage the mechanisms and cause them to malfunction. Do not use CDs with an irregular shape (octagonal, heart shaped, business card

COMPACT DISCS

Always place the disc on the disc tray with the label side up. (Compact discs can

To remove a disc from its storage case, press down on the center of the case and

lift the disc out, holding it carefully by the edges. Should the disc become dirty,

wipe the surface radially (from the center hole outward towards the outer edge)

How to hold the disc

thinner to clean the discs. Such chemicals will do irreparable damage to the disc's

Never use such chemicals as record sprays, antistatic sprays or fluid, benzine or

Discs should be returned to their cases after use to avoid dust and scratches that

 Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the disc.

may cause irreparable harm to the playing mechanisms.

Do not play any disc that is warped, deformed or damaged. Playing such discs

· CD-R and CD-RW discs are more sensitive to the effects of heat and ultraviolet

rays than ordinary CDs. It is important that they are not stored in a location where



• If you are in any doubt as to the care and handling of a CD-R/CD-RW disc, read the precautions supplied with the disc, or contact the disc manufacturer directly.

LISTENING TO A CD

CASSETTE TAPES

Tape Selection: Metal and chrome (cobalt) tapes have identification holes.

Tape Handling: Use your finger or a pencil to turn the cassette tape's hub

and take up any slack tape. Avoid touching the tape. Fingerprints attract dust and dirt.

 Avoid dropping or subjecting cassettes to excessive shocks. · As C-120 tapes are physically weak and could become entangled in the transport

Do not store tapes in the following places:

- On top of heaters, exposed to direct sunlight or in any other places with high
- Near speakers, on TV sets or amplifiers or where they would be exposed to strong magnetic fields. Where humidity is high or in dirty, dusty places.


Head Maintenance

your record.

The head and tape path should be cleaned and demagnetized periodically. Please use a cassette type head cleaning tape and demagnetizer. For specific details on the proper use of either item, please read each item's instruction manual.

VINYL RECORDS

· Do not touch the record's grooves. Only handle records by edges or label, Make sure your hands are clean. Skin

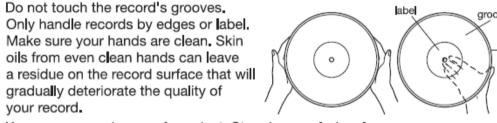

 Keep your records away from dust. Store in a cool, dry place. Keep records in sleeves and jackets when not in use to avoid dust and scratches. Store records upright on edges. Records stored horizontally will bend and warp. Do not expose records to direct sunlight or high humidity and temperature. Long exposure to high temperatures will warp records. Do not store records in the trunk of a car.

Store records in an area with a stable temperature and low humidity.

 Should the record become dirty, gently wipe surface in a circular motion, using a soft anti-static cloth.



HOW TO REPLACE THE STYLUS

The stylus should last about 50 hours under normal use. However, it is

recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. Wear and tear on the stylus will be accelerated when playing 78 RPM records. The higher speed of 78 RPM records can wear the stylus more quickly.

Caution:

 Do not bend the stylus. To avoid injury, do not touch the needle.

 Turn off the unit's power before you replace the stylus. Keep out of the reach of children.

 Handle with care, as the stylus is delicate. Use of a bent or broken stylus may damage the record and cause the turntable to malfunction.

 
 Do not expose stylus to extreme heat. · Contact a qualified repair company if you experience difficulty in changing the

Removing an Old Stylus

2. Push the stylus up toward direction


"D" until it locks at the tip.

1. Set a screwdriver at the tip of the stylus and push down to the direction "A".



CONNECTIONS

FM Antennae

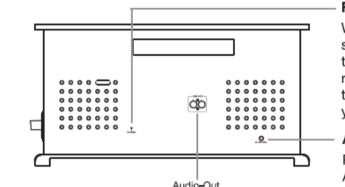


While in FM mode, tune in an FM station and extend the antennae to find a position for the best reception. This antenna may need to be repositioned if you move your unit to a new location.


AC Power Cord Plug the AC power cord into an AC wall socket.

HOW TO OPEN/CLOSE THE TURNTABLE COVER To Open:

 Lift the turntable cover all the way up until it stops. Lower the cover slowly until the latch engages. If the latch

  
To Close:






2. The latch should disengage and you may now slowly lower the cover. If the latch does not disengage, push out the lower bar by hand.



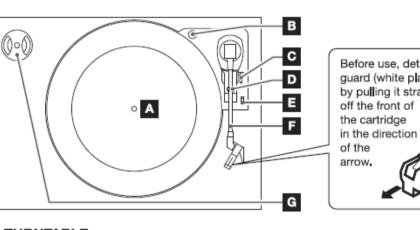

A TURNTABLE B TRANSPORTATION SCREW Before use, completely loosen the screw by turning it clockwise with a coin or screwdriver. When you transport the unit, turn the screw counter clockwise to secure the turntable.

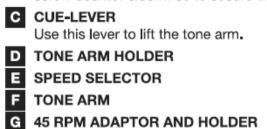

Before use, detach stylus guard (white plastic cover) by pu**ll**ing it straight off the front of the cartridge

K DISPLAY PANEL ■ VOLUME KNOB

3.5MM AUX-IN JACK O STOP Stop playback in CD mode. P PLAY/PAUSE Play/pause playback in CD mode. The play indicator lights during playback of CD. Q PROGRAM

S COMPACT DISC TRAY

R REPEAT

H SPEAKERS (STEREO)


AUX, FM or Bluetooth.

M OPEN/CLOSE CD TRAY

Rotate the knob to select PHONO, CD,

FUNCTION KNOB

J TUNING KNOB

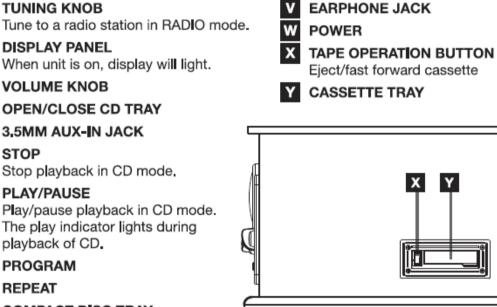

T MUSIC SKIP

U MODE SWITCH

Skip tracks in CD mode.

Select FM or Bluetooth mode.

1. Turn the unit ON by pressing the POWER button. 2. Set the FUNCTION KNOB to CD position.

"--" blinks for a few seconds. When no disc is loaded, "no" appears on the

Press the OPEN/CLOSE button (▲).

4. Place a disc on the tray with the printed label face up.



 Never place more than one disc on the tray. • The disc must be placed in the center of the disc tray. If the disc is not correctly loaded, it may not be possible to open the tray again once it has closed. To avoid this possibility you should be sure that the disc is always centered on the tray.

 Do not force the tray by hand during opening and closing operations. Press the OPEN/CLOSE button (▲) to close the tray. · Several seconds later, the total number of tracks will appear on the Track Number Display.

6. Press the PLAY/PAUSE button (►II) to start playback.

 Disc playback starts from the first track, and the PLAY indicator lights. During playback, the number of the track currently playing will appear in the

 If you load the disc, and then press the PLAY button without having first closed the disc tray, the disc tray closes and playback starts.

7. Turn the VOLUME KNOB to adjust the volume.

LISTENING TO BLUETOOTH

LISTENING TO A CD (CONTINUED)

To suspend playback temporarily (PAUSE mode) • Press the PLAY/PAUSE button (►II) during playback. Playback stops at the current position, and the track number blinks in the display.

To resume playback, press the PLAY/PAUSE button (►II) again.

To STOP playback Press the STOP button (■) to stop playback.

To SKIP to the next or previous track During playback, repeatedly press the MUSIC SKIP button (◄ or ►) until the

desired track is found. The selected track will be played from the beginning. • In STOP mode, press the MUSIC SKIP button (I or ▶) repeatedly until the track you want to listen to is found. Press the PLAY/PAUSE button (►II) within 5 seconds to start playback from the selected track.

button twice.

During playback, hold down the MUSIC SKIP button (I◄ or ►►) and release it

wnen the part you want to listen to is found.

· Press the REPEAT button once to repeat a single track.

PROGRAM Function

automatically be erased.

• Press

or

to select a track and press the PROGRAM button again to save

Press the PROGRAM button. The display will show "01"

To playback the programmed tracks, press PLAY/PAUSE.

SEARCH for a part of a track

REPEAT Function

· Press the REPEAT button one more time to repeat all tracks.

Press

or

to select another track and press the PROGRAM button again.

Repeat this step to continue saving tracks. This unit can program 20 tracks.

To erase the programmed track, turn the unit OFF. The programmed tracks will

from the beginning. To return to the beginning of the previous track, press the ◄

2. Set the FUNCTION KNOB to the AUX position. 3. Connect the 3.5mm aux-in cable (included) into the 3.5mm AUX-IN Jack to play an external audio source, such as CD player, tablet, MP3 player, etc.


LINE-OUT Jacks on the Back of Unit: You can connect a CD player, DVD player, DVR, TV, etc. to this

cable (NOT included). Make sure to connect the white plug

to white jack (left) and the red plug to the red jack (right).

Playing via 3.5mm AUX-IN Jack on the Front of Unit:


Turn the unit ON by pressing the POWER button

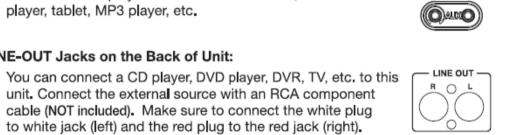


LISTENING TO A RECORD 1. Before use, completely loosen the TRANSPORTATION SCREW by turning it

LISTENING TO AN AUXILIARY SOURCE


clockwise with a coin or screwdriver. Detach the stylus guard (white plastic cover).

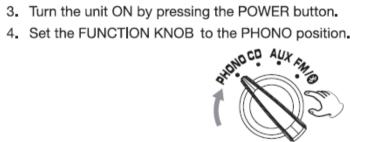

 
Gently open the dust cover. Be careful not to pinch your finger. Select the speed.




7. Put the record on the turntable. When playing a 45 RPM record, use the included 8. Gently push the CLAMPER to the right to release the TONE ARM.

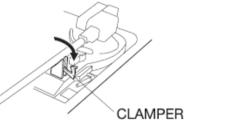

LISTENING TO A RECORD (CONTINUED) 9. Raise the CUE LEVER to lift the TONE ARM off the tone arm support.

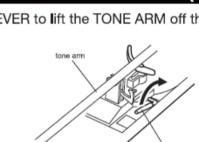

10. Move the TONE ARM gently to the edge of the record (or the starting point of a

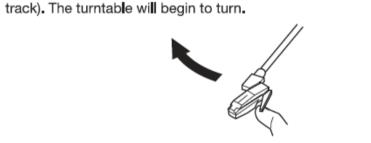


11. Gently lower the TONE ARM by slowly releasing the CUE LEVER. You can lower the TONE ARM manually if the CUE LEVER has not been raised.



12. Turn the VOLUME KNOB to adjust the volume. 13. When playback has finished, slightly lift the tone arm using the CUE LEVER and

Note: Playing records with the dust cover down will prevent dust from settling on

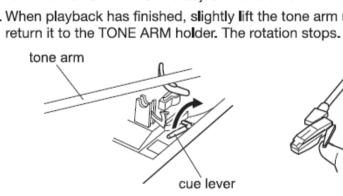

2. Set the FUNCTION KNOB to the FM/ 8 position. Select FM using the switch.

1. Turn the unit ON by pressing the POWER button.

4. Turn the TUNING KNOB to tune to a station.

5. Turn the VOLUME KNOB to adjust the volume.

If reception is poor:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareildoit accepter tout brouillageradioélectriquesubi, mêmesi le brouillageest susceptible d'encompromettre le fonctionnement.

Music Center is in Bluetooth mode. Use the control buttons on your external device.


12

LISTENING TO A CASSETTE TAPE

1. Turn the unit ON by pressing the POWER button.




3. To insert a cassette tape, push a tape into the CASSETTE TRAY until a "click" is heard. The cassette tape will only fit in one way. Never force a tape in. Playback starts automatically. When the tape reaches the end, playback will stop.

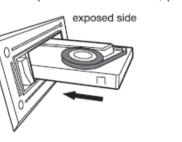


4. Turn the VOLUME KNOB to adjust the volume.


To fast forward:

 To stop playback and eject the tape: Push the TAPE OPERATION BUTTON all the way in until the tape is ejected. To stop playback, you must eject the tape.



  During playback, lightly press and hold the TAPE OPERATION BUTTON. Release it when the part you want to listen to is found. You can also push in the TAPE OPERATION BUTTON about 1/4" (5mm) to start the fast forward operation, and press the button again to release it and resume normal speed playback.





TROUBLESHOOTING

Genera No power: · Check the connection to the AC power source. Make sure the AC source is not a

No sound: Adjust the volume.

Turn the VOLUME KNOB clockwise.

from them, or turn the other appliances off. Cannot listen to any station, or signal is too weak:

 If a TV is near the unit, turn it off. Rotate the unit or antenna wire for the best reception position. Record Player

· Loosen the screw and detach the stylus guard. The stylus guard is a white plastic cover that protects the stylus during transportation. Failing to remove this guard

 Clean the surface of the record/disc. Do not use scratched, damaged or warped records/discs. Will not play:

is level both front to back and side to side.

 Depending on the disc, it may not be possible to play back CD-R/CD-RW discs. Try again with another disc. · You cannot play back unfinalized CD-R/CD-RW discs. Finalize and try again.

If you experience any problems with the unit, please take a moment to look through this guide and see if you can solve the problem yourself before you call your dealer

switched outlet and if it is, turn the switch on. Make sure there is power to the AC outlet by plugging another item such as a lamp or fan.

The sound has interference: The unit is too close to a TV set or similar appliance. Relocate the unit further away

 Tune in the station properly. Will not play:

will not allow the needle to contact the grooves of the record and no sound will If the stylus is worn-out, change the stylus. Select the correct playback speed. · Place the unit on a stable surface to avoid vibration and shock. Make sure the unit

 Turn the VOLUME knob clockwise, and rotate the FUNCTION KNOB to "CD". Load a disc with the playback side facing down. If the disc is dirty, clean the surface of the disc. A blank disc has been loaded. Load a pre-recorded disc.

Will not play: • Device is NOT paired properly; turn OFF Bluetooth, turn ON Bluetooth and repair device.

TROUBLESHOOTING (CONTINUED) Cassette Tape Player

The button does not work: Insert a cassette tape securely. Sound is distorted or noisy:

Clean and demagnetize the heads.

Use normal tape.

Amplifier Section

Record Player Section

the turntable.

If normal operation cannot be obtained, unplug the power cord from the outlet and plug it again. Beware of condensation When the unit (or a record/disc) is moved from a cold to warm place, or used after a sudden temperature change, condensation may form; vapor in the air could

condense on the internal mechanism, making correct operation erratic or impossible.

To prevent this, or if this occurs, leave the unit turned off for one or two hours. The

unit will stabilize at the temperature of its surroundings. Maintenance Always keep the turntable clean. If the surface of the unit gets dirty, wipe with a soft dry cloth or use a diluted mild liquid soap. Be sure to remove any excess liquid completely. Do not use thinner, benzine or alcohol as they may damage the surface

SPECIFICATIONS

of the unit. Allow the surface of the unit to dry completely before using.

 
Output Power...... 5W+5W Frequency Response 60Hz to 20,000Hz CD Player Section Bluetooth Section Bluetooth working range10 Meters Tape Section

Track System 4 track, 2 channel stereo

Wow and Flutter...... 0.15% (WRMS)

Frequency Response 100 to 8,000Hz

Motor...... DC servo motor Drive System Belt Drive 15



LISTENING TO THE RADIO

FM broadcast

C STATEMENT

that may cause undesired operation of the device. Le présentappareilestconforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitationestautorisée aux deux conditions

Wow and Flutter.....less than O.15% (WDT)

Speaker System Section Genera

Power Consumption......30W

Standard Accessories

Owner's Manual x 1

 Design and specifications are subject to change without notice. Photos and illustrations may differ slightly from production models. Bluetooth is a trademark on a registered trademark of Bluetooth SIG Inc. All other trademarks and trade names are those of their represtite



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

responsible for compliance could void the user authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the

 Increase the separation between the equipment and the receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an

1. Turn the unit ON by pressing the POWER button. 2. Set the FUNCTION KNOB to the FM/ B position.

Select (Bluetooth) using the switch.

4. Before you listen to music via the unit, you must pair the devices.

■ Ensure that the Bluetooth function is activated in your player (e.g.

mobile phone).

Select it on your device. ■ If prompted, please enter the password "0000" on your device.

5. Turn the VOLUME KNOB to adjust the volume.

Because of different device manufacturers, models, and software versions, the control buttons (Play/Pause, Stop, etc...) on the faceplate will NOT function when the Wooden

■ The Device "Wooden Music Center" will show in your player as a selection.

Innovative Technology Electronics Corp.

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

purchase. Please contact us at www.ithomeproducts.com to request an RMA issue a replacement to customer for the same item or of one that has equivalent value and

Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address. Please include your check or money order in the amount of: · USD\$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit) USD\$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit) · USD\$16.00, for items \$100.00 and up. (Price Paid Per Unit)

RMA request via our website www.ithomeproducts.com/support. Innovative Technology Electronics Corp. 1 Channel Drive

 
INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may

also have other rights, which vary from state to state.

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cartridge type...... Ceramic Stereo Cartridge



FCC STATEMENT

Warning: Changes or modifications to this unit not expressly approved by the party

Limited Warranty: 90 Days Labor, One Year Parts Power Requirements...... AC 120V/60Hz

> (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number. All returns must be in the original packaging or reasonable substitute to prevent damage.

Shipping fees are non-refundable to be payable to Innovative Technology Electronics Corp. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or

Port Washington, NY 11050 Toll free: 1-877-483-2497 Website for support: www_ithomeproducts.com/support

EXCLUSIVE REMEDY OF THE CUSTOMER. (IT) SHALL NOT BE LIABLE FOR ANY A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential

There are no express warranties except as listed above. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE

To obtain service, the purchaser MUST present an original sales receipt / proof of