

 **innovative technology.**
Bluetooth® Tower Stereo
with USB Charging Port
 Model: ITSB-250

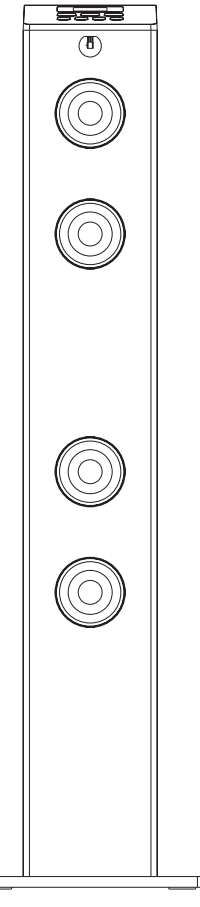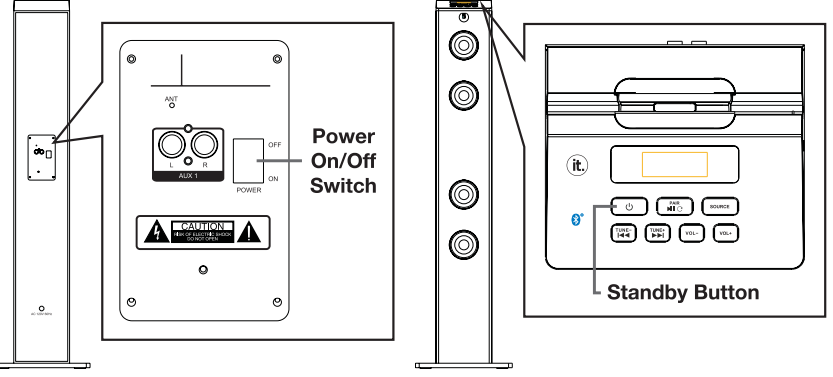

Instruction Manual
 Please read this instruction manual carefully before using and keep it for future reference

Quick Start Guide


- Make sure to remove ALL items before discarding package.
This includes:
 - Bluetooth® Tower Stereo
 - Remote control (with battery)
 - Baseplate for the system
 - Two special screws with washers
 - Smartphone/tablet/MP3 player support
 - Audio cable (3.5mm)
 - Instruction Manual
- You MUST attach the baseplate to the unit before use!**
 - CAUTION: To ensure that the unit is stable, the system must never be used without the baseplate attached.
 - See page 4 for assembly instructions.
- BOTH the Power On/Off Switch on the back panel of the unit and the Standby Button on the Top Control Panel MUST be turned ON to begin using the Bluetooth Tower Stereo.**

- Connect your smartphone, tablet or other audio device via Bluetooth.**
 - Press the Source button until 'BT' appears.
 - When connecting to a new Bluetooth device, press the PAIR button () on the Tower Stereo
 - Make sure Bluetooth is enabled on your device. Once 'Tower Stereo' appears in the list of devices, select it. If asked for a password enter '0000'.
 - The Bluetooth Tower Stereo will beep once a connection is established.
 - See page 10-12 for further instructions on listening to the FM radio, connecting via Bluetooth or connecting via aux-in.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Do not use with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.


WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
 - Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
 - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

CALIFORNIA PROP 65 WARNING

"WARNING" This product contains chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on to the following website address: <http://www.oehha.ca.gov/prop65.html>


PACKAGE CONTENTS
This carton should contain:

- Bluetooth Tower Stereo
- Remote control (with battery)
- Baseplate for the system
- Two special screws with washers
- Smartphone/tablet/MP3 player support
- Audio cable (3.5mm)
- Instruction Manual

PREPARATION FOR USE
Fitting the Baseplate
CAUTION: To ensure that the unit is stable, the system must never be used without the baseplate attached.

- Lay a soft protective cloth on a large table or work-surface.
- Put the Tower Stereo on the cloth, on its right side, with the base of the unit accessible at the end of the table.
- Fit a washer to each of the special screws.
- Bring the baseplate up to the base of the Tower Stereo, lining up the holes in the baseplate with the holes in the base.
- Screw in the two special screws to secure the base.
- Slide the top control panel into the base.
- Tighten the screws with a screwdriver.


The baseplate is now assembled to the system. Carefully lift the system off of the table and stand it on its base.

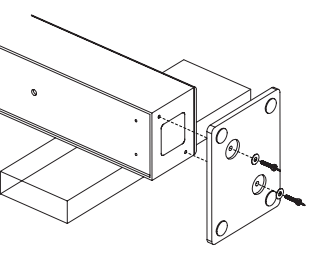

Placement
 The unit must stand on the floor. Check a location:


- Where there is a nearby power connection.
- Where the front speakers have a direct line of sight to the listener for sound and for remote control operation.
- Where the left side of the unit is not positioned too close to a wall - allow 11.8in (30cm) of clearance if possible.
- Where the top control panel is easily accessible.

PRODUCT OVERVIEW
Control Panel

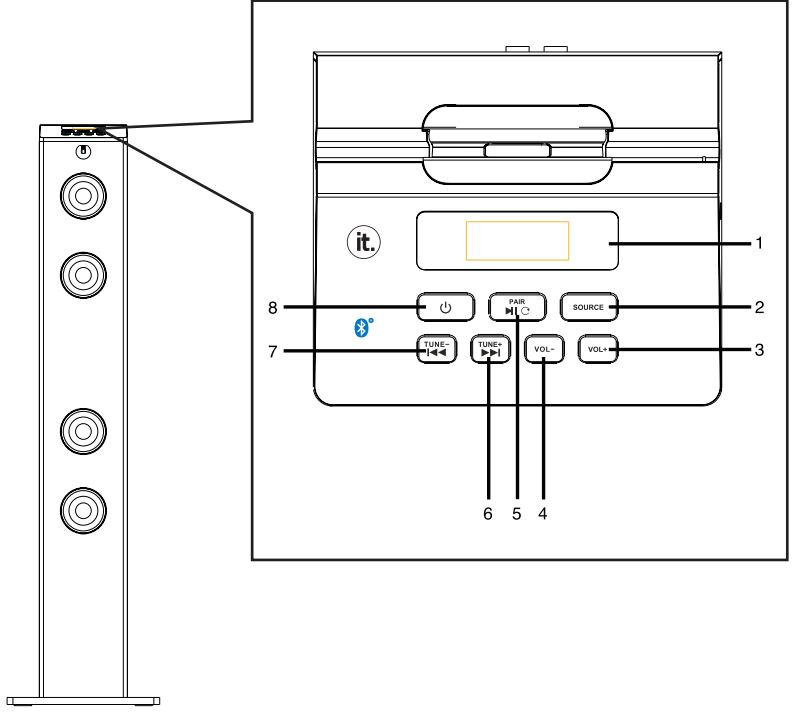


- Display
- Source Button
- Volume Up Button
- Volume Down Button
- Play/Pause/Pair/Presets/Recall Button (Recall: Press to listen to preset/stored radio stations)
- Tune Up / Next Button
- Tune Down / Previous Button
- Standby Button

Jack Panel

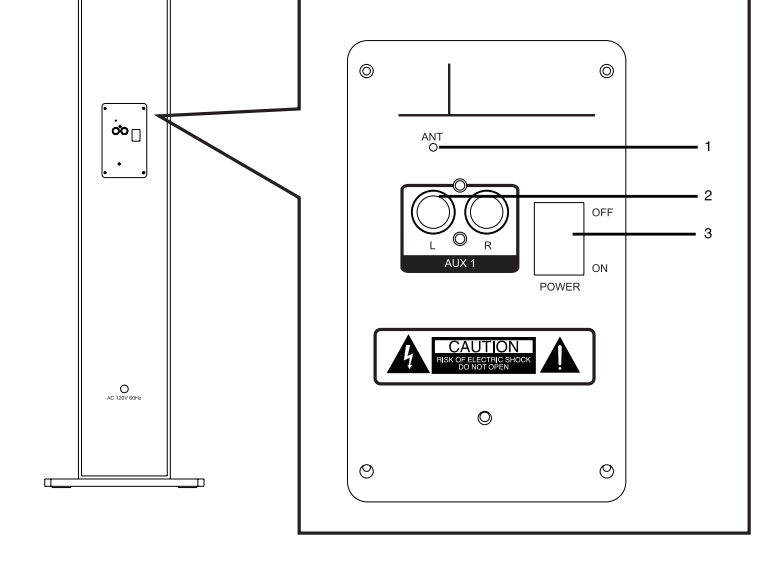

- Antenna Wire
- AUX-IN 1 (RCA)
- Power On/Off Switch
- AUX-IN 2 (3.5mm)
- USB Charging Port

Remote Control

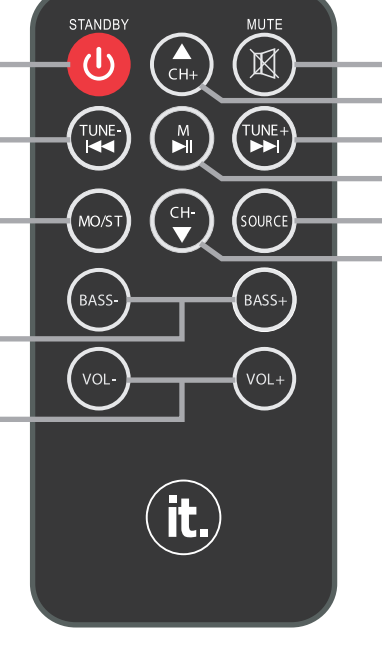


- Standby
- Tune Down / Previous
- Bass Down / Bass Up
- Volume Down / Volume Up
- Mute
- Preset + / Up
- Tune Up / Next
- Play/Pause/Presets
- Source
- Source
- Preset - / Down

BATTERY INSTALLATION (REMOTE CONTROL)
Before First Use. Remove and discard the insulation tab as shown.

Battery Replacement

- Push and slide out the battery door (as shown in the figure below) on the rear of the remote control.
- Replace the battery with a new CR2025 button cell with the polarity "+,-" facing up.

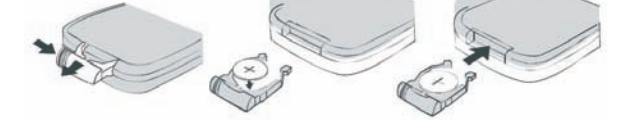

Battery Precautions
 Follow these precautions when using a battery in this device:

- Use only the size and type of battery specified.
- Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
- Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with new ones.
- If the batteries in the device are completely drained or the device will not be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's instructions.)
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Clean the battery contacts, and also those of the device, prior to battery installation.

REMOTE CONTROL OPERATING RANGE
Notes:

- When there is an obstacle between the unit and the remote, the remote may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

GETTING STARTED
FM Radio Antenna
 Before using your unit for FM reception, unwrap and fully extend the antenna wire. You may need to adjust the position of the antenna wire for maximum signal strength.

Connecting Power
 Before connecting the power, check that the mains voltage on the rating plate of the back panel is the same as the voltage in your area.

- Insert the plug into the wall socket.
- Switch the Power On/Off Switch on the back panel to the ON position.

Turn the System On

- Press the Standby Button (o).
- The display will turn on.

Turn the System Off

- Press the Standby Button (o).
- The display will turn off.

NOTE: Both the Power On/Off Switch on the back panel of the unit and the Standby Button must be ON for the unit to function.

LISTEN TO FM RADIO
Selecting FM Mode

- Press SOURCE button repeatedly until the FM frequency is displayed.

Station Search

- Press and hold **▲** or **▼** button to search up or down the band. The radio will stop automatically when the next station is reached.

Manual Step Tuning

- Press **▲** or **▼** button to step up or down the band.
- Fine adjust the tuning so that the station plays clearly.
- If you hear a lot of background noise when playing the station, the signal may be weak. You may be able to improve the signal strength by adjusting the position of the FM antenna or moving the radio to a different position.

Stereo/Mono

- To switch between stereo and mono reception, press the MO/ST button repeatedly. Stereo or Mono will be displayed, depending on the mode set.
- The radio will automatically receive FM radio broadcasts in stereo (when available). Alternatively, you can manually set the radio to receive only in mono. This may be preferred if the signal strength is low, and the background noise level is high.

Radio Presets

- To store a preset:
 - Tune to the station you want to store as a preset.
 - Press the Memory button on the remote control. 'CH' will be displayed with a flashing preset number.
 - Press **▲** or **▼** button to change to the preset number you want to store.
 - When the correct preset number is displayed, press the Memory button to store the station. The station will be stored.
 - Your radio can store up to 20 of your favorite stations as presets for quick recall.
- To browse the presets:
 - From the remote control, press CH+ or CH- button to step up or down the radio presets.
 - From the control panel, press **◀** repeatedly to listen to the presets.
 - As you browse through the presets, the radio will re-tune to the preset station number selected.

PLAYING AUDIO VIA BLUETOOTH SOURCE
 Your Tower Stereo also includes Bluetooth connectivity. You can connect Bluetooth equipped mobile phones, tablets and laptop computers to play through your audio system.

Selecting Bluetooth Mode

- Press the SOURCE button repeatedly until 'BT' is displayed on the Tower Stereo.
 - When connecting to a new Bluetooth device, press the PAIR button () on the Tower Stereo to enter Pairing Mode.
 - The system will start searching for the device last connected, if the device is found, the system will reconnect the device automatically.
 - Please note, only one Bluetooth device can be connected to the Tower Stereo at one time.
- Activate Bluetooth on your device (smartphone, tablet, computer, etc.).
- In the Bluetooth menu of your device, there should be an option to search for Bluetooth devices. Select this option.
 - Your device will now scan for other Bluetooth devices and should find the Bluetooth Tower Stereo, identified as 'Tower Stereo'.
 - Choose to pair with 'Tower Stereo'.
 - If you are asked for a password, enter '0000'.
- Your Bluetooth device will now be connected. Once a connection has been established, the audio system will beep. After pairing for the first time, the audio system will appear in the connection menu of your Bluetooth device.
- If you want to connect another Bluetooth device to the Tower Stereo, hold the Pair button to deactivate the current connection. Follow the steps above to connect the new device.

Playback Control

- Press **⏪** button to change between Play and Pause mode at any time.
- Press **⏩** or **⏹** button to select the next or previous track.
- These functions may not be available for all Bluetooth sources.

PLAYING AUDIO VIA AUX-IN SOURCE
 There are two AUX inputs:

- AUX 1 (RCA) on the back panel for connection of DVD/CD players or a TV.
- AUX 2 (3.5mm) on the top control panel for smaller portable devices or laptop computers.

Connecting to AUX-IN 1

- Connect one end of a twin RCA audio cable (not supplied) to the audio output of the source (TV, stereo, etc.).
- Connect the other end of the cable to the AUX-IN 1 jacks on the back panel of the Bluetooth Tower Stereo.

Connecting to AUX-IN 2

- Connect one end of the supplied 3.5mm stereo mini jack cable to the line or headphone jack of the source (smartphone, tablet, etc.).
- Connect the other end of the cable to the AUX-IN 2 jack on the control panel of the Bluetooth Tower Stereo.

Playing an AUX Source:

- Press the SOURCE button repeatedly until 'AUX' is displayed.
- NOTE: When 'AUX' is selected, the AUX 1 source will play unless a cable is connected to the AUX-IN 2 jack. In this case, the AUX 2 source will be selected.
- Set the source to play.
- Adjust the volume.
- If the volume level is too low, try increasing the volume level on the source volume control.

CHARGING VIA THE USB PORT

- There is a USB charging port on the side of the unit that can charge iPhones, iPads, iPods, smartphones, tablets and any other device that charges using a standard USB cord.
- USB cable is not included, use your device's charging cable.
- Make sure the speaker is powered on to charge devices.

TROUBLESHOOTING GUIDE
 If you are having problems with your unit, please review the guide below before requesting service.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	AC plug is not plugged into a wall outlet Power switch is in the OFF position The unit is in standby mode	Plug into the wall outlet properly Press the power switch on rear of the unit to ON position Press the Power button on remote control, or the unit, to turn on the unit from standby mode
No sound	Volume is set to minimum The connected device is not in playing mode Sound output of the connected device is set too low Input source is incorrect	Increase volume level by pressing the VOL+ button Play the music/movie from the connected device Increase the volume level of the connected device Press the SOURCE button repeatedly until indicator turns to connect color
Sound distortion	Volume level is too high Volume level of the connected device is set too high EQ of the connected device is set to super bass or other mode	Reduce the volume level by pressing the VOL- button Reduce the volume level of the connected device Reset the EQ mode of the unit and/or the connected device
Remote not functioning	The batteries in the remote control are dead	Point the remote control to the remote sensor on the unit within 20 feet, +/- 30 degrees Replace with new batteries
Weak radio reception		Extend the FM antenna wire on the rear of the unit and relocate it to get better reception

SPECIFICATIONS
 Power Source..... 120V-60Hz
 Power Consumption..... 45W
 Bluetooth Working Range > 33ft (10m)
 FM Coverage..... 87.5-108MHz
 USB Output..... DC 5V,500mA

Bluetooth is a registered trademark of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

FCC STATEMENT
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The antenna(s) used by this transmitter must be installed to provide a separation distance of at least 7.9in (20cm) from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Innovative Technology Electronics Corp.
Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. (ITE) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. If agreed, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that ITE will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to fire power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.ithomeproducts.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (ITE) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- US\$85.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- US\$210.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- US\$16.00, for items \$100.00 and up. (Price Paid Per Unit)**

Shipping fees are non-refundable

To be payable to Innovative Technology Electronics Corp. (for handling and return shipping charges) (ITE) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.ithomeproducts.com/support.

Innovative Technology Electronics Corp.
 1 Channel Drive
 Fort Washington, NY 11050
 Toll free: 1-877-483-2487
Website for support: www.ithomeproducts.com/support

There are no express warranties except as listed above. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. ITE SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.
 Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Made in China.