

MAGNAVOX

DIGITAL MINI TOWER

 
with Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL:MR4207

IMPORTANT SAFETY INSTRUCTIONS

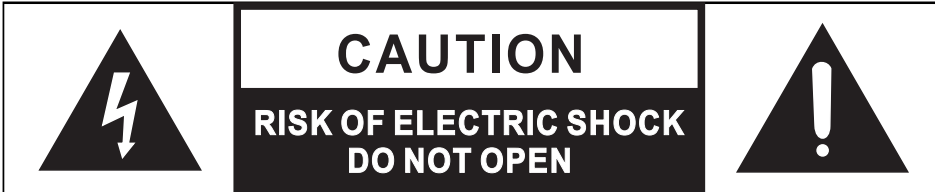

CAUTION: TO REDUCE THE ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PART INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC STATEMENT:

 
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

POWER SOURCE:

The unit has a built in Li-ion rechargeable battery, recharge it before use or when it is drained as follows:

1. Connect the Micro USB Plug from the supplied USB Connection Cable to the Micro USB Port on the rear of unit.
2. Connect the full sized USB Plug from the supplied USB Connection Cable to the USB Port on the USB Charger (During charging, the indicator on the rear of unit will turn RED if the unit is switched off. When finished, it will turn off).

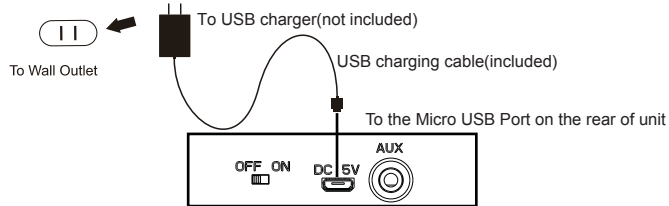


NOTES:

Your battery will last longer if you're following these simple guidelines for charging and storing.


- A. Before first time use, charge it approximately 4 hours until the unit is fully charged.
- B. Recharge and store the unit within the temperature range of 5°C~35°C (40°F~95°F).
- C. Do not charge longer than 24 hours. Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
- D. Battery life naturally shortens slowly over time.
- E. The rechargeable battery incorporated in this product is not user replaceable.

LOCATION OF CONTROLS:

 
TOP VIEW

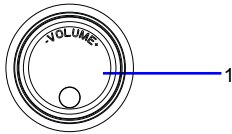

FRONT VIEW

 


REAR VIEW

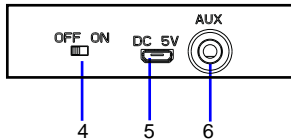 

1. Volume Knob
2. Indicators
3. Remote Sensor
4. OFF/ON Switch
5. DC IN Jack
6. AUX IN Jack

 REMOTE CONTROL

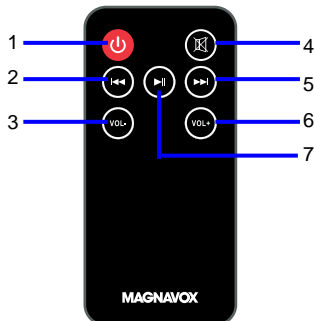


1. ⏻ (Power On/Off) Button
2. ⏮ (Previous) Button
3. VOL- (Volume Down) Button
4. 🔇 (Mute) Button
5. ⏭ (Next) Button
6. VOL+ (Volume Up) Button
7. ▶⏸ (Play/Pause) Button

BATTERY INSTALLATION FOR REMOTE CONTROL

FIRST TIME USE

 
- Remove and discard the insulation tab as figure on the right.
- Replacing Batteries For Remote Control
 1. Push and slide out the battery holder as figure 1 below.
 2. Replace the battery with a new CR2025 button cell as the polarity markings on the rear of the Remote Control.
 3. Close the battery holder.

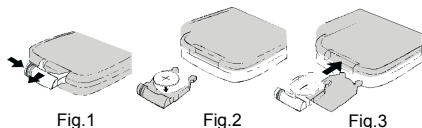

BATTERY PRECAUTIONS

Follow these precautions when using a battery in this device:

 1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment, a reserved battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g: Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
6. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. The remote control supplied with a coin/button cell battery. If the coin button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used battery away from children. If the Battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed any part of the body, seek immediate medical attention.

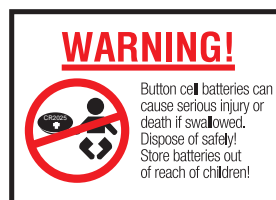


CAUTION

- Danger of explosion if the battery is incorrectly replaced.
- Replace only with the same or equivalent type.

Remote control operation range

 - When there is an obstacle between the remote and the transmitter, the unit may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the operation of the remote may be unstable.

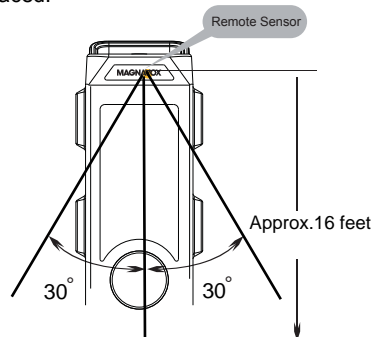

OPERATION

BT (Bluetooth):

1. Switch on the speaker, the indicator will turn Blue and blink.
2. Activate the bluetooth menu on the device you wish to connect to the speaker. Try to search the speaker, the pairing name "MR4207" will appear on your bluetooth device list, select it and make connection.
3. After successful connection, the unit will send a tone and the indicator stays lit.
4. Play a track on your paired audio player or phone as normal.

NOTE: ● After first time pairing, the unit will be automatically paired with the device connected before when the bluetooth of the device and speaker are activated.

- If the Audio Connection Cable was plugged into the AUX IN Jack, the Bluetooth function will be cut off. Unplug the Cable from the AUX IN Jack before using Bluetooth function.


During playback:

- Press the ⏮ or ⏭ button to skip to desired track.
- Press the ⏸ button to turn off sound, press again to resume.
- Press the ⏩ button to switch between playing and pause.
- Press the VOL- or VOL+ button or swivel the volume knob to adjust volume.

AUX IN:

To listen from an external Audio Player such as a MP3 Player, Discman ...etc.

 1. Connect one end of the Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
2. In power on mode, connect the other end of the cable to the AUX IN Jack on the rear of unit as the figure below. The unit will turn to AUX IN mode automatically and the indicator will stay lit.

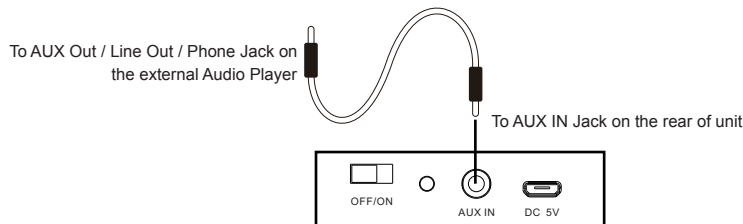



3. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
4. When no longer in use, switch off the unit.

TROUBLESHOOTING:

Can't power on	Built in battery consumed	Recharge the battery
No sound or sound weak	Volume level of paired/connected device is in low level	Raise the volume level of the paired/connected device
Sound distortion	Volume level of the connected/paired device too high	Reduce the volume level of the connected/paired device
BT not functioning	The external BT device too far from the unit	Place the external BT device close to the unit
	The external BT Device had NOT paired to the unit	Pair the external BT Device to the unit as stated in manual

GENERAL SPECIFICATION:

Power Source	Built-in DC  3.7V, 2000 mAH (7.4WH) Li-ion rechargeable battery; Recharge by DC  5V 1A through Micro USB Port
BT Version	4.1
BT Effective range	Up to 32 feet in open area
Audio Power	2 Watts per channel (Total 4 Watts RMS)
Impedance of speaker	3 Watts ; 3 ohm x 2

ACCESSORIES:

- 1 x User's Manual
- 1 x Remote Control
- 1 x USB Connection Cable (For charge only)
- 1 x 3.5mm plug stereo Aux In Cable

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE.

LIMITED WARRANTY

Magnavox warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$7 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email:service@craigelectronics.com