

DO NOT PRINT PINK DIE LINE

it innovative technology

Tower Speaker with Bluetooth

Model: FT5B-340

Instruction Manual

Please read this instruction manual carefully before use and keep for future reference.

QUICK START GUIDE

- Make sure to remove ALL items before discarding package. This includes:
 - Tower Speaker
 - Remote control (with battery)
 - Instruction Manual
 - AC Adapter
- Connect your smartphone, tablet or other audio device via Bluetooth.
 - Press the SOURCE button until indicator light turns BLUE with an audible beep.
 - Make sure Bluetooth is enabled on your device. Once "Tabletop Tower" appears in your device, select it and pair by a password: enter "0000".
 - The "Tabletop Tower Speaker" produces an audible beep once a connection is established.
 - See page 10 for further instructions on pairing to the FM radio, connecting via Bluetooth or connecting via AUX.

CONTENTS

Safety Instructions	3
Product Overview	5
Remote Control and General Operation	6
Battery Installation (Remote Control)	7
Playing Audio via FM Tuner	8
Playing Audio via Bluetooth Source	9
Playing Audio via AUX/IN Source	10
Troubleshooting	11
Specifications	12
Warranty	13

SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Do not use this apparatus near water. This apparatus shall not be exposed to dripping or splashing, and no objects shall be placed on, or used to support, the apparatus.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The apparatus should not be situated on a bed, sofa, rug or any similar surface that may block the ventilation openings. Accumulation of dust at the ventilation openings, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings, ventilation should be prevented by covering the openings with items such as newspapers, tablecloths, curtains, etc.
- Do not use this unit near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat. Excessive exposure to temperatures higher than 170 degrees Fahrenheit for extended periods of time during the summer, may result in damage to your product.
- Do not open flame sources, such as pilot light or candles, should be directed toward the apparatus.
- Do not remove the safety purpose of the cabinet or grounding-type plug. A grounded plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into a power outlet, consult an electrician for the replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched—particularly at joints. Disconnect the power plug in the cable way to completely remove power to the device.
- Do not melt in an area which impedes the access to the power plug. Disconnect the power plug in the cable way to completely remove power to the device.
- Power source: Do not use any power supplies of the type specified in the operating instructions or as marked on the apparatus. If a separate power supply is included with the apparatus, do not substitute with another power supply—use only manufacturer-provided power supplies.

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Use only the type of fuse specified for long periods of time. The batteries should be removed.
- Do not place this product on a unstable surface. The product may be causing serious injury to a child or adult and serious damage to the product. Read and follow the instructions on the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- Use the speakers with care to avoid damage or injury.
- Failure to servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, the power-cord or plug is damaged, liquid has been spilled on or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- For products which incorporate batteries, please refer to local regulations for proper battery disposal.

CALIFORNIA PROP 65 WARNING

"WARNING: This product contains chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and list of chemicals, log on to the following website address: www.cdph.ca.gov/Programs/CID/DCDC/Pages/Prop65Resources.aspx

Placement

The unit must be put on a table. Choose a location:

- Where there is a nearby power connector.
- Where the front speakers have a direct line of sight to the listener for sound and remote control operation.
- Where the unit is not positioned too close to a wall (at least 11.2m (37in) or greater) from the wall.

PRODUCT OVERVIEW

- Remote Sensor
- Indicator
- FM TUNE - Button
- FM TUNE + Button
- STANDBY Button
- VOL - (Volume Down)
- VOL + (Volume Up)
- AUX/IN Jack
- Antenna
- DC IN Jack

REMOTE CONTROL AND GENERAL OPERATION

- STANDBY Button
- FM TUNE - Button
- FM TUNE + Button
- VOL - (Volume Down)
- VOL + (Volume Up)
- FM Play/Pause Button
- SOURCE Button
- Mute Button

BATTERY INSTALLATION (REMOTE CONTROL)

Before First Use: Remove and discard the insulation tape as shown.

Battery Replacement

- Push and slide out the battery door (as shown in the figure below) on the rear of the remote control.
- Remove the battery with a new CR2025 button cell with the polarity "+" facing up.

Battery Precautions

Follow these precautions when using a battery in this device:

- Use only the size and type of battery specified.
- Do not try to fix the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
- If the batteries in the device are completely drained or the device is not used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Refer to battery manufacturer's instructions).
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Clean the battery contacts, and also those of the device, prior to battery insertion.

REMOTE CONTROL OPERATING RANGE

Notes:

- When there is an obstacle between the unit and the remote, the remote may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

CONNECTING POWER

Before connecting the power, check that the mains voltage on the rating plate of the back panel is the same as the voltage in your area.

- Insert the plug into the wall socket.

Turn the System On

Press and hold the STANDBY button on the unit.

Or press the STANDBY button on remote control.

Turn the System Off

Press and hold the STANDBY button on the unit.

Or press the STANDBY button on remote control.

NOTE: Indicator light turns RED in Standby Mode.

PLAYING AUDIO VIA FM TUNER

FM Radio Antenna

Before using your unit for FM reception, unplug and extend the antenna wire.

You may need to adjust the position of the antenna wire for maximum signal strength.

LISTEN TO FM RADIO

Selecting FM Mode

Press and hold the SOURCE button on unit repeatedly until the indicator turns GREEN.

Station Search

Press and hold the FM TUNE - or FM TUNE + button to search up or down the band. The radio will automatically scan when the next station is reached.

Manual Step Tuning

Press the FM TUNE - or FM TUNE + button to step up or down the band.

Press the TUNE - or TUNE + button to adjust the tuning so that the station plays clearly.

If you hear a lot of background noise when playing the station, the signal may be weak. You may be able to improve the signal strength by adjusting the position of the antenna or moving the radio to a different position.

PLAYING AUDIO VIA BLUETOOTH SOURCE

Your Tabletop Tower Speaker also includes Bluetooth connectivity. You can connect it to your Bluetooth mobile phone, tablet and laptop computer to play through your audio system.

Selecting Bluetooth Mode

- Press the SOURCE button until indicator light turns BLUE with an audible beep.
- The system will start searching for the device last connected. If the device is found, the system will reconnect the device automatically.
- Please note: only one Bluetooth device can be connected to the Tabletop Tower Speaker at one time.
- Activate Bluetooth on your device (smartphone, tablet, computer, etc.).
- In the Bluetooth menu of your device, there should be an option to search for Bluetooth devices. Select this option.
- Your device will now scan for other Bluetooth devices and should find the Tabletop Tower Speaker, identified as "Tabletop Tower".
- Choose to pair with "Tabletop Tower".
- If you are asked for a password, enter "0000".
- Your Bluetooth device will now be connected. Once a connection has been made, the status light will glow blue steadily.
- After pairing for the first time, the audio system will appear on the connection menu of your Bluetooth device.
- If you want to connect another Bluetooth device to the Tabletop Tower Speaker, disconnect the current connection. Follow the steps above to connect the new device.

Playback Control

Press a button to change between Play and Pause mode at any time.

- Press the play or pause button to adjust the next or previous track.
- These functions may not be available for all Bluetooth sources.

PLAYING AUDIO VIA AUX-IN SOURCE

Connecting to AUX IN

- Connect one end of the 3.5mm stereo mini jack cable to the line or headphones jack of the source (smartphone, tablet, etc.).
- Connect the other end of the cable to the AUX-IN jack on the back panel of the Tabletop Tower Speaker.

Playing an AUX Source

Press the SOURCE button on unit repeatedly until the indicator turns VIOLET.

Adjust the volume.

If the volume level is too low, by increasing the volume level on the source volume control.

TROUBLESHOOTING

If you are having problems with your unit, please review the guide below before requesting service.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	Power plug is not plugged into a wall outlet	Plug into the wall outlet properly
	The unit is in standby mode	Press the standby button on remote control to turn on the unit from standby mode
	Volume is set to minimum	Increase volume level by pressing the VOL+ button
No sound	The connected device is not in playing mode	Put the headphones from the connected device
	Volume level of the connected device is set too low	Increase the volume level of the connected device
	Input source is incorrect	Press the SOURCE button repeatedly until indicator light turns correct color
Sound distortion	Volume level is too high	Reduce the volume level by pressing the VOL- button
	Volume level of the connected device is set too high	Reduce the volume level of the connected device
Remotes not working	Out of range	Press the remote control to the remote sensor on the unit within 20 feet (6m), +/- 30 degrees
	The batteries in the remote control are dead	Recharge with new batteries
Weak radio reception	Radio or no signal/noise interference	Extend the FM antenna wire on the rear of the unit and relocate it to a better reception location

SPECIFICATIONS

Power Source: 100-240V AC, 50/60Hz

Power Consumption: 10W

Bluetooth Working Range: 10m (33ft)

FM Control: 87.5-108MHz

Bluetooth is a registered trademark of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

FCC STATEMENT

FCC WARNING:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced TV technician for help.

FCC Exposure Statement

This equipment complies with FCC RF Exposure guidelines. The equipment should be installed and operated with minimum distance between 20cm (8in) and your body. Use only the approved antenna.

WARRANTY

Innovative Technology Electronics Corp.

Standard Warranty: 30 Days Labor, One Year Parts

Innovative Technology Electronics Corp. ("Innovative") warrants that the product to be free from "Defects in Materials and Workmanship" for the period of time specified in the warranty. This warranty is limited to the original purchaser of the product. It does not cover damage caused by misuse, accident, fire, flood, lightning, power surge, or other causes not within the scope of this warranty. The warranty does not cover damage caused by the use of non-approved repair or replacement parts. The warranty does not cover damage caused by the use of non-approved repair or replacement parts. The warranty does not cover damage caused by the use of non-approved repair or replacement parts.

How to make a claim: Please contact us at www.innovativeproducts.com/support or call 1-800-828-1111. Please provide the following information: Name, address, phone number, item purchased, receipt or purchase and return for return to Innovative Technology Electronics Corp.

Limitations: This warranty does not cover consequential or incidental damages. It is limited to the repair or replacement of the product. It does not cover the cost of shipping, handling, or return shipping charges. It is limited to the repair or replacement of the product. It does not cover the cost of shipping, handling, or return shipping charges. It is limited to the repair or replacement of the product. It does not cover the cost of shipping, handling, or return shipping charges.

Shipping: Shipping is not included in the warranty. Shipping charges are the responsibility of the customer.

Return Policy: The product must be returned to the manufacturer within 30 days of purchase. The product must be in its original packaging and in good condition. The product must be returned to the manufacturer within 30 days of purchase. The product must be in its original packaging and in good condition. The product must be returned to the manufacturer within 30 days of purchase. The product must be in its original packaging and in good condition.

Website for support: www.innovativeproducts.com/support

MADE IN CHINA

CI15012E