

REMOTE CONTROLLER

RECEIVER MODEL	--	RC-001	(FCC ID:PAGRC-001)
	--	RC-002	(FCC ID:PAGRC-001)
TRANSMITTER MODEL	--	TR-002A	(FCC ID:PAGTR-002)
		TR-002B	(FCC ID:PAGTR-002)
		TR-002C	(FCC ID:PAGTR-002)
		TR-002D	(FCC ID:PAGTR-002)

FEDERAL COMMUNICATIONS COMMISSION

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SPECIFICATIONS

Frequency	---	315MHz
Transmitter Power Input	---	DC 12V Alkaline Battery (size 23A)
Receiver Power Input	---	AC 125V Electrical Outlet
Receiver Power Output	---	13 Amps / 125 Volts Resistive
		13 Amps / 125 Volts General Purpose
		1000W Tungsten

INSTALLATION

1. Mount the receiver on wall near grounded electrical outlet. Nail or screw head must extend at least 3/16" out from wall. Hang the receiver from slot on back of unit onto

nail or screw. Plug the power supply cord of the receiver into outlet. Then plug device cord into the receptacle at bottom of the receiver.

2. Install battery into the transmitter.

OPERATION

1. Press ON button on the transmitter to turn the receiver ON.
2. Press OFF button on the transmitter to turn the receiver OFF.