


# Remote Control Outlets

## Operating Instructions

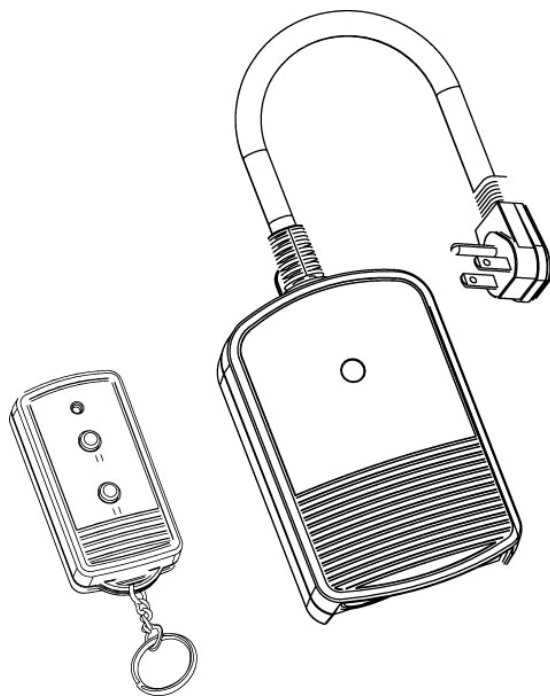

- FOR INDOOR OR OUTDOOR USE -

# IMPORTANT SAFEGUARDS

## Signal Word Definitions

**NOTE:** *These are general definitions only; all may not pertain to the actual product purchased.*

**DANGER** - Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

**WARNING** - Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

**CAUTION** - Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or product/property damage. It also alerts against unsafe practices.

When using electrical products, always follow basic safety precautions including the following:



**READ ALL INSTRUCTIONS BEFORE USE.**



**WARNING**

**Choking Hazard-- Small parts.**  
Not for children under 3 years.



**WARNING--** To reduce the risk of fire, electric shock, or serious personal injury:

- Do not immerse the product in water or other liquids.
- This product is not intended for use by children and contains small parts that may pose a choking hazard to children under the age of three. Keep the product out of the reach of children and pets.
- Do not use an electrical device or appliance with this product whose electrical specifications exceed those specified in the "Electrical Specifications" section of this manual.



**CAUTION--** To reduce the risk of personal injury or product/property damage:

- This product is intended for non-commercial, non-industrial use in the remote control of two electrical outlets. Do not use this product for any other purpose.

**WARNING:** This product is equipped with a three-prong grounding pin plug to reduce the risk of electric shock. This plug will fit into a grounded outlet only one way. This is a safety feature. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the grounding plug.



### **IMPORTANT INFORMATION REQUIRED BY THE FCC**


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

MODEL : TR-009-1

FCC ID : PAGTR-009-1

IC : 4494A-TR009-1

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**

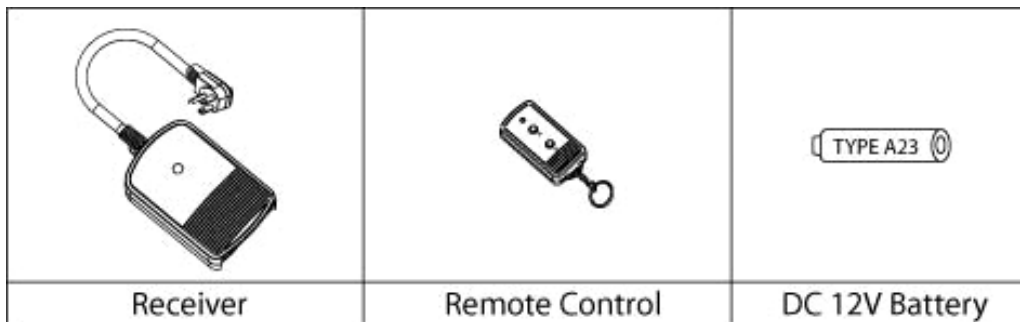

## Features

- Controls two electrical outlets up to a distance of 50 feet
- Plugs into any grounded three-prong outlet
- Has two three-prong receptacles

## To Set Up

1. Mount the Receiver near a three-prong, grounded, standard 120-volt AC electrical outlet:
  - a. Choose a location on the wall to insert a nail or wood screw (not included) for mounting the Receiver. Please note the following when choosing the location:
    - When hung from the nail/screw, the Receiver must be close enough to the outlet for the cord to plug into the outlet.
    - The Receiver must be mounted vertically with its outlets facing downward and not reaching ground level.
  - b. Insert the nail/screw into the wall in the chosen location. The nail or screw head must extend at least 3/16" from the wall.
  - c. Hang the keyhole of the Receiver on the nail or screw.
2. Plug the Receiver into a standard 120-volt AC electrical outlet.
3. Confirm that the electrical specifications of an item you wish to use with this product do not exceed those specified in the "Electrical Specifications" section. Plug the item into an outlet of the Receiver.
4. Remove the plastic battery tab from the Battery Compartment in the back of the Remote Control to activate the DC 12V Type A23 pre-installed battery.

## To Use

1. To activate the Receiver, press the ON Button of the Remote Control. The red LED of the Remote Control will illuminate momentarily and the LED of the Receiver will remain illuminated.  
**NOTE:** *The Remote Control must be within 50 feet of the Receiver.*
2. To turn the Receiver off, press the OFF Button of the Remote Control. The LED on

the Receiver will shut off.

## **Battery Handling and Usage**

**WARNING:** Keep batteries away from children and pets.

- Follow the battery manufacturer's safety and usage instructions.
- Insert the battery observing the proper polarity (+/-) as indicated inside the Battery Compartment.  
**CAUTION:** Failure to properly align the battery polarity can cause personal injury and/or property damage.
- Remove a spent or discharged battery from the product. Remove the battery when not using the product for an extended period.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.

### ***Battery Replacement:***

1. Remove the Battery Compartment Cover from the back of the Remote Control by sliding the Cover in the direction that its treads curve.
2. Remove the spent battery and place a new DC 12V Type A23 battery into the Battery Compartment, correctly observing the polarity indications (+/-) inside the Battery Compartment.
3. Replace the Battery Compartment Cover.

## **Electrical Specifications**

Voltage	Frequency	Wattage	Amperage
120VAC	60Hz	*1000W - 1625W	13A

\*Maximum combined wattage for items using a tungsten bulb plugged into the Receiver is 1000W.

\*Maximum combined wattage for appliances plugged into the Receiver is 1625W.

## **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.