

# OUTLETS

## REMOTE CONTROL


### RC-015 Indoor Wireless

#### SET UP

1. Plug the Receiver into a standard 125-volt AC electrical outlet.
2. Confirm that the electrical specifications of an item you wish to use with this product do not exceed those specified in the "Electrical Specifications" section. Plug the item into an outlet of the Receiver.
3. Remove the plastic battery tab from the Battery compartment in the back of the Remote Control to activate the DC 12V Type A23 pre-installed battery.

#### TO USE

1. To set up the receiver (outlet) with connecting device.
2. Removes the plastic battery tab from the battery compartment in the back of the remote control to active the DC 12V Type A23 pre-installed battery.
3. To activate Receiver, press Upper position of the transmitter. The red LED of the Receiver will illuminate.
4. To turn the Receive OFF, press Down position of the transmitter. The red LED of the Receiver will shut off.
5. Choose a location on the wall to insert a nail or wood screw (not included) for mounting the remote control.
6. Insert the nail /screw into the wall in the chosen location. The nail or screw head must extend at least 3/16" from the wall.
7. Hang the keyhole of the transmitter on the nail or screw.

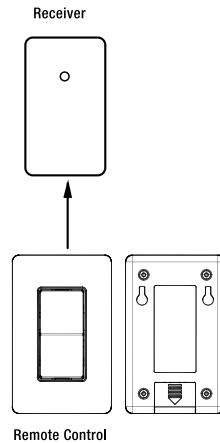

#### BATTERY HANDLING AND USAGE

**WARNING:** Keep batteries away from children and pets.

- Follow the battery manufacturer's safety and usage instructions.
  - Insert the battery observing the proper polarity (+/-) as indicated inside the Battery Compartment.
- CAUTION:** Failure to properly align the battery polarity can cause personal injury and/or property damage.
- Remove spent or discharged battery from the product. Remove the battery when not using the product for an extended period.
  - Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
  - Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.
  - Battery contains mercury. Do not put in trash. Recycle or manage as hazardous waste.

#### BATTERY REPLACEMENT

1. Remove the battery Compartment Cover from the back of the Remote Control by sliding the Cover in the direction that its treads curve.
2. Remove the spent battery and place a new DC 12V Type A23 battery into the Battery Compartment, correctly observing the polarity indications (+/-) inside the Battery Compartment.
3. Replace the Battery Compartment Cover.

FCC ID:  
IC:

Range: Up to 80 ft.  
13A / 1625W Resistive (general purpose)  
1000W Tungsten (lighting)  
1/3 HP  
125VAC, 60 Hz  
12V battery  
Frequency: 315 MHz

Printed in China

### READ ALL INSTRUCTIONS BEFORE USE.

**WARNING**  
**Choking Hazard-Small Parts**  
Not for children under 3 years.

**WARNING:** To reduce the risk of fire, electric shock, or serious personal injury:

- Do not immerse the product in water or liquids.
- This product is not intended for use by children and contains small parts that may pose a choking hazard to children under the age of three. Keep the product out of the reach of children and pets.
- Do not use an electrical device or appliance with this product whose electrical specifications exceed those specified in the "Electrical Specifications" section of this manual.

**CAUTION:** To reduce the risk of personal injury or product/property damage:

- This product is intended for non-commercial, non-industrial use in the remote control of any electrical outlet. Do not use this product for any other purpose.

**WARNING:** This product is equipped with a three-prong grounding pin plug to reduce the risk of electric shock. This plug will fit into a grounded outlet only one way. This is a safety feature. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the grounding plug.

#### IMPORTANT INFORMATION REQUIRED BY THE FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency

energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Do not install the RECEIVER horizontally or the remote control signal may not be received.

**CAUTION:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.