10: 99848213282868

84-27 18:14 TUE

OWNER'S MANUAL MODEL: FR-130A Two Way Family Radio



Customer Service 1-800-645-4994



Form No. 128-5377

SPECIFICATIONS

Channels	
Output power	500 may ERP
Battery Life:	1
(Alkaline)	50 Hours (2300mA)
(NICd)	
Power Source (Alkaline)	4.5V DC

Frequencies:

CHANNEL	FREQUENCY	CHANNEL.	FREQUENCY
	462.5625 MHz	8	467.5625 MFbz
2	462.5875 MHz	9	467.5875 MHz
3	462.6125 MHz	10	467.6125 MHz
4	462.6375 MHz	11	467.6375 MHz
	462.6625 MHz	12	467.6625 MD4z
6	462.6875 MHz	13	467.6875 MHz
7	462.7125 MHz	14	467.7125 MHz

Specifications are typical; individual units might vary.

Specifications are subject to change and improvement without notice.

CONGRATULATIONS ON YOUR SELECTION OF THE FR-130A (FAMILY RADIO)

It is one of the most sophisticated and reliable two-way Family radios available..

BEFORE OPERATING YOUR FR-130A(FAMILY RADIO)
READ THIS MANUAL CAREFULLY.

FCC WARNING

Replacement or substitution of transistors, diodes or other parts of a unique nature, with parts other than those recommended by manufacturer, may cause violation of the technical regulations of Part 95 of PCC Rules, or violation of type acceptance requirements of Part 2 of the rules.

8

It is one of the most inexpensive, sophisticsted and reliable two-way Family radios available.

BEFORE OPERATING YOUR FROM (FAMILY RADIO)
READ THIS MANUAL CAREFULLY.

FCC WARNING

PAGE: 14

10: 99040213202260

82-2-238-5789

INTERNATIONAL

اں

FROM: Y

긜

18:15

04-67

Replacement or substitution of transistors, diodes or other parts of a unique nature, with parts other than those recommended by manufacturer, may cause violation of the technical regulations of Part 95 of FCC Rules, or violation of type acceptance requirements of Part 2 of the rules.

FEATURES

Your FR-(30)A Family Radio is a portable, easy-to-use, two-way radio that you can carry almost anywhere. It is skillfully constructed to give you reliable communication for many different applications. The FR-(30)A is ideal for use around the house, in your car or boat, on hunting and camping trips, on the ski slope, at the mall or at your business for security patrols or warehouse communications.

Advanced PLL circuitry allows a new technique for generating all the required frequencies with fewer crystals. The result is much tighter frequency control and superior reliability.


₹


ë

_0

|||

FUNCTION AND LOCATION OF THE CONTROLS

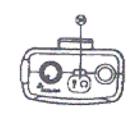

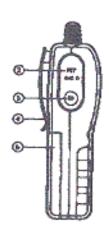



- POWER ON/OFF-VOLUME CONTROL: Rotate clockwise to turn "ON" and increase tistening volume level. Rotate counterclockwise to decrease volume or turn the transceiver "OFF".
- PUSH-TO-TALK BUTTON: Press to transmit, and release to receive.
- 3. Monitor (M) BUTTON: Press to monitor channel activity.
- 4. BELT CLIP
- 5. BATTERY COMPARTMENT
- 6. SPEAKER
- 7. MICROPHONE
- CALL: Press and hold to send a ringing sound to all radios named to the same channel.
- 9-1. "CHANNEL UP": Pressing this button momentarily, advances I channel. Holding the button will continuously advance channels until button is released.
- 9-2. "CHANNEL DOWN": Pressing this button momentarily, decreases, I channel. Holding the button will continuously decrease the channel number until the button is released.
- CHANNEL DISPLAY: Indicates the channel (i-14) selected.
- 11. BAFT LOW LED: Huminates when battery charge is low.
- 12. TX LED: Illuminates while radio is transmitting.
- ANTENNA
- 14-1.MICROPHONE JACK: For use with an external microphone.
- 14-2.SPEAKER JACK: For use with an external speaker.


100



BATTERY INSTALLATION

TALL BEST FOR THE PARTY OF A

Your radio requires three "AA" alkaline cells or three rechargeable "AA" nickel cadmium cells. Alkaline batteries will provide your transceiver's best range and preformance. Remove the battery cover by releasing the clasp at the bottom of the unit and lifting the cover from the battery compartment. Observe the polarity symbols inside the battery tray when installing the batteries.

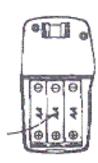

CAUTIONS: Incorrect battery installation can damage the unit.

BATTERY SAVE MODE

Your FR-130A has a unique circuit designed to dramatically extend the life of its batteries. Five seconds after the transmit button has been pressed, the FR-130A will switch to battery saver mode, and the LED display will turn off. The transceiver will remain ready to receive any incoming transmissions while in the battery saver mode. Pressing any of the buttons will illuminate the LED display and exit the battery saver mode.

HOW TO OPERATE YOUR RADIO

TO RECEIVE

- 1. Turn the power on.
- If the "Battery Low" indicator is on, charge or replace the batteries.
- 3. Set the channel selector to the desired channel.
- Adjust the volume control to a desirable listening level by pressing and holding the monitor button while turning the volume control knob.

TO TRANSMIT

- 1. Turn the power on .
- 2. If the "Battery Low" indicator is on, charge or replace the batteries.
- 3. Set the channel selector to the desired channel.
- 4. To transmit, press the Push-to Taik button. Speak slowly and clearly in a normal voice, approximately 2-3 inches from the microphone. A built-in modulation control circuit will automatically adjust the microphone input level. There's no need to speak loudly.
- 5. To receive, release the Push-to-Talk button.