


## Interior Transponder Mounting Instructions


## For proper operation, make sure the transponder is mounted as follows:

- Identify the front face of the transponder. It displays your agency label and two upward-pointing arrows. (Fig.-1) This side faces the driver with the arrows pointing toward the roof of your vehicle.
- Identify the position in your vehicle in which the transponder will be mounted. The preferred location is between the exposed edge of the windshield (roof line) and the rear view mirror post—as long as the clearances in Fig.-2 can be maintained. If there is insufficient room, the alternate location shown in Fig.-3 must be used.
- 3. Having determined the mounting position in your vehicle, carefully remove the red protective backing from the Dual Lock™ mounting strips on the rear of the transponder as shown in Fig.-4. Clean the inside surface of the windshield if necessary and firmly press the rear of the transponder against the glass. Maintain the pressure for about 15 seconds to achieve a good bond.

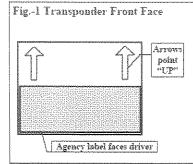


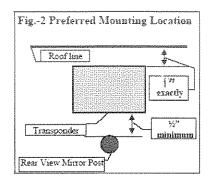

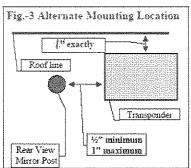

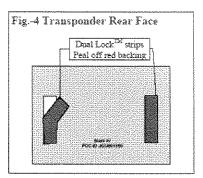

The transponder may be removed by lifting any one corner with sufficient pressure to separate the Dual Lock<sup>TM</sup> strips. Do not remove the Dual Lock<sup>TM</sup> from the windshield and reuse it; obtain new strips from your service center if necessary.

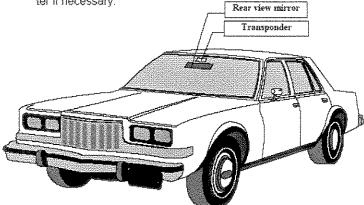

This device complies with Part 90 of the FCC Rules. Modifications not expressly approved by the manufacturer may invalidate the user's authority to operate the equipment