

USER MANUAL

Tablet PC

Model No. : QD-710GR-TV
FCC ID: 2ACAZQD-710GR-TV
Trade Name:



◆ **NOTE:**

This manual will introduce the main function, operation method and other information. Please read this manual carefully before using the Tablet PC.

1. Do not store the table pc in hot, cold, dusty and humid environment.
2. Please prevent the product fall down from high and crash with hard objects. The user should take the responsibility for artificial or other force majeure causing the damage of the product.
3. Avoiding using the table pc under dry environment in case of static.
4. Please charge the battery under below situation:
 - A There is no battery logo on the table;
 - B Tablet pc power off automatically.
 - C Operating but no response.

CAUTION: This product using 1500mA/5V charger, We DO NOT take any responsibility for the damage of user using other charger.

5. Do not put heavy object on table pc or damage it.
6. We do not shoulder the responsibility of data damage and lose by fix it or wrong operation
7. The storage capacity on OS will be smaller than the standard data complies the requirement. Because the software of tablet pc takes some space.
8. If the table can not use normally because of the change or damage of storage. Users can format the table pc on PC.

NOTE: This manual and some software will be updated occasionally. If the info does not conform to the real product, please take the real product as standard.

◆ Using Instruction



 
- 1, TV Antenna
- 2, Front Camer
- 3, Rear Camera
- 4, Sound Volume up button
- 5, Sound Volume down button
- 6, Power button
- 7, TF card
- 8, Micro USB JACK
- 9, Mini HDMI JACK
- 10, Earphone JACK
- 11, MIC
- 12, Reset hole

◆ **Main Function:**

1. 7.6 Inch HD wide screen (1024*600), Capacitive touch screen.
2. This product using Android4.2 OS, inner Wi-Fi and wireless module. It support surfing the internet, mail, online games, weather report, map and other apps.
3. It supports all versions of Android apps. It also supports many formats of image viewer, e-book, music, video and games. It can meet your all kinds of entertainment requirements.
4. Inner G-Sensor, Users can choose the best viewing angle and can play the G-Sensor games.
5. Support multi video format for HD 1080P (1920X1080), AVI, RM, RMVB, FLV, WMV, MPG, FLV, HD 1080P max and so on.
6. Support multi audio format MP3, WMA, MP2, OGG, AAC, M4A, MA4, FLAC, 3GP, WAV and so on.
7. Support HD JPEG, BMP, GIF and so on,
8. Storage device: Support TF card to max 32GB and also support U flash disk
9. Support jacks: Earphone, Micro USB, TF card, power jack, USB LAN and so on.
10. HDMI
11. Support HD photo and videotape
12. Support DIGITAL TV BROADCASTING (DVB-T2)
13. The HW supports BT Version EDR+3.0 but the firmware disables the BT function completely and end-user is not able to enable the BT function by firmware.

◆ FAQ

● **Power on and unlock:** Long press “ ” for 10 seconds. The product will enter the system desk. The screen was locked and press to right then entering the menu. Please refer to below pictures.

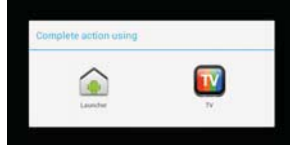

- **Power saving mode.:** Short press the system enter SLEEP mode and lock the screen. Pressing and the screen light in 1 second

- **Power off:** Pressing the power on/off key for 3 seconds. Choosing power off and the system power off automatically.

【NOTES】 The product will alarm when low battery. The product will power off automatically if not charging. Please check the power if can not power on.

- **Function of logo on the desk.**

: Back to the main interface; : New device message

: Energy; : Alarm clock.

09:41: System time; : Volume-; : Return.

: Volumet+; : Menu; : Function; : Browser

: Google; : Desk change.

: WIFI; : Setting logo

- ◆ **WIFI Setting**

- **WIFI:** Pressing functional menu , Pressing “setting” and choosing “Wi-Fi”. The system will search WIFI automatically and there will be a WIFI logo if searched.



- **Setting WIFI and connect with the internet:** Pressing the WIFI user' s name Such as “shenzhou02” and show to enter the pass word. Entering the correct password and choose “Connect” 。 The system will connect with the internet automatically. Please refer to below picture

 


-

- ◆ **Email**


- Pressing the “EMAIL” logo  when connecting with WIFI

Refer to below picture

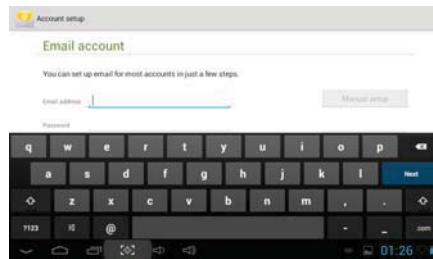


- If having email account, entering the user account and password and then pressing the “Next”. If not have an email account, please register an account and then log in.

- ◆ **Setting**

- pressing the setting logo  on main menu. It sets (WIFI, sound, display, location, apps) and other functions. Refer to below pictures.

 



◆ Digital TV

- pressing the TV logo  on main menu. It open the digital TV menu. Refer to below pictures.




- When use tv function first time, The program will have the following tips.





- Press the “Yes” or press search LOGO  on TV menu , The program

 
will enter SEARCH function,reference as shown below.

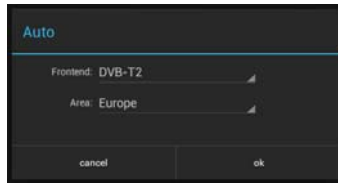

  - Press the “search” to start the program search.



 - Later search program is done,you can see the list of programs.



- Select the program you want to watch.play TV program as shown below.



- Enjoy your TV program.

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.