

## **Goofy Cordless Animated Talking Telephone Instruction Manual**



DM-515-A01

### **IMPORTANT SAFETY INSTRUCTIONS**

**BEFORE USING YOUR TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:**

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use LIQUID CLEANERS OR AEROSOL CLEANERS. Use a damp cloth for cleaning.
4. Do not use this product near water; for example, near a bathtub, wash bowl, kitchen sink, laundry tub, swimming pool, or in a damp basement.
5. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
6. This product should never be placed near or over a radiator or heater. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
9. Do not overload wall outlets or extension cords, as this can result in fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts, which could result in fire or electric shock. Never spill liquid of any kind on this product.
11. To reduce the risk of electric shock, do not disassemble this product. Instead, if repair work is required, take the unit to a qualified technician. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power supply cord or plug is damaged or frayed.
  - b. If liquid has been spilled into the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally and proper operating instructions have been followed, adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
  - e. If the product has been dropped.
  - f. If the product exhibits a distinct change in performance.
13. Avoid using telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.

15. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

#### IMPORTANTES MESURES DE SÉCURITÉ

**Certaines mesures de sécurité doivent être prises pendant l'utilisation de matériel téléphonique afin de réduire les risques d'incendie, de choc électrique et de blessures. En voici quelquesunes:**

1. Ne pas utiliser l'appareil près de l'eau, p.ex., près d'une baignoire, d'un lavabo, d'un évier de cuisine, d'un bac à laver, dans un sous-sol humide ou près d'une piscine.
2. Éviter d'utiliser le téléphone (sauf s'il s'agit d'un appareil sans fil) pendant un orage électrique. Ceci peut présenter un risque de choc électrique causé par la foudre.
3. Ne pas utiliser l'appareil téléphonique pour signaler une fuite de gaz s'il est situé près de la fuite.
4. Utiliser seulement le cordon d'alimentation et le type de piles indiqués dans ce manuel. Ne pas jeter les piles dans le feu: elles peuvent exploser. Se conformer aux règlements pertinents quant à l'élimination des piles.

 
#### CONSERVER CES INSTRUCTIONS

#### SAVE THESE INSTRUCTIONS

##### BATTERY PACK SAFETY INSTRUCTIONS

**CAUTION: To reduce the risk of fire or personal injury, read and follow these instructions:**

1. Use only the battery pack bundled in package box of your cordless telephone.  
FOR HANDSET:  
3.6V 600mAh Ni-Cd rechargeable battery:

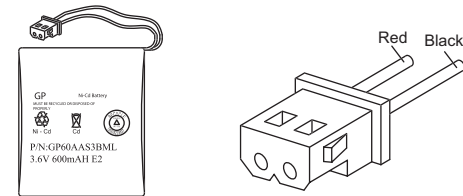

2. Do not open or mutilate battery pack because released electrolyte is corrosive and may cause damage to the eyes and skin. It may be toxic if swallowed.
3. Exercise care in handling battery pack in order not to short a battery with conducting materials such as rings, bracelets and keys. The battery or conductive material may overheat and cause burns.
4. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
5. Observe proper polarity orientation between the battery pack and battery charger.

##### FCC RULES

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment complies with part 68 of the FCC rules. On the bottom of the Base of this equipment is a label that contains, among other information, the FCC Registration Number, Ringer Equivalence Number (REN) and the Universal Service Order Code (USOC), which is RJ-11C, for this equipment. You must, upon request, provide this information to your telephone company. In most, but not all areas, the sum of the REN'S of all devices connected to one line should not exceed five (5.0). to be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN or your calling area.

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone equipment, disconnect from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.  
This equipment is hearing aid compatible.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's. To minimize or prevent such interference, the Base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the Base station.
- Increase the separation between the equipment and receiver.
- Do not connect receiver & the equipment into an outlet with the same circuit.
- Consult the dealer or an experienced technician for help.

#### INTRODUCTION

Congratulations on your purchase of Disney's Goofy cordless telephone. This quality product is a 900MHz cordless telephone which is a replica of Goofy. Please read this operation manual before using your new telephone and keep it on hand for future reference.

#### FEATURES

- Choice of a conventional Ringer/Animation/OFF
- Battery low indicator
- Cordless Handset
- 40-Channel auto/manual scan
- Mute function

- Digital security codes
- Page function (Handset locator)
- Auto release tel-line while out of range for 10 seconds.
- Memory storage
- Speed dial
- Up to 5 hours talk time
- Tone/Pulse switchable
- Battery standby up to 3 days
- Hearing aid compatible
- Last number redial
- FCC approved
- ETL approved

#### INSTALLATION INSTRUCTIONS

##### 1. The Base instruction: See Figure 1

- 1.1 Choose an area near an electrical outlet and a telephone jack. Your Goofy cordless telephone uses a standard modular jack RJ11C. Adapters which permit your Goofy telephone to be used with the old 4-prong jacks are available from most telephone accessory stores. If your home has neither a modular jack nor 4-prong wall socket, you may ask your telephone company to install a modular jack type USOC: RJ11C. The telephone company will make a one time charge for this installation.
- 1.2 The telephone line cord has a snap-in plug at each end. To connect your telephone, insert one end of the line cord into the jack at the rear of the Base. Plug the other end into a wall jack. Make sure the plugs snap securely into place. See Figure 1.
- 1.3 Plug the DC connector into the DC jack at the rear of the Base and plug the AC power adapter into an electrical outlet. See Figure 1. The POWER LED will light up to indicate power on.  
**CAUTION:** Use only the AC adapter provided with your Goofy telephone. This is a Class 2 AC adapter, specifically designed for use with this telephone.  
**NOTE:** Connect the power to the Base BEFORE placing the Handset in the cradle.
- 1.4 There are two types of telephone systems in use. The most common is called TONE dialing. The other is called PULSE or ROTARY dialing. Contact your telephone company to find out which system is used in your area. Your Goofy telephone will operate in either system. Simply set TONE/PULSE MODE switch on Base (see Figure 1) to TONE for tone dialing or PULSE for pulse dialing.

1.5 RINGER SELECT SWITCH (RINGER/ANIMATION/OFF), Figure 1.

- Set the switch to OFF: the ringer on Base will not be activated for an incoming call.
- Set the switch to ANIMATION: Goofy will be activated and the sound will play when an incoming call is coming.
- Push the switch to RINGER: A conventional telephone ring will sound from the Base for an incoming call.


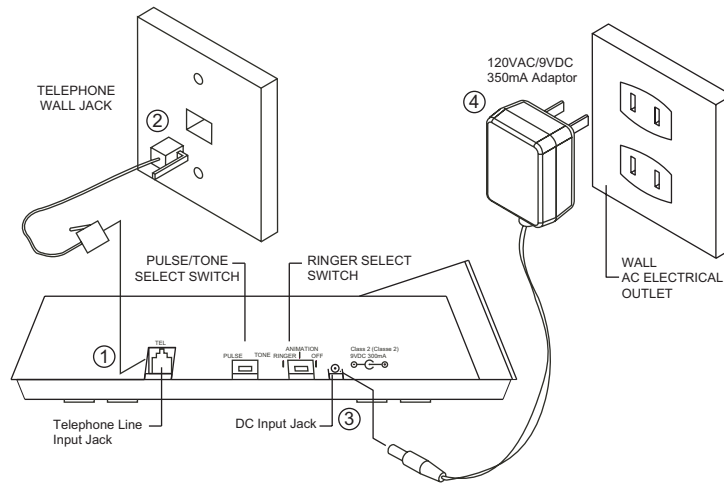 


Figure 1 : Back View of Base

**CAUTION:**

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in a damp location unless the jack is specifically designed for damp locations.
- Never touch un-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

 Figure 2 : How to Install Battery

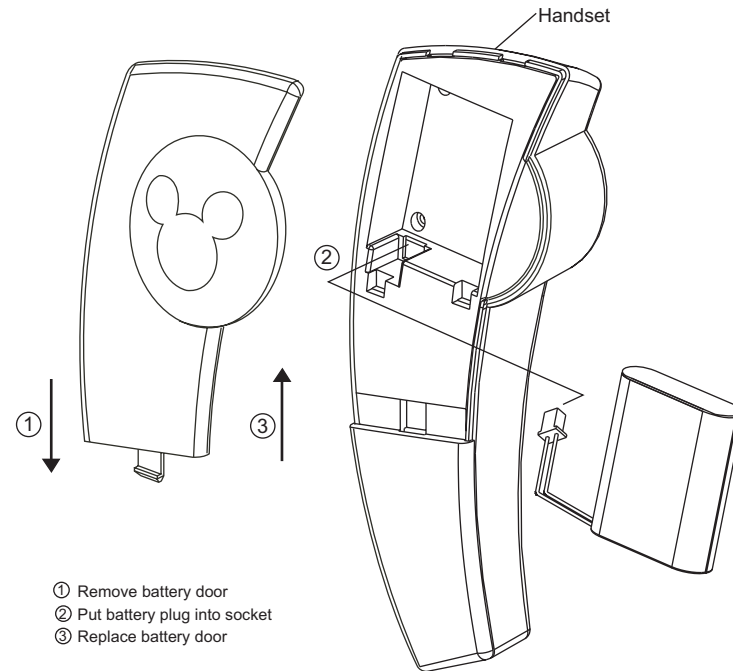

**2. Handset installation: See Figure 2.**

- Remove the battery case by pressing on the ridged line and sliding downward.
- Place the battery pack in the battery compartment, put battery plug into socket located at the left top of the battery compartment.
- Replace the battery cover by sliding it into place.

### 3. Preparation of some items before use

- 3.1 Charge the battery pack before use. The battery of your telephone must be charged for 24 hours before using your phone for the first time. Once you begin using it, the batteries will charge automatically whenever the Handset is in the Base cradle.

**IMPORTANT:** Whenever the Handset battery is removed, the Handset must be reinitialized on the Base after the battery is replaced.

- 3.2 ID (identification) code setup: Pick up Handset and put it into the cradle. The CHARGE LED on Base will light, ID code setup between the Handset and the Base is completed after hearing a “Beep” sound from the Handset.

**CAUTION:** You should go to setup ID Code between Base and Handset again, if below cases have happened:

- The cordless phone is used for the first time.
  - Base 9V/350mA DC supply has been disconnected and then switched on again.
  - Rechargeable battery has been removed from the Handset, and then is connected again.
- Check for a dial tone. After the batteries are charged, pick up the Handset and press the TALK button. The IN USE indicator should light up, and you should hear a dial tone.

### 4 Handset: See Figure 3

- 4.1 Press the DEMO button at any time to see Goofy move and talk.
- 4.2 Page function: A “Beep” sound will be heard from the Handset when the PAGE button is pressed down on the Base. This will help to locate the Handset easily.

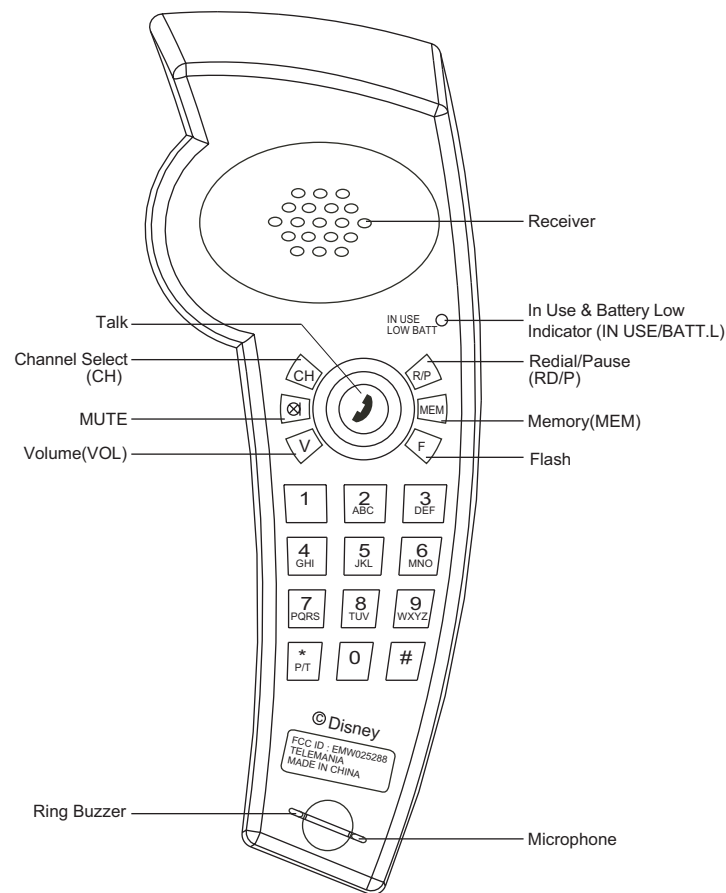 


Figure 3 : Handset

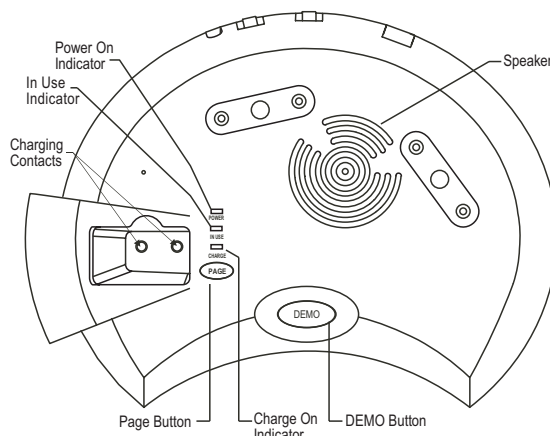 


Figure 4 : Top View of Base

#### 5. Operating the telephone: See Figure

Before operating the telephone, make certain the Handset has been properly charged. If the Handset is away from the Base for a long time, the IN USE/LOW BATT LED (see figure 3) on the Handset will flash and a "Beep" sound will heard from the ring buzzer in every 16 seconds. This means the battery needs to be charged. Put the Handset back onto Base. The CHARGE LED (see figure 4 ) will light to indicate that the battery is recharging. A total charge takes approximately 10 hours.

**IMPORTANT:** Whenever the Handset battery is removed, the Handset must be reinitialized on the Base after the battery is replaced.

- 5.1 Answering an incoming call: When incoming call is coming (if the Handset is not set on Base cradle, the buzzer on the Handset will sound). Press TALK button. Both IN-USE LED on the Handset (see figure 3 ) and the Base (see figure 4 ) will light up, indicating that telephone line has been connected.  
You can press the VOL button (see figure 3) to select the appropriate sound level (high-medium-low) during conversation.  
You can press the CH button one time (see figure 3) to change the channel if you feel the channel is noisy. CHARGE LED will turn off while channel is scanning.
- 5.2 Outgoing call: Press TALK button (see figure 3). IN-USE LED on the Handset will light up. After you receive the dial tone, you can dial the phone number you want to call.
- 5.3 Redial and Pause: Press TALK button. IN-USE LED turns on. After you receive the dial tone, press RD/P button (see figure 3). The last number will redial out. Enter pause by pressing RD/P button during dialing if required.

- 5.4 Mute function: During TALK ON mode pressing ☒ (MUTE) button (see Figure 3) will mute microphone. Pressing ☒ (MUTE) or other number button again will release muting.
- 5.5 Memory storing: The Goofy Cordless telephone can store ten 16 digit telephone numbers. Press MEM button (see figure 3), then press the telephone number you want to store. After this, press MEM then press the location (0~9) you want to store the telephone number in.
- 5.6 Memory dialing: Press the TALK button. After you receive the dial tone, press the MEM button. Then press the location number (0~9). The telephone number in that location will dial out.
- 5.7 Power down detection and memory retain: For 30 minutes while 120VAC supply power is disconnected, the Base can keep memory information with no loss.
- 5.8 Soft button P/T: At pulse dialing mode. Press P/T button (see figure 3). All following numbers you want to call will dial out with DTMF formation.
- 5.9 Automatic release to telephone line: When the radio link between Handset and Base is disconnected incidentally (not by TALK OFF operation), Base will release the telephone line after 10 seconds automatically.

#### TROUBLE SHOOTING

If you experience difficulty operating your cordless phone, try the suggestions below.

##### The unit will not operate/no dial tone:

- Make sure IN-USE LED is lit.
- Make sure AC adapter is plugged into Base and wall outlet.
- Make sure telephone line cord is plugged into wall jack.
- Make sure Handset battery is fully charged.
- Make sure you have selected correct dialing mode, Tone (touch) or Pulse (rotary).
- Make sure you are within usable range of the Base station.
- Reset security code by placing Handset in Base for 5-10 seconds.

##### If the phone does not ring when you receive a call:

- Make sure the RINGER select switch on Base is not on OFF position.
- Make sure AC adapter is plugged into Base and wall outlet.
- Make sure telephone line cord is plugged into wall jack.
- Make sure you are within usable range of the Base station.
- You might have too many extension phones on your line. Try unplugging a few.

##### If there's noise, static, interference or other calls heard while using Handset:

- Try changing channels.
- Make sure you are within usable range of the Base station.
- Make sure AC adapter is not plugged into wall outlet with other appliances.
- Try relocating Base to another location.
- Make sure Handset battery is fully charged.

**If the phone will not hold charge:**

- Make sure charging contacts on the Handset and Base are free of dust and dirt. Clean contacts with a soft cloth.
- Make sure CHARGE LED on Base is lit when Handset is in cradle.
- If necessary, replace Handset battery. (See Handset Battery Charging)

**If there's difficulty in placing or receiving calls:**

- Move closer to Base and try again.
- If moving closer doesn't work, you may have lost security code. Reset code by placing Handset back on Base for 5-10 seconds. (See 3.2 ID Code Setup)
- Make sure you have selected correct dialing mode, tone or pulse.
- Make sure AC adapter is not plugged into wall outlet with other appliances. Disconnect for 5-10 seconds then reconnect. Place Handset back on Base and then re-plug AC adapter.
- Make sure Handset battery is fully charged.

**IMPORTANT FCC AND TELEPHONE COMPANY INFORMATION**

1. This equipment complies with part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and Ringer Equivalence Number (REN) for this equipment. If requested, this information must be provided to the telephone company.
2. This equipment uses the following USOC jacks: RJ11C.
3. The REN is used to determine the number of devices which may be connected to the telephone line. Excessive REN's on the telephone line may result in the device not ringing in response to an incoming call. In most, but not all areas, the sum of the REN's should not exceed five (5.0). To be certain of the number of the devices that may be connected to the line, as determined by the total REN's, contact the telephone company to determine the maximum REN for the calling area.
4. If this equipment causes harm to the telephone network, the telephone company can disconnect your service. They will try to notify you in advance of such disconnection. However, if advance notice is not practical, the telephone company will notify you as soon as possible, and advise you of your right to file a complaint with the FCC.
5. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice for you to make the necessary modification to maintain uninterrupted service.
6. If you have any difficulty with your KASH N GOLD-TELEMANIA product, please contact:

**KASH N GOLD LTD.  
1 Trade Zone Court,  
Ronkonkoma, NY 11779  
U.S.A  
1-800-354-8785**

for repair and (or) warranty information. If the trouble is causing harm to the network, the telephone company may request you to remove the equipment from the network until the problem is resolved.

7. This equipment cannot be used on telephone company-provided coin service. Connection to Party Line Service is subject to State tariffs.
8. This equipment is hearing-aid-compatible.
9. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received including interference that may cause undesired operation.