

7" Internet Tablet

In the box

- Tablet
- User Manual
- USB Cable
- AC Adapter

Location of controls

- Front Camera
- Home Button
- Speaker
- Headset Jack
- USB Port
- MicroSD Card Slot
- Power Lock/Unlock
- Volume

Basic operation

Charging the battery:

Charge the tablet to a wall outlet using the included AC adapter.

The tablet may also be charged by connecting it to a computer using the USB cable; however, it will take much longer to fully charge.

Turning on the tablet:

Press and hold the **Power** button until the startup screen appears.

Turning off the tablet:

Press and hold the **Power** button until the Power app dialog appears.

Unlock (enter) the tablet:

Slide the "Lock icon" to the right.

Lock (standby) the tablet:

To lock or unlock the tablet, briefly press the **Power** button. Lock the device to conserve the battery.

Power app:

For quick power-off, you can select the "Power" app to turn off the tablet.

Specifications:

- Operating System: Android 4.0, Ice Cream Sandwich
- Processor: ARM CORTEX-A8
- Processor Speed: 1 GHz
- RAM: 512MB DDR3
- Graphic accelerator: OpenGL ES 2.0 (D3D game support)
- Display:
 - 7" capacitive multi-touch screen
 - Display resolution: 800x480 (16:9)
 - 4-way auto rotation
- Network:
 - WiFi (802.11 b/g/n)
- Memory:
 - Internal Memory: 4GB
 - External Memory: Micro SDHC and slot (max 32GB)

Approximate play times:

- Music: up to 10 hours (90% / backlight off)
- Video: 4.5 - 5 hours (90% / backlight off)
- Playback: 7 hours (90% / backlight off)
- Web browsing: 5 - 6 hours
- Standby time: 60 - 70 hours

Battery life:

- Turn off all apps if not in use.
- Use the tablet display to off to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app.

Home screen

On the Home screen, you can place app shortcuts and widgets.

Home screen (left)

- Bookmarks widget
- Photo gallery widget
- Calendar widget
- Music widget

Home screen (center)

- Power widget
- Polaird widget
- Status bar

Home screen (right)

- Access apps & widgets screen

Placing apps & widgets on the Home screen

Press and hold an app or widget to place it on one of the Home screens.

Removing shortcuts or widgets

Press and hold the app or widget and slide it as shown below.

Connecting to Wi-Fi & downloading apps

Status Bar

The Status Bar is available on all screens and apps of the tablet.

Browser

Email

Polaird widget

Online Help

Wi-Fi Setup

Download Appstore

Polaird widget

Wi-Fi Setup

Download Appstore

USB connected

Select copy files to/from your computer

Polaird widget

Online Help

Wi-Fi Setup

Download Appstore

USB connected

Select copy files to/from your computer

Polaird widget

Online Help

Wi-Fi Setup

Download Appstore

USB connected

Select copy files to/from your computer

Downloading the Amazon Appstore

- After successfully connecting the tablet to Wi-Fi, select "Download Appstore" on the Polaird widget.
- Select "Download now" to download the Amazon Appstore to the tablet.
- Click here.
- Select "Amazon_Appstore_release.apk" from the Pop-up window.

Installing the app

- Select "Install" to install the app.
- The Amazon Appstore appears on the Apps screen.

Downloading and installing apps:

After downloading the Amazon Appstore, it is possible to download and install apps directly to the tablet - these apps will appear on the Apps screen.

Select "Appstore" on the Apps screen and create an Amazon account (setting up the account is free). Once an account is created, it is easy to purchase, download and install apps directly to the tablet.

Games

Sometimes, while playing games, the g-sensor on the tablet may not function correctly. This results in games not being controllable. To correct this problem, follow the steps below:

- Open "Settings."
- Select "Display."
- Select "Accelerometer Coordinate System."
- The default setting is "Default Coordinate System." This setting should work for most games.
- In case your game is not functioning properly, select "Social coordinate system to support some other games."

Recommended Apps

There are thousands of apps available on the Amazon app store, below are apps we recommend to download and install to the tablet.

- Amazon MP3**: Purchase and wirelessly download music directly to the tablet.
- Netflix**: Stream movies and TV shows. (Subscription charges may apply).
- Skype**: Video chat, VOIP calls and more.

Games

Sometimes, while playing games, the g-sensor on the tablet may not function correctly. This results in games not being controllable. To correct this problem, follow the steps below:

- Open "Settings."
- Select "Display."
- Select "Accelerometer Coordinate System."
- The default setting is "Default Coordinate System." This setting should work for most games.
- In case your game is not functioning properly, select "Social coordinate system to support some other games."

Recommended Apps

There are thousands of apps available on the Amazon app store, below are apps we recommend to download and install to the tablet.

- Amazon MP3**: Purchase and wirelessly download music directly to the tablet.
- Netflix**: Stream movies and TV shows. (Subscription charges may apply).
- Skype**: Video chat, VOIP calls and more.

Games

Sometimes, while playing games, the g-sensor on the tablet may not function correctly. This results in games not being controllable. To correct this problem, follow the steps below:

- Open "Settings."
- Select "Display."
- Select "Accelerometer Coordinate System."
- The default setting is "Default Coordinate System." This setting should work for most games.
- In case your game is not functioning properly, select "Social coordinate system to support some other games."

Recommended Apps

There are thousands of apps available on the Amazon app store, below are apps we recommend to download and install to the tablet.

- Amazon MP3**: Purchase and wirelessly download music directly to the tablet.
- Netflix**: Stream movies and TV shows. (Subscription charges may apply).
- Skype**: Video chat, VOIP calls and more.

Camera and video chat

Front facing camera

Select **Camera** on the apps screen to go to camera mode. It is possible to take pictures or videos with the built-in, front facing camera.

Camera app

- Access pictures & videos
- Zoom in
- Take picture / video
- Settings
- Zoom out

Camera mode

- Return to camera mode
- Share pictures to Email, Facebook or Twitter
- Note: To use the feature you must have a Facebook or Twitter account and be logged in. For Email, an account must be set up for the option to appear.

Video chat

Use the built-in, front facing camera to video chat with friends and family. There are many different services that offer video chat however we recommend downloading the Skype app from the Amazon Appstore.

Sharing pictures

Select the picture to go to the picture folder of the gallery app where all the pictures and videos are stored.

*625mm

Web browsing

Select "Browser" on the Home or Apps screen (You must connect to Wi-Fi before accessing the web).

Setting up e-mail

Select "Email" on the Home or Apps screen and follow the instructions to set up your email account on the tablet. You must connect to Wi-Fi before accessing or setting up email accounts.

Photo gallery

Access pictures and videos stored on the tablet.

Viewing pictures:

Pinch to enlarge and swipe to go previous or next picture.

Watching videos:

While playing a video, tap the display to access the video controller, tap the display again to hide the controller.

Share pictures to Email, Facebook or Twitter:

To utilize the features you must have a Facebook or Twitter account and be logged in. For Email, an account must be set up for this option to appear.

Share:

Share the selected picture through Email, Facebook, or Twitter.

Trash:

Delete the selected picture.

Menu:

Slideshow, edit and more.

Transferring and managing files

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Inserting Micro SD card

The tablet supports Micro SD cards up to 32GB (not included).

- Insert the card face up into the card slot until it clicks and locks into place.
- Once the card is mounted, the card icon appears on the Status Bar.

Unmount & remove the Micro SD card:

- Open "Settings."
- Select "Storage."
- Select "Unmount Micro SD card"
- Tap "OK" to remove the card from the tablet.
- To remove the card, gently push it in until it pops out.

Connecting the tablet to a PC or Mac:

- Connect the included USB cable to the "USB" port of the tablet and USB port of the computer.
- The "USB connected" screen appears, select "Turn on USB storage," then select "OK."

File Manager

Copy, move or delete a file or folder:

- Press and hold a file or folder until the options window appears, then select an option from the options window.

Micro SD card

Tip: Transfer and store media files such as music, pictures and video on to a Micro SD card and avoid placing these types of files in the internal memory of the tablet. This will conserve the internal memory, and allow you to download more apps.

Browsing files

File Manager

Copy, move or delete a file or folder:

- Press and hold a file or folder until the options window appears, then select an option from the options window.

Micro SD card

Tip: Organize your media (pictures, videos and music) by creating folders such as "Pictures," "Videos" and "Music" on the Micro SD card as shown below.

Conserving Internal Memory!

Transfer media files to "Removable Disk" (Micro SD card)

File Manager

Copy, move or delete a file or folder:

- Press and hold a file or folder until the options window appears, then select an option from the options window.

Micro SD card

Tip: Organize your media (pictures, videos and music) by creating folders such as "Pictures," "Videos" and "Music" on the Micro SD card as shown below.

Settings

Settings app:

Customize and select options to increase battery performance, Wi-Fi options, manage apps and more.

Online help

Select "Online Help" on the Apps screen to access the online help.

Resetting

In the event that the tablet freezes or does not function properly, by connecting the problem by pressing the RESET button located on the back panel (shown below).

Restore

Restore the tablet to the factory default settings.

Legal information

FCC Part 15B:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15B of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PIR Holdings, LLC, its licensees and affiliates, fully support all electronic waste recycling programs. As responsible stewards of the environment, and to avoid waste, established laws, you should properly dispose of this product or appliance with all applicable regulations, directives or other governments in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to PIRLINK.com or www.polaroid.com and reference About Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

FCC RF Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Limited Warranty

This product as supplied and distributed new by AIT, Inc. (AIT) to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from the date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
 1-877-769-8481 (Toll Free)
 631-polaroid@bellsouth.com
 Monday - Thursday: 9AM - 5PM (EST)
 Friday: 9AM - 3PM (EST)

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if repair by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.
 Attention: Customer Service (2nd Floor)
 14-C 3rd Street
 Brooklyn, NY 11232

Polaroid

internet tablet