

Mobile Internet Device

MT8010

User's Manual



TABLE OF CONTENTS

Introduction	1
Regulatory Information: FCC Part 15	2
Important Safety Precautions	3
Controls and Connections	4
Main Features	5
Basic operation	5
Charging.....	5
Turning on/off the tablet.....	6
Unlock (enter) / Lock (standby) the tablet	6
Transferring and managing files	6
Conserve Internal Memory	6
Inserting Micro SD card.....	7
Unmount & remove the Micro SD card.....	7
Connecting the device to a computer.....	7
Home screen	8
Applications screen	9
Recent screen	10
Changing the wallpaper.....	10
Creating and using folders	11
Using widgets	11
Notifications.....	12
Using the On-screen Keyboard	12
Connecting to Wi-Fi	13
Setting up Wi-Fi.....	13
Browsing	14

Email	15
Camera	15
Taking Photos and Recording Videos	16
Gallery	17
Viewing pictures	17
Share pictures to Email	18
Watching videos	18
Slideshow	18
Music	19
Movie Player	20
File Browser	21
AppInstaller	22
Downloads	22
Calendar	23
Clock	24
Calculator	25
Settings	26
Resetting	27
Restore	28
Frequently Asked Questions	28
Specification	30

Introduction

Thank you for purchasing this device.

This device enables you to surf the internet via wireless connection with multimedia playback.

This manual contains important safety information and operation instructions, so please read all the instructions carefully before using the device and keeps it for future reference.

We have done our best to produce a complete and accurate manual; however, we cannot ensure there are no errors or omissions. We also have no responsibility for damages or loss of data caused by improper operation.

The instruction manual is subject to change for improvement without notice.

Trademarks and trade names used in this user's manual are owned by their respective companies or organizations.

Regulatory Information: FCC Part 15

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Contact:

Chuck zhu
Nextar, Inc., 1661 Fairplex Dr., La Verne, CA 91750
Tel: (909) 392-8282
Fax: (909) 392-8283
www.nextar.com
E-mail: chuck.zhu@nextar.com

Important Safety Precautions

Always follow these basic safety precautions when using your device. This will reduce the risk of fire, electric shock, product damage and personal injury.

- **Warning:** Do not remove the cover or back to reduce the risk of electric shock. There are no user-serviceable parts inside. Refer servicing to qualified personnel.
- **Warning:** Do not expose the device to rain or moisture to prevent fire or electric shock hazard.
- Do not use the earphone at a high volume to prevent hearing damages.
- Do not expose the device to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the unit.
- Keep the device away from direct sunlight and heat source such as radiators or stoves.
- Do not place the device on unstable cart, stand, tripod, bracket or table. The unit may fall, resulting in possible damage or injury.
- Never place heavy or sharp objects on the LCD panel or device.
- Only use the AC adapter included with device. Using any other adapter will void your warranty.
- Protect the power cord from being walked on or pinched particularly at plugs, receptacles and the point where the cord attached to the device.
- Unplug the power from the outlet when the unit is not in use.
- **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cleaning

 
- Before cleaning the device make sure it is turned off.
- Never spray or pour liquid directly onto the screen or plastic casing.
- To clean the LCD screen, wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles. If it is still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner on a clean, soft, lint-free cloth to clean the screen.
- To clean the plastic casing, use a soft, dry cloth. If it is still not clean, apply a small amount of non-ammonia, non-alcohol based, mildly

non-abrasive detergent on a clean, soft, lint-free cloth to clean the surface.

- To clean the device, use a soft, dry cloth.

Disclaimer: Authorized Dealer does not recommend the use of any ammonia or alcohol-based cleaners on the LCD screen or plastic casing. Some chemical cleaners have been reported to damage the screen and/or display case. Authorized Dealer will not be liable for damage resulting from the use of any ammonia or alcohol-based cleaners.

Controls and Connections

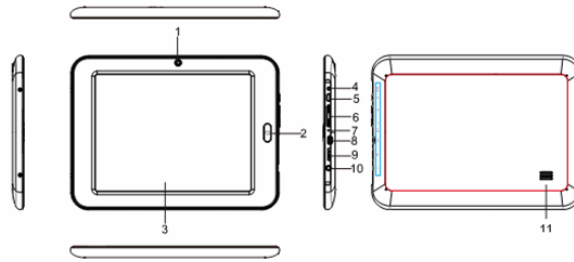

- | | |
|--|-----------------------|
| 1. Front camera | 7. Microphone |
| 2. Home button | 8. Mini USB port |
| 3. Display screen | 9. Micro SD card slot |
| 4. DC input socket | 10. Earphone jack |
| 5.  Power/Lock button | 11. Speaker |
| 6. Volume key +/- | |

Mai Features

- 8" capacitive touch screen,800*600 4:3
- Decorative appearance, good quality
- Android 4.0operating system
- Internet via WiFi connection
- Super internet appliances and multimedia player
- Download, install and use Android applications.
- Use built-in camera to take photos or record videos.
- 4 way screen auto rotation

Basic operation

Charging

Your device comes with a Lithium polymer integrated rechargeable battery.

New batteries are not charged when shipped. Before you start using your device, you need to charge the battery.

Follow the steps below to connect your device to the power outlet and charge the battery.

- Plug one end of the included AC power adaptor into the power jack on your device.
- Plug the other end into a power outlet.



Battery tips

- Turn off Wi-Fi when it's not in use.
- Lock the tablet (the display is off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app.

NOTE

- The mini USB cable connected to PC could not charge the device, only for transferring files and OTG function.
- If not use this device for a long time, in order to avoid damage caused by battery excessive consumption, please be sure to make a battery charge and discharge once within one month to prevent battery from running down.
- With built in Lithium polymer batteries, it has to be charged regularly. The battery damage caused by excessive consumption of polymer battery will not be covered by guarantee. If use the charger which is not exclusively equipped for this machine, the problem caused by it also not be covered by guarantee.

Turning on/off the tablet

- Press and hold the Power  button until the startup screen appears.
- Press and hold the  button until the Power off dialog appears.

Unlock (enter) / Lock (standby) the tablet

- Slide the "Lock icon" to the right .
- To lock or unlock the device, briefly press the  button (Lock the device to conserve the battery)

Transferring and managing files

It is possible to manage and transfer media files to the tablet by connecting it to your computer.


Conserve Internal Memory

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Tips: Transfer and store media files such as music, pictures and video on to a Micro SD card and avoid placing these types of files in the internal memory of the device - this will conserve the internal memory, and allow you to download more apps.

Inserting Micro SD card

The device supports Micro SD cards up to 32GB (not included).

1. Insert the card face up into the card slot until it clicks and locks into place.
2. Once the card is mounted, the card icon appears on the Status Bar.
3. To access the Micro SD card, select "File Manager"  from the Applications screen.

Unmount & remove the Micro SD card

1. Open "Settings"
2. Select "Storage"
3. Select "Unmount Micro SD card"
4. It is now safe to remove the card from the device.
5. To remove the card, gently push it in until it pops out.

Note:

- Do not use any force while inserting a memory card.
- Make sure to unmount the card before taking it out of the device.
- When no micro SD card inserted, your device will read the internal memory.

Connecting the device to a computer

 
1. Connect the included USB cable to the "mini USB port" of the device and USB port of the computer.
2. The "USB connected" screen appears, select "Turn on USB storage", then select "OK".

Note: While connected to the computer, you can also access the "USB connected" screen from the Status Bar.

3. The "Autoplay" window appears on your computer's display, select "INTERNAL" to view and manage files on the device, or if a Micro SD card is inserted, select "Removable Disk" to manage files on the card.
4. Copy media files from your computer to the Micro SD card.

5. Select "Turn off USB storage" on the device to disconnect it from the computer.

Home screen

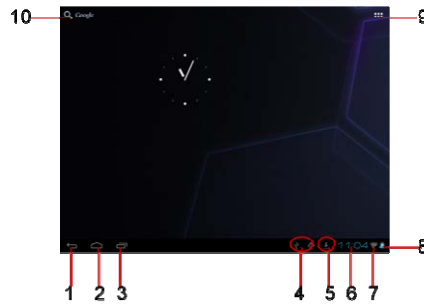


On the Home screen, swipe left or right to access the extended Home screens.

1. Back: Tap to return to Previous screen
2. Home: Tap to enter Home screen
3. Recent: Tap to open a list of thumbnail images of applications you've worked with recently
4. USB or SD card if it's connected
5. Notification area: Information of email, downloading, update and so on.
6. Clock display

7. Wi-Fi connected
8. Battery status
9. Applications icon: Tap to enter applications screen
10. Tap to enter Google search

Applications screen




The Applications screen contains all of the apps and widgets you have installed on device. If you would like to add an app or widget to the home screen from the Applications screen, tap the **Applications Icon** , tap and hold the application or widget you would like to move, then drop it on any open spot or folder on the home screen.

Recent screen



The Recents screen provides a way to easily switch between your recently used applications. This provides a quicker, more efficient way of switching between applications


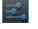
- When you tap the Recents Key , the most recently used applications will appear on a vertical screen.
- You can swipe up and down on this screen to see your recently used apps.
- To switch to an application, simply tap it.
- To remove an application from the Recents screen, swipe left or right on the app.

Changing the wallpaper

To change the wallpaper, tap and hold any open spot on the screen. A window will pop up. Choose the wallpaper source from the following options:

- Gallery: Choose from photos that you have taken with the Camera or saved in the Gallery.
- Live Wallpapers: Choose from a list of animated wallpapers.

- Wallpapers: Choose from several default wallpaper images.

You can also change the wallpaper by tapping **Applications Icon**  > Settings Icon  > Display > Wallpaper.


Creating and using folders

Folders are a great way to organize apps on the home screen. You can group several apps together in one folder by simply dragging and dropping one app icon onto another.

- Create a folder: On the home screen, tap and hold an app you want to group, then drag it to an app that you would like to group it with and drop it on top of that app. A folder will be created automatically. You can add additional apps to a folder by repeating the same steps.
- Rename a folder: Tap and open the folder you want to rename. On the bottom of the open folder, tap Unnamed Folder and enter your preferred name for that folder.
- Edit a folder: To remove apps from a folder, tap the folder to open it. Tap and hold the app you want to remove, and drag it to any open spot on the home screen or to a different folder. Remove all apps in a folder to delete that folder.
- Reorganize folders: Tap and hold the folder you would like to move, drag it to any open spot on the home screen and drop it.

Using widgets

Widgets are shortcuts to applications that bring your favorite apps and content right to the home screen, without having to launch apps. Widgets are moveable and some are resizable.

- To add widgets to your home screen, tap **Applications Icon**  > Widgets. Tap and hold the widget you would like to add, then drag the widget to any open spot on the home screen and drop it.
- To reorganize your widgets, tap and hold the widget you would like to move, then drag the widget to any open spot on the home screen and drop it.
- To remove widgets from your home screen, tap and hold the widget you would like to remove, then drag the widget to **Remove**.

You can expand some widgets to show more content or shrink them to save space. To resize a widget, tap and hold the widget, release the widget then drag the corners left and right or up and down to expand or shrink the widget.



Notifications

Notifications are short messages that you can access from the Status Bar. They provide updates and reminders without interrupting you. You can open notifications by swiping up on the Status Bar. If you tap a notification, the associated app will open.



Using the On-screen Keyboard

The device allows you to enter text using an on-screen keyboard. Some apps may open the keyboard automatically. In other apps, you may need to tap a text field in order to access the keyboard.


Typing Basics




- Tap the keys on the keyboard to start typing. The characters you type will appear in the text field above the keyboard.
- To erase characters, use the **Delete Key** .
- To close the keyboard, tap the **Back Key**  located on the bottom left in the navigation menu.
- To edit text, tap and hold the text you want to edit. Use the menu commands from the pop-up window to cut, copy and paste text.

Numbers, Symbols and Other Characters

- To switch to the numbers, symbols and other characters keyboard, tap the **Symbols Key** .
- To view additional symbols, tap the **Alt Key**  on the symbols keyboard; tap it again to switch back.

Adjusting Keyboard Sound

You can turn on/off the keyboard sound in the keyboard settings. The keyboard sound is on by default. To turn off the sound, launch the keyboard by opening an app that requires using the keyboard. On the lower right side of the keyboard, tap Keyboard Settings Icon  > Android keyboard settings, then uncheck the box next to Sound on keypress.



You can also turn on/off the keyboard sound in **Settings** by tapping **Applications Icon**  > **Settings Icon**  > **Language & input** > **Android Keyboard Settings Icon** . Uncheck the box next to Sound on keypress to turn off the sound; check the box to turn it on.

Connecting to Wi-Fi

Before you can surf the Internet, send and receive emails, download content and applications etc, you must join a Wi-Fi network that is connected to the Internet.

 
For Wi-Fi networks that are not secured, you can easily connect to them and access the Internet freely. However, for Wi-Fi networks that are secured with password, you need to have the password to access the Internet.

Setting up Wi-Fi




- Tap **Applications Icon**  > **Settings Icon**  > **Wi-Fi**
- If Wi-Fi is not on, tap and slide the switch to On and wait for device to detect nearby networks
- Tap the name of the network you want to be connected.
- If required, enter the correct password and select "Connect".
- If you have a closed network, simply tap Add Network to add your Wi-Fi network.
- When the device is connected to a network, the Wi-Fi icon will appear on the Status Bar and "Connected" will appear under the selected network.

Note: To conserve battery life, turn off Wi-Fi when not connected to a network.

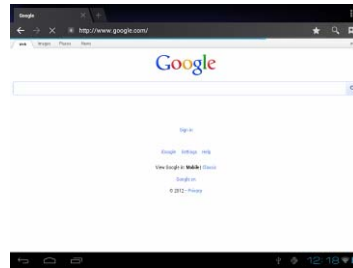Browsing

 


The device is equipped with a full HTML Browser, which allows you to enter the internet.



- On Applications screen, tap **Browse**  to enter the default webpage.
- Tap the input field and enter the web address in the URL field using the onscreen keyboard and tap  to open.
- On the opening webpage, tap  to open the menu options and make desired settings.

Note: You must join a Wi-Fi network before accessing the web via the browser application.

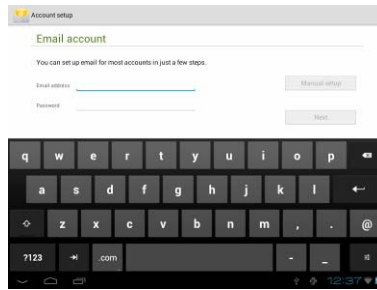Email




Use Email to view and manage all your email accounts in one application.

 
- From Applications screen, select **Email** .
- Input your Email address and password and tap **Next**.
- Then follow the instructions to set up your email account on the device.
- Enter emailbox interface, tap Menu  to show the menu options and make email settings.





Note: You must join a Wi-Fi network before accessing or setting up email accounts.

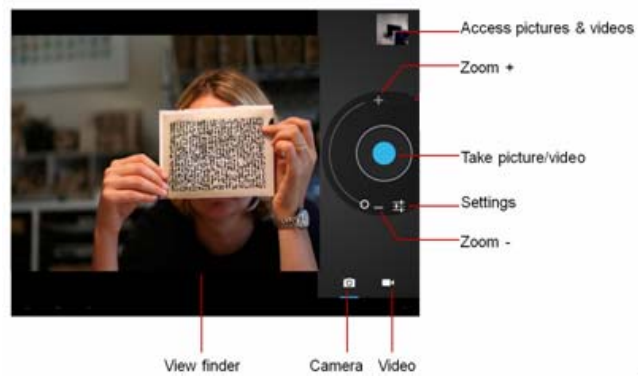



Camera

Select **Camera**  on the applications screen to go to camera mode. It is possible to take pictures or videos with the built-in camera.


Taking Photos and Recording Videos

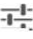


- To take photos, make sure the mode is set to Camera by tapping the Camera  on the bottom of the screen. Using the display as a viewfinder, compose your photo by aiming the lens at the subject. Then tap Capture  to take a photo.
- To record a video, make sure the mode is set to Video by tapping the Video Camera  on the bottom of the screen. Tap Record  to start and stop recording.


- To adjust the camera settings, tap Camera Settings . To zoom in or out, swipe your finger around the Zoom Circle . To zoom in, swipe toward . To zoom out, swipe toward .

Gallery

 Select  to view and organize photos and videos taken with the Camera. Gallery will also show video files and photos transferred to the device.

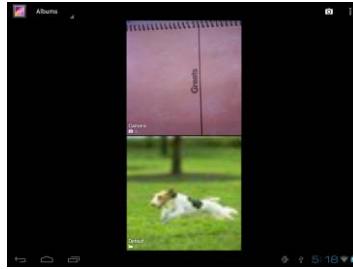

Viewing pictures

Select **Gallery**  on Applications screen. Select a category and tap a picture to view. Pinch to enlarge and swipe left or right to go to previous or next pictures.

Share pictures to Email

To utilize this feature, an Email account must be set up for this option to appear.



Share: Share the selected picture through Email.




Trash: Delete the selected picture




Menu: Slideshow, Edit, Rotate left, Rotate right, Crop, Set picture as and Details.

 
Watching videos

Select **Gallery**  on Applications screen. Select a category and tap a video to view. While playing a video, tap the display to access the video controller, tap the display again to hide the controller.


Slideshow

Slideshow allows you to view your photos in an animated setting. On photo thumbnail list screen, tap  to start slideshow of your photos in the Gallery.

Music

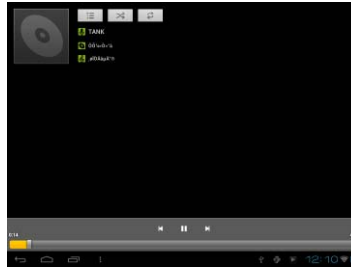


The **Music** application lets you play digital audio files stored in the internal memory or memory card.






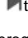
- From Application screen, tap **Music**  to enter music library.
- The music is displayed as different categories such as **Artists**, **Albums**, **Songs** and **Playlists**.
- Select a category and tap a song to start playback.


On music library interface, select a song and hold to pop up a window, then you can

- Play the selected song
- Add to playlist
- Delete the song
- Search song from music library or internet.

While listening to a song,

- Tap  to select songs from the list.


- Tap  to turn shuffle on or off.
- Tap  to cycle through the repeat modes: **Repeat all songs, Repeat current song, Repeat is off.**
- Tap  or  to pause or resume the song playback.
- Tap  or  to go to previous or next song.
- Drag the progressive bar to the desired playing point.

On playing interface, tap , then there will pop up a menu bar.

- Tap **Library** to go to music library
- Tap **Party shuffle** to make Party shuffle on or Party shuffle off.
- Tap **Add to playlist** to add a playlist.
- Tap **Delete** to delete the song.

Movie Player







The **Movie Player** application lets you play video files stored in the internal memory or memory card.


- From Applications screen, tap **Movie Player** 
- Select video file from the right source.
- Tap a desired video to start playback
- On playing interface, tap the related icon to make playing options.

File Browser





The **File Browser** application lets you manage all the files.

- From Applications screen, tap **File Browser**  to enter the file browser interface
- Select the desired file, and then tap the related icon to manage
 -  Show home page: Display device list
 -  Select/open mode: Select a folder or multiple files to manage, ✓ indicates the file selected, tap again to cancel the selection.
 -  Show edit menu: Cut, Copy, Paste, Delete
 -  Show sort menu: Sort by Name, Sort by Date, Sort by Size
 -  Back to previous directory

 View by thumbnail

 Help




AppInstaller

- From Applications screen, tap **AppInstaller**  to enter applications management.
- Select the memory source, and then enter the applications list
- Tap an application, and then you can install or uninstall the application, then tap OK to confirm.
- Or on the applications list, mark to select the desired application, tap  to open the menu options: Install/Uninstall, Select all, Unselect all, Refresh, About.

Note: Applications downloaded from the web can be from unknown sources. To protect your device and personal data, download applications only from trusted sources. Also download and install the application matches to your device with Android 4.0 operating system.

Downloads

The **Download** application let you view, reopen, or delete what you've downloaded.

 
- From Applications screen, tap **Downloads** 
- Tap an item to open it.
- Tap headings for earlier downloads to view them.
- Check items you want to share. Then tap the share icon  and choose a sharing method from the list.
- Check items you want to delete. Then tap the Trash icon .

- At the bottom of the screen, tap Sort by size or Sort by date to switch back and forth.

Files available in the download app can also be viewed in the download directory that's visible when your device is connected to a computer. You can view and copy files from this directory.

Note: Movies and some other content can be downloaded to your device but won't show up in the Downloads application.

Calendar

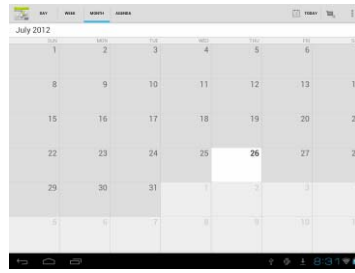


The Calendar application lets you view and edit your schedule. To open it, tap the Calendar icon on Applications screen.

 
To change the Calendar view, choose Day, Week, Month, or Agenda from the top left of the screen. Swipe to scroll vertically or horizontally. In the Day or Week views, spread your fingers apart or pinch them together to zoom in or out.

Clock




Select  on the Applications screen, the **Clock** application display the date and time, also you can set an alarm clock.


Calculator

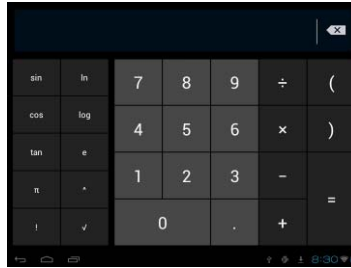

You can use the Calculator to perform simply and advanced arithmetical calculations.

- From Applications screen, tap **Calculator**  to enter.
- Tap on the numbers and mathematical operators to perform simple calculations.

 Settings

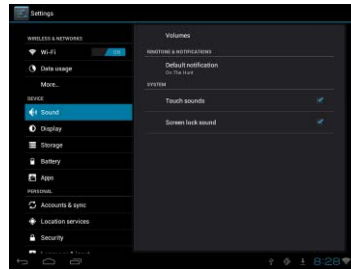

Settings allow you to customize and manage Wi-Fi, Sound, Display, Applications and more.


- To access Settings, tap **Applications Icon** > Settings Icon. You can also access Settings by swiping up on the Status Bar and tapping the Settings Icon .
- Tap the setting items to make the desired configuration, ✓ indicates that the option is activated

WIRELESS & NETWORKS	
Wi-Fi	Enable device to connect to the Internet. Set up and manage Wi-Fi networks to turn Wi-Fi on or off. Tap to set up and manage wireless access points.
Data Usage	Displays how much data is being used by each application. Tap to see the data usage cycle.
More	Tap to set up VPN (virtual private network), Portable hotspot or Proxy settings.
DEVICE	

Sound	Tap to set the volume and sound level for media, notifications and alarms.
Display	Tap to adjust the brightness, wallpaper, screen orientation, sleep timer and font size. Tap to perform an Accelerometer calibration.
Storage	Tap to view the amount of internal storage being used and the total space available.
Battery	Tap to view battery life and percentage.
Apps	Tap to manage and uninstall applications.
PERSONAL	
Accounts & sync	Tap to set up an email account or to sync Skype and other social media accounts.
Location services	Using wireless networks to see location in applications
Security	Tap to adjust screen security.
Language & input	Tap to set spelling to auto-correct and to set keyboard.
Backup & reset	Tap to perform factory data reset.
SYSTEM	
Date & time	Tap to set date and time automatically or manually.
Accessibility	Tap to adjust text display.
Developer options	Set options for development.
About tablet	Tap to view software version and if there is a software update available.

Resetting


In the event that the tablet freezes or does not function properly, try correcting the problem by RESET function.

Press and hold the  button, while the Power off dialog appears, skip it and hold the power button continually until the device turned off.

Data stored on the device will not be affected by using the RESET function.

Restore

Note: If the problem persists it may be necessary to restore the tablet to the factory default settings:

1. Select  "Settings" from the Applications screen.
2. Select "Backup & reset".
3. Select "Factory data reset" (this will erase data stored on the device so make sure to back up your data prior to using this option).

Frequently Asked Questions

1. **My device does not turn on.**
 - Make sure the battery is not used up
 - Make sure that the power adapter is securely connected
 - Make sure that you are using the power adapter that was included with your device.
 - Make sure that the device is turned on.
2. **The display freezes or does not respond**
 - Tap and hold the power button to turn device off and turn it on again.
 - Use a clip or a pin to insert the RESET hole on the rear, and then turn on the device again.
3. **My device does not recognize the memory card.**
 - Make sure that you have inserted a certified memory card.
 - Make sure that you have inserted the memory card correctly.
 - With your memory card inserted, power off and reset the device.
4. **My device shows a low-battery warning**
 - The device is low on power and needs to be charged before you can use it.
5. **I cannot access the web**

- Check the wireless signal indicator in the status bar at the top of the screen. If there is no signal, you are not connected.
 - Make sure the device's wireless communication function is set to on. If problem persists, contact your Wi-Fi administrator.
 - Make sure to select the right network and input the right password.
- 7. There is no sound coming from the device**
- Unplug and reconnect the headset. Make sure that the connector is pushed in all the way.
 - The volume may be deactivated or set too low.
 - Check the software volume settings.
- 8. The actual storage memory is less than memory capacity in specification**
- As the device needs to take some space to hold system applications and data files, so the actual storage is less than the memory capacity in specification.

Specification

Display	Digital LCD, TFT, Capacitive Touch screen Panel size: 8 inches Screen aspect ratio: 4:3 Resolution: 800*600 pixels
Power supply	AC adapter 5V/2A
Battery	3.7V@3500mAH
O/S	Android 4.0
Processor	ARM CORTEX-A9, 1GHz
RAM	512MB
USB port	Mini USB port
Wireless	802.11 b/g/n
Camera	0.3M
Support card	Micro SD Card, max to 32GB
Size L*W*H : (mm)	220.07*162.69*11.3
Weight (g)	445