
# Kenwin

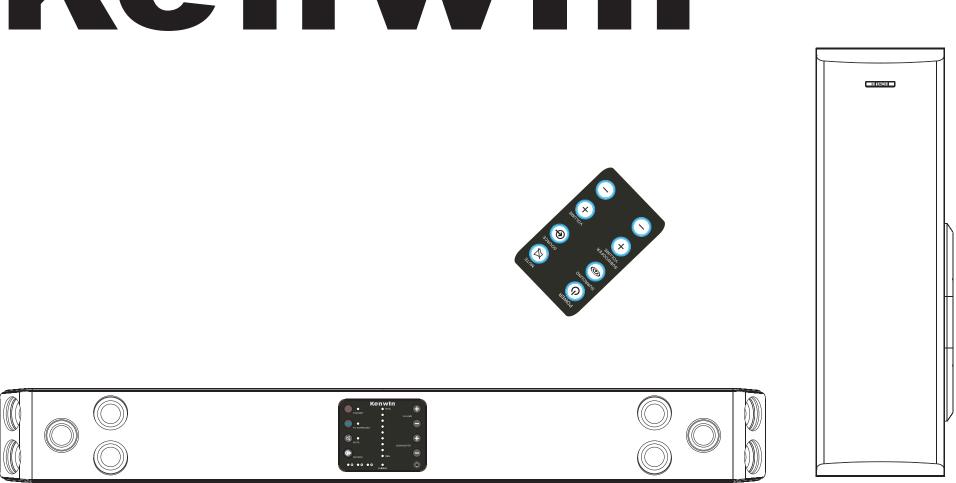

Designed for high performance audio in a very compact package with simple and intuitive set up and daily control

### Dear customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully.

Before connecting, operating or adjusting this product, please read the instructions completely.

Please keep this manual for future reference.

## **Contents**

1	Important Important safety instructions	3
2	Your Soundbar System	5
	Introduction	5
	What's in the box	5
	Overview of the main unit	6
	Overview of the remote control	7
3	Get started	
	Attach the stand	7
	Connect AUDIO devices	8
	Option 1: Connect this soundbar to an external device	8
	Option 2: Connect this soundbar to the TV set	8
	Activite wireless pairing	9
4	Appendix	
	Mount to a wall	10
5	Specification	 12
	General	12

## 1 Important

## Important safety instruction

- 1. Read these instructions All the safety and operating instructions should be read before this product is operated.
- 2. Keep these instructions The safety and operating instructions should be retained for future reference.
- 3. Heed all warnings All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow all instructions All operating and use instructions should be followed.
- 5. Do not use this apparatus near water The appliance should not be used near water or moisture for example, in a wet basement or near a swimming pool, and the like.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13. Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- 15. Please keep the unit in a good ventilation environment.
- 16. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- **17.** Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, tablecloths, curtains etc.
- **18.** WARNING: Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
- **19.** WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- **20.** WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- **21.** WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 22. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
- 24. Caution: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
  - Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
"FCC RF Radiation Exposure Statement Caution: To maintain compliance with the
FCC's RF exposure guidelines, place the product at least 20cm from nearby
persons."

# 2 Your Soundbar System

#### Introduction

Your soundbar provides superb sound performance when you watch TV, DVDs, listen to music, or play games.

You can control all connected audio/video devices easily with the programmable smart remote control.


The wireless subwoofer makes setup simple too - there are no messy cables to connect.


#### What's in the box

Check and identify the contents of your package:

- Main unit
- Digital wireless subwoofer
- Smart remote control (with battery)
- Table stand (x2)
- Wall mount bracket (x2) and screws (x4)

#### Overview of the main unit

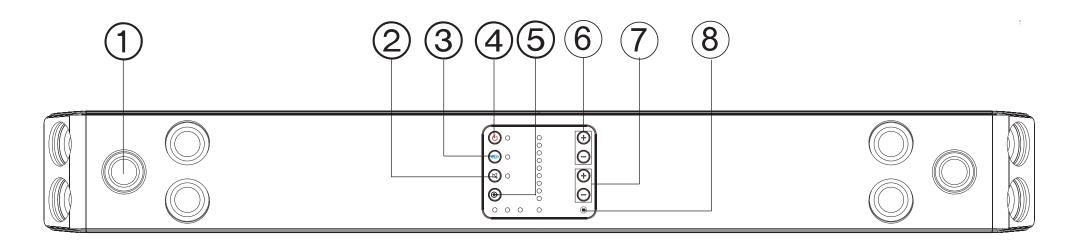

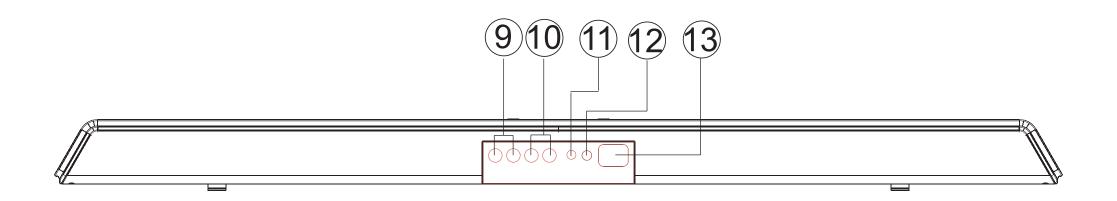

#### **1** SPEAKER

#### ② MUTE button

 Turning off the sound temporarily.
 To restore the sound, press the button again or adjust the volume.

#### **③ FX SURROUND button**

 Listen to a more realistic sound than stereo sound.

### 4 STANDBY也 button

• Turn on/off the system.

#### **5 SOURCE button**

 Select the input sound (AUX IN 1, AUX IN 2, AUX IN 3).

#### 6 VOLUME +/- button

Adjust the volume.

#### 7 SUBWOOFER button

 Adjust the output level within the range of -6dB to +6dB.

### **8 REMOTE SENSOR**

## 9 AUX IN 1 jack

AV input socket.

#### 10 AUX IN 2 jack

AV input socket.

#### 11 AUX IN 3 jack

Connect audio output socket.


## 12 PAIRING button

• To pair speakers.

#### **13 AC MAINS**

Inlet for power cord.

# Overview of the remote control

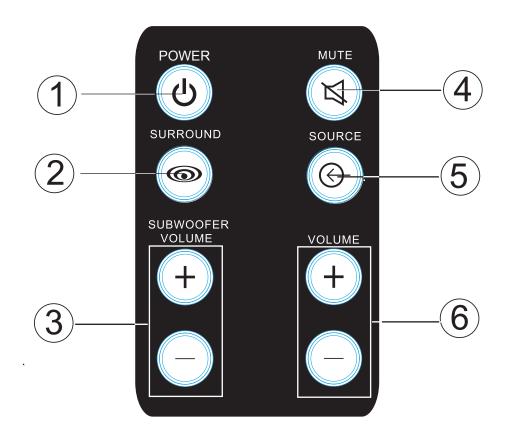

#### ① STANDBY也 button

Turn on/off the system.

#### 2 FX SURROUND button

 Listen to a more realistic sound than stereo sound.

#### **3 SUBWOOFER VOLUME button**

 Adjust the output level within the range of -6dB to +6dB.

#### **4** MUTE button

• Turning off the sound temporarily. To restore the sound, press the button again or adjust the volume.

#### **5 SOURCE button**

 Select the input sound (AUX IN 1, AUX IN 2, AUX IN 3).


#### **6 VOLUME +/- button**

Adjust the volume.


## 3 Get started

#### Attach the stand

1 Place the supplied table stand onto the rear of the main unit until the hook enter the hole of the main unit completely.

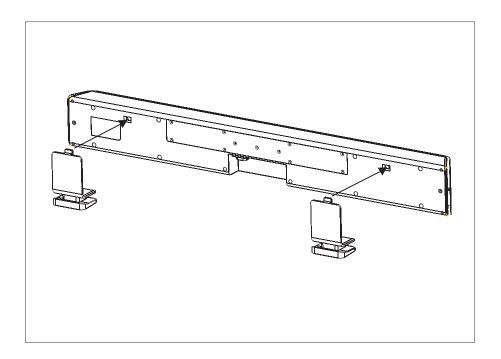

2 Slide the supplied table stand upward along the hole of the main unit.

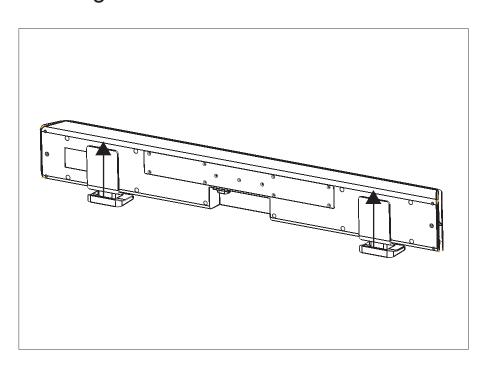

#### Connect AUDIO devices



#### Note

- There are various ways to connect the soundbar to other audio devices. You only need to select the best option that fits your existing audio device setup.
- For AV connection to the soundbar, there are multiple sets of AV sockets available on the main unit. You can choose either set for an AV connection.
- When you connect cables, ensure that the color of the plug matches the color of the socket.
- The types of audio devices and connections in the following instructions are for reference only.

# Option 1:Connect this soundbar to an external device


You can connect the audio player (e.g.MP3 player) if the player has an available audio output socket, follow these instructions.

- 1 If the audio player has a digital output socket, connect the 3.5mm stereo plug from the player to the AUX IN 3 socket.
- Press SOURCE button on the wireless sound system to select"AUX IN 3" input.
- Adjust the volume of the wireless sound system.



#### Note

- To avoid distorted sound, make sure that any equalizer function of your external device is turned off.
- Reduce the volume of the wireless aound system before connecting.

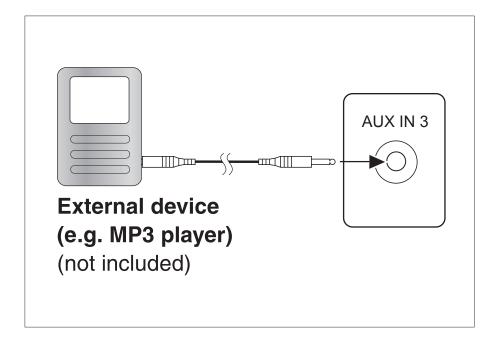


# Option 2:Connect this soundbar to the TV set

You can also connect the red/white audio connectors of the AV cable from the TV to a set of audio input sockets.



#### Note

 It is unnecessary to connect the yellow video connectors.

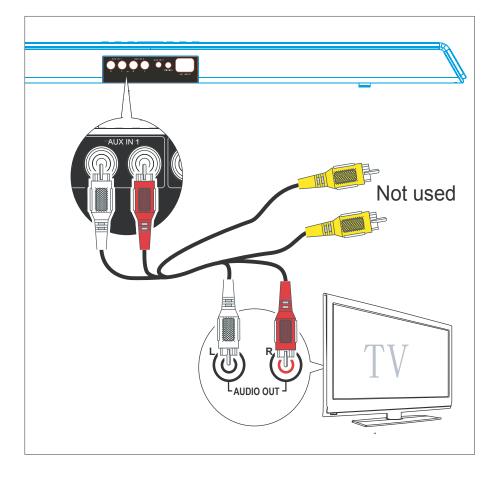

Press SOURCE button on the wireless sound system to select"AUX IN 1 or 2" input.

## Activite wireless pairing

When you use the subwoofer and soundbar for the first time, activate wireless pairing.

- 1 Check if the power voltage, as shown on the type plate located on the rear of the set, corresponds to your local AC power supply. If it does not, cousult your dealer or service centre.
- **2** Connect the power cord of soundbar and subwoofer to the wall outlet.
- **3** Turn on the System.

Front panel of the soundbar



Press.

4 Activate the wireless pairing on the soundbar.

Front panel of the soundbar

**PAIRING** 



Press.




**PAIRING** 

"PAIRING lamp" blinks on the display.

the wireless pairing on the subwoofer.

**5** While "PAIRING lamp" is blinking, activate

Rear side of the subwoofer

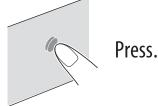

• You may need to press the button repeatedly until PAIRING lamp stops blinking.

Now, you can use the subwoofer and soundbar



#### Note

- Sound comes out through the subwoofer (and surround speakers\*) when an audio signal comes into the soundbar
- Wireless pairing is not cancelled even if the AC power cords are pulled out from the wall outlet.

# 4 Appendix


## Mount to a wall



#### Caution

- Risk of product damage! Always consult professional personnel to safely mount the product to a wall.
- Risk of injury! Ensure that no supply ducts such as gas, water or electricity are harmed when you drill the holes.

#### What's in the supplied mounting kit

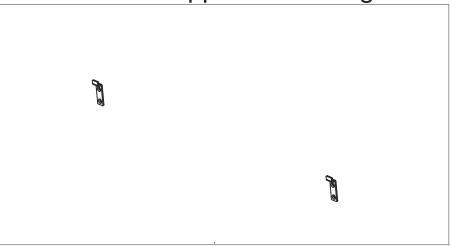

#### 2 x wall mount bracket for the soundbar



4 x screws

#### What else you'll need

- Electric drill
- Screwdriver
- Pencil

#### Mount the soundbar




#### Caution


- To find a suitable mounting location, make the necessary physical and wireless connections.
- Mount the soundbar to a solid concrete wall or plaster board wall only!

You can use the supplied bracket to mount the soundbar to the wall.


1 Align the bracket in the chosen location on a wall. Use a pencil to mark the drilling positions.

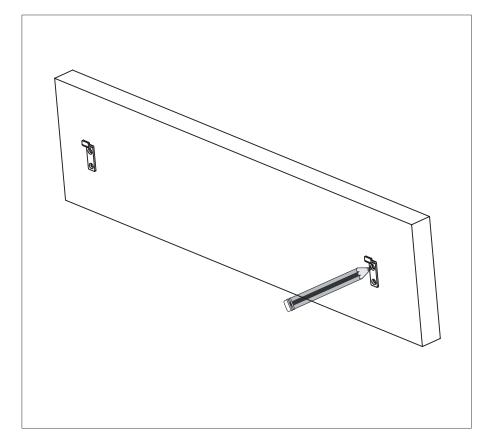


2 Drill holes as marked.

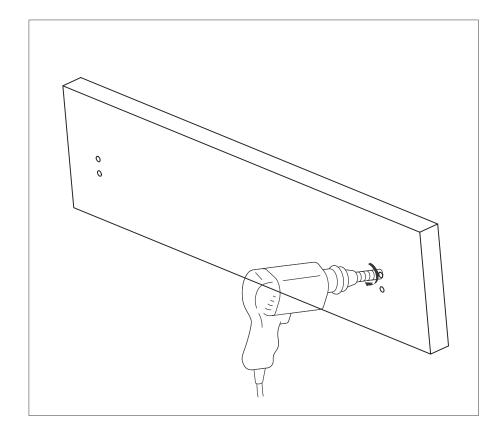

# 3 Secure the wall mount bracket on the wall with 4 supplied screws.

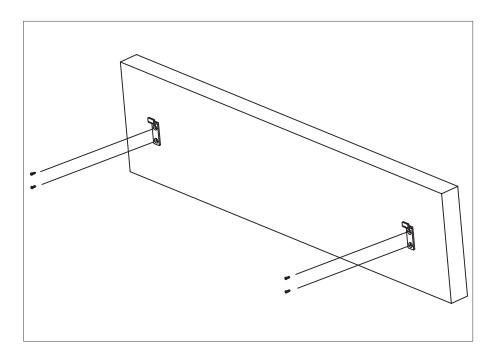

## 4 Hook the soundbar in place.

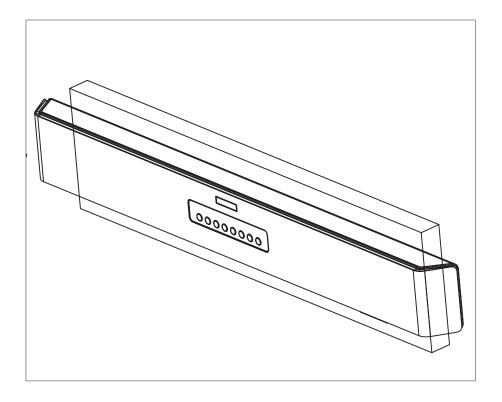

# 5 Specification

## General

Power supply AC 120 V, 60 Hz

Power consumption Digital transmitter 1.7 W

Wireless sound system 38 W

Dimensions (W×H×D)

Soundbar 57mm x 96mm x 780mm x 260mm x 500mm x 150mm

Subwoofer 260mm x 500mm x 150mm

Frequency range

Soundbar frequency response 230 - 20, 000 Hz

Subwoofer frequency response 38 - 250 Hz

Power consumption in off mode approx. <1W