
尺寸: 90x90mm 7 折页 印刷: 双面单色印刷



User Manual

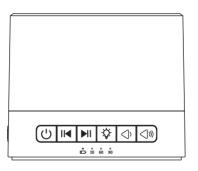

1 Year Warranty

If a faulty product is found when setting up please email us at Contact@buffhomes.com Thank you for purchasing on BUFFBEE! Please read these instructions carefully and keep the user manual in safe place for future reference.

TIPS:

 The machine works and lasts a few hours if its battery powered only, please keep it plugged in always!

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Features

- 20 Soothing Sounds
- 1-32 Levels Volume Control
- 10 Colorful Nightlight (7 Solid, 2 Mixed, 1 RGB Mode)
- 5 Levels Brightness Control
- Sleep Timer
- Battery Backup


Package Include

- 1* Sound Machine with Nightlight
- 1* 1.5m DC Adapter
- 1* User Manual


Power Specifications

AC 100-240V, 50-60Hz DC 5V-1A


Front View

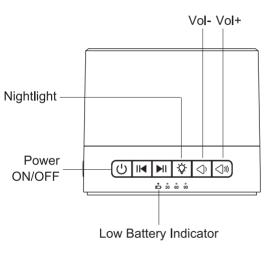


Left-side View

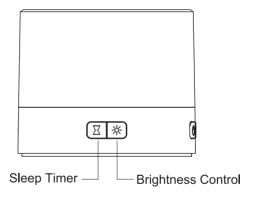

Back View

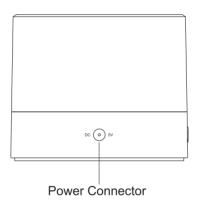


Bottom View

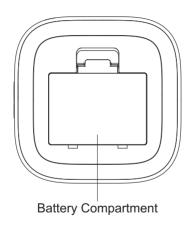

Sound Machine Setting

1. Press the "U" button, sound machine will be ON/OFF.

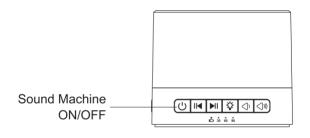

2. Press the "⟨¬¬" button to decrease the volume. Press the "⟨¬¬¬" button to increase the volume. (1-32 levels adjustable)


Picking Your Sounds

When sound machine is ON, press the " II◀ " and " ▶II " button to switch among all the 20 sounds in sequence.

Here is the list of tracks			
1	White Noise 1	11	Rain
2	White Noise 2	12	Thunderstorm
3	White Noise 3	13	Campfire
4	White Noise 4	14	Brook
5	White Noise 5	15	Frog Croaking
6	Fan 1	16	Bird Chirping
7	Fan 2	17	Summer Night
8	Fan 3	18	Ocean Wave
9	Lullaby 1	19	Wind
10	Lullaby 2	20	Meditation

Nightlight Setting

1. Press the " 🗘 " button to turn on the nightlight. Then press the " 🗘 " button to change the color of the nightlight. (7 Solid, 2 Mixed, 1RGB Mode)

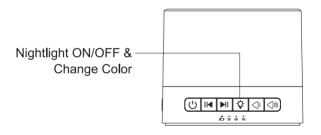

- 2. When the nightlight is on, press the " " button to adjust the brightness, 5 levels brightness is adjustable.
- 3. Press and hold the " 🖫 " button for 2 seconds, the nightlight will be turned off.

Sleep Timer

When the sound machine is on, you can use sleep timer to turn off sound machine automatically when the preset sleep timer comes.

- Press repeatedly the "∑" button to select the sleep timer ranging from 30, 60, 90 minutes to OFF, the indicator light of selected timer will light up accordingly.
- 2. If the sound machine is ON, it would play continuously when no timer is set.

Battery & Memory Function

- Install 3* AAA batteries (Not included) into Battery Compartment.
- 2. Memory Function is for saving nightlight / sound / volume / sleep timer settings.

Notice:

- 1. The machine works and lasts a few hours if its battery powered only, please keep it plugged in always!
- The low battery indicator light will light up when the battery is below 20%.

Care of Your Sound Machine with Nightlight

Please replace the backup batteries every year or consider storing the machine without a battery when it is not in use. Please use a cloth or a paper towel to clean it. Avoid any corrosive cleaner or chemical solutions when cleaning. Make sure the machine is kept clean and dry always.

Support

The sound machine with nightlight comes with one year warranty. If you have any issue with this machine, please contact us at **Contact@buffhomes.com**. We will address your issue within 24 hours.