

HOUSBAY

RS10 User Manual

Sound Machine with Alarm Clock



1 Year Warranty

If a faulty product is found when setting up
please Email us at **support@keviec.com**

TIPS:

1. Battery backup is for saving TIME/ALARM settings only. Please keep plugged in!

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.21 Information to user

The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

[54 FR 17714, Apr. 25, 1989, as amended at 68 FR 68545, Dec. 9, 2003]

Please read all the instructions carefully and keep this in a safe place for future reference.

INSTRUCTIONAL VIDEO:

Please scan the QR code here to access the instructional video of this product.



POWER SPECIFICATIONS:

AC, 100-240V, 50/60Hz.

 
FEATURES:

- 18 Soothing Sounds
- 30 Levels Adjustable Volume
- 7 Colorful Night Light
- 0-100% Brightness Control For Display
- 5 Alarm Sounds & 9 Minutes Snooze
- Sleep Timer
- Battery Backup(Only Memory Function)
- 12/24H Mode


PACKAGE INCLUDE:

- 1* Sound Machine with Alarm Clock
- 1* 1.5m DC Adapter
- 1* User Manual
- 1* CR2032 Battery

FRONT VIEW

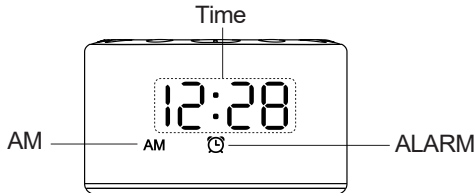


TOP VIEW

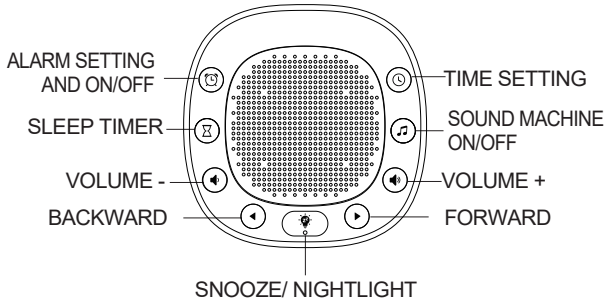 


BACK VIEW

 DIMMER CONTROL (0-100%)
POWER CONNECTOR

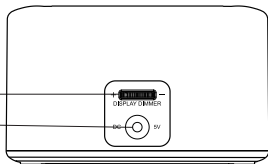

BOTTOM VIEW

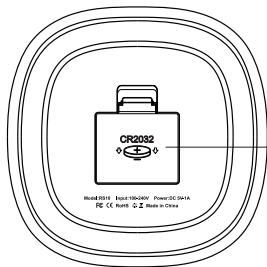 

BATTERY COMPARTMENT
(Battery is built in already)

GETTING STATRED

 
1. Plug the adapter into a standard household outlet, you will see 12:00 on the display and the machine is ready to be set.
2. Please remove the battery tab before use.

Notice :


- If the display is “blank” after plugging in, please check whether the DISPLAY DIMMER on the back is at the HIGH position.
- Under the battery power, the display will go blank and preset alarm will not go off.
- Once the battery is removed and with an interruption of power, the TIME and ALARM need to be reset when the power comes back.

TIME SETTING

1. Press “🕒” button to enter HOUR setting. The HOUR digits will flash on the display. Press the “◀” or “▶” button to advance to the correct hour.

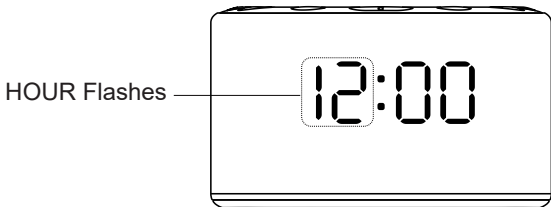

 2. Press the “🕒” button to confirm and enter MINUTE setting. When the MINUTE digits flash, press the “◀” or “▶” button to advance to the correct minute.

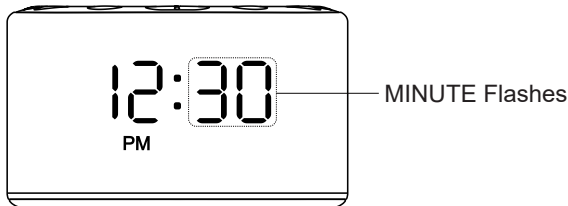


3. Press the “ ⌚ ” button to confirm and enter Time Format (12/24H) setting. Press “ ◀ ” or “ ▶ ” button to select time format. When using the 12-hour time format, AM/PM icon will appear on the display to suggest morning/afternoon time.
4. Press the “ ⌚ ” button to confirm and exit the Time Setting Mode.

Notice:


The machine will exit automatically from the TIME setup mode if no action is taken within 5 seconds.
(Action refers to pressing the desired button for setup)

ALARM SETTING

 1. Press the “🕒” button to enter ALARM HOUR setting. The HOUR digits will flash on the display. Press the “◀” or “▶” button to advance to the desired hour.

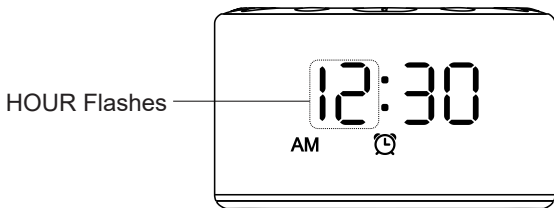

 2. Press the “🕒” button to confirm and enter ALARM MINUTE setting. The MINUTE digits will flash on the display. Press the “◀” or “▶” button to advance to the desired minute.

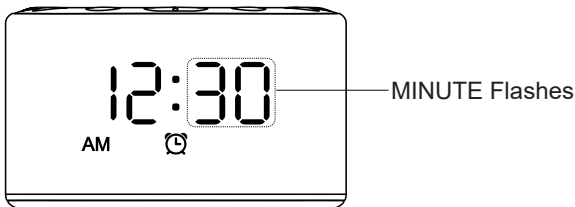

3. Press the “🕒” button to confirm and enter WAKE UP SOUND setting. A number will flash on the display. Press the “◀” or “▶” button to choose from #1) Bird chirping sound , #02) Piano sound, #03) Beep sound, #04) Ocean sound or #05) Brook sound.
4. Press the “🕒” button to confirm and exit from Alarm Setting Mode.

Notice :

 
The machine will exit automatically from the ALARM setup mode if no action is taken within 10 seconds.
(Action refers to pressing the desired button for setup)

ALARM VOLUME SETTING

When sound machine is OFF, press the “ 🔊 ” or “ 🔊 ” button to select the volume level. (0-30 adjustable) A number will be shown on the display.




Notice:

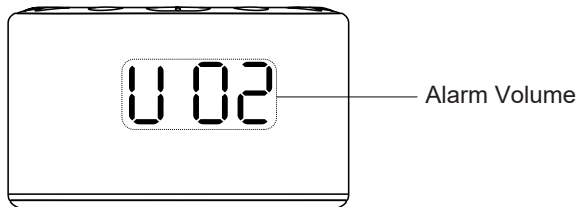When sound machine is OFF, this alarm sounds has a 5 second trial sound, you can confirm the ringtone you want in advance by pressing the “ 🔊 ” or “ 🔊 ” button.



ALARM PAUSE & SNOOZE




When the alarm goes off, you have two options:

1. Press “  ” button to stop the alarm when it's ringing. Alarm will go off on the next day.
2. Press “  ” button to snooze, the indicator “  ” will flash on the display. The alarm will go off again 9 minutes later.


Notice:

 
The alarm will automatically turn off after 30 minutes if no action is taken.

ALARM ON/OFF



Press the “  ” button to turn on alarm. Press and hold the “  ” button for 2 seconds to completely turn off alarm and the indicator “  ” will disappear on the display. The alarm will NOT go off on the next day.

SOUND MACHINE SETTING

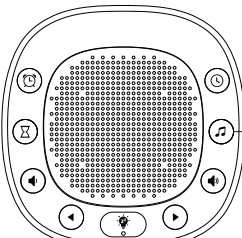1. Press the “” button, sound machine will be ON/OFF.



Sound machine ON/OFF

2. Press the “” button to decrease the volume.
Press the “” button to increase the volume.
(0-30 adjustable)

Notice:

When sound machine is on, the volume adjustment is only used for sound machine, the volume of the alarm will not be affected.

PICKING YOUR SOUNDS

When sound machine is on, press the “ ◀ ” and “ ▶ ” button to switch among 18 sounds in sequence.

Here is the list of tracks			
1	Ocean	10	Campfire
2	Lullaby	11	White Noise 1
3	Waves	12	White Noise 2
4	Rain	13	White Noise 3
5	Thunderstorm	14	White Noise 4
6	Brook	15	White Noise 5
7	Shush	16	Fan 1
8	Bird chirping	17	Fan 2
9	Summer night	18	Fan 3

 
MEMORY FUNCTION

The memory function will save your last sound and volume when you turn sound machine off. Your last sound machine settings remain saved when you turn it on next time.

SLEEP TIMER

You can use sleep timer to turn off nightlight and sound machine automatically when the preset sleep timer comes.

1. Press repeatedly the “ ⏸ ” button to select the sleep timer ranging from 15, 30, 60, 90, 120 minutes to OFF. The sleep timer will be shown on display.

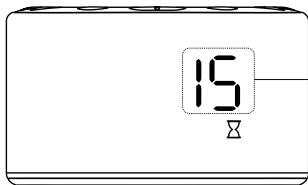


Sleep Timer, 15 minutes


2. When the sleep timer is set, please wait for 5 seconds to exit from the setup. The “ ⏰ ” indicator will be seen on the display.
3. Press and hold the “ ⏰ ” button for 2 seconds to turn off sleep timer.
4. When sleep timer is on, press “ ⏰ ” button to see the sleep timer remained.

NIGHTLIGHT SETTING

 1. Press the “ 💡 ” button to turn on the nightlight. Then press the “ 💡 ” button to change the color of the nightlight.

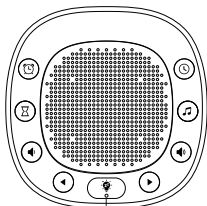

Nightlight ON/OFF & Change Color

2. Press and hold the “  ” button for 2 seconds, the nightlight will be turned off.

DISPLAY BRIGHTNESS SETTING

Slide the DISPLAY DIMMER slider at the back of the machine to adjust the display brightness. (It can be adjusted from 0 to 100%)

BATTERY OPERATED SETTING

Install 1* CR2032 battery into Battery Compartment.
(Battery is built in already)

Notice :

Under the battery power, the display will go blank and preset alarm will not go off. Battery backup is for saving TIME/ALARM settings only.

SUPPORT

The sound machine with alarm clock comes with one year warranty. If you have any issue with this machine, please contact us at **support@keviec.com**. We will address your issue within 24 hours.