

TOPMAZ™ RACING

INSTRUCTION MANUAL



8+
ages



RTR
READY TO RUN

MAX DRIVE

FULL FUNCTION RADIO CONTROL



Contents

- RC Vehicle (Vehicle) x 1
- RC Transmitter (Transmitter) x 1
- Instruction Manual x 1
- 6.4V Rechargeable Battery Pack x 1
- Charger x 1
- AAA Battery x 2

2!
RAN!



RC Transmitter x 1



RC Vehicle x 1

BATTERY REQUIREMENTS:

- 2 X AAA Battery For Transmitter (Included)
- 6.4V 1300mAh For Vehicle (Included)
- ADAPTER (Included)

Battery Precaution

1. The 6.4V Lithium Rechargeable Battery Pack must be charged before use by utilizing the battery charger which included
2. Do not overcharge the battery pack. Do not charge for more than 6 hours
3. Do not charge the battery pack if it shows leakage, corrosion, or has loose or exposed wires or other damage
4. Do not cover the battery pack with any sort of materials while charging
5. Do not touch the battery pack when it is hot. Wait until the battery pack cools before installing it in the Vehicle and before recharging
6. Do not dispose of the battery in fire
7. Do not dismantle the battery or charger, and do not cut the battery or charger cables
8. The battery pack will be warm after charging, and hot after use in a vehicle
9. The supply terminals are not to be short-circuited
10. Rechargeable batteries are to be removed from the toy before being charged
11. Rechargeable batteries are only to be charged by adult.
12. Battery replacement must be only made by adults
13. The transformer (charger) is not a toy
14. Charge only type (1300mAh Max.) rechargeable battery packs. Other types of batteries may burst causing injury to persons and damage. This power unit is intended to be correctly orientated in a vertical or floor mount position. This charger is intended to be used for charging 6.4V lithium rechargeable battery pack with capacity 1300mAh Max. It cannot be used for charging non-rechargeable batteries. Regular examination of battery charger for any damage to their cord, plug, enclosure and other parts, and that, in the event of such damage, it must not be used with the charger or battery pack charge until such damage has been repaired. Note that the AAA batteries are non-rechargeable and are not to be recharged. Only batteries of the same or equivalent type as recommended are to be used. It will need replacement when transmission is poor.
15. Exhausted batteries are to be removed from the product.
16. Non-rechargeable batteries are not to be recharged.
17. Do not mix different type or new and old batteries.
18. Batteries are to be inserted with correct polarity.

 
 
 
 
Battery Installation

For Vehicle (Fig. 1 and Fig. 2)

1. Switch OFF the power
2. Unscrew the screw on the battery cover
3. Open the battery cover
4. Install 6.4V battery pack with correct polarities (+/-) as shown inside the battery compartment
5. Close the battery cover
6. Tighten the screw on the battery cover

For Transmitter (Fig. 3 and Fig. 4)

1. Unscrew the screw on the battery cover
2. Open the battery cover
3. Install 2 new AAA battery with correct polarity (+/-) as shown inside the battery compartment
4. Close the battery cover
5. Tighten the screw on the battery cover

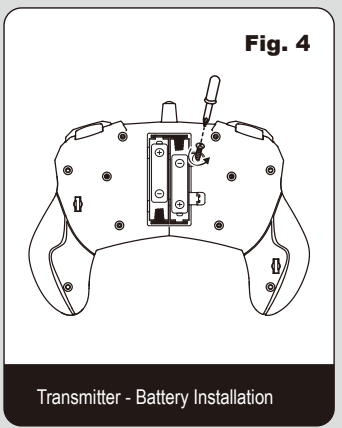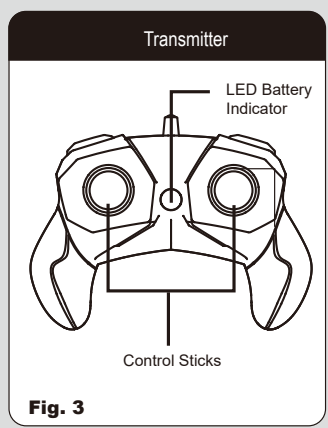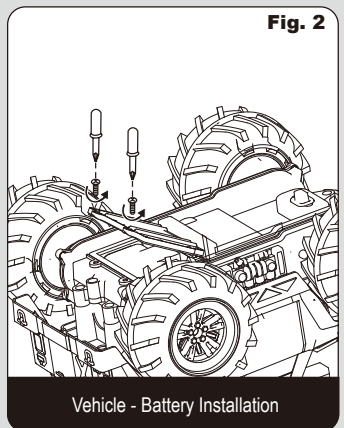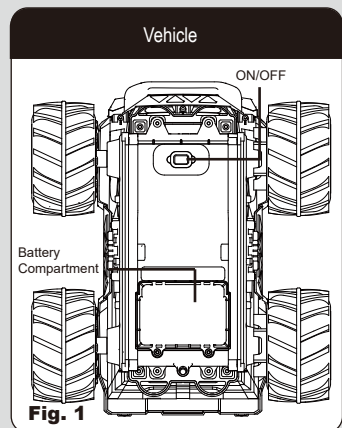

1. Turn OFF the Vehicle and then install the batteries to the Vehicle and Transmitter.
2. Do not touch the wheels and turn ON the Vehicle. When the wheels run automatically, the pairing process completed and it is ready for playing.
3. As long as the batteries in both Vehicle and Transmitter are not removed, it is no need for pairing process after switching OFF the Vehicle. Just switch ON the Vehicle and it will still be paired up with the Transmitter.
4. If the pairing process is not completed, please remove the batteries from the Vehicle and Transmitter and re-start the process. (Step# 1)

How To Play

1. Ensure that the ON/OFF Switches on the Max Drive and the Transmitter are in the ON position.
2. Control the LEFT and RIGHT Sticks on the Transmitter for movement. (Fig.5)
3. Press the water shooting button to shoot water when the vehicle is on the clear water or filled the clear water into the water tank. (Fig. 6)
4. The fully charged time for the vehicle is 2.5hrs and the play time is around 25mins. Please drive the vehicle back before battery exhausted.
5. If your Max Drive's Battery Pack becomes depleted, you will need to recharge your Battery Pack.
6. When you finished playing or the Battery Pack is depleted, turn off Max Drive and remove the water from the water tank.

Left Stick

 
 
Neutral
Up
Down
Up
Down
Up
Down
Neutral
Neutral

Right Stick

Neutral
Up
Down
Down
Up
Neutral
Neutral
Up
Down


Function

Nothing
Forward
Backward
Spin Right
Spin Left
Forward & Right Turn
Reverse & Right Turn
Forward & Left Turn
Reverse & Left Turn

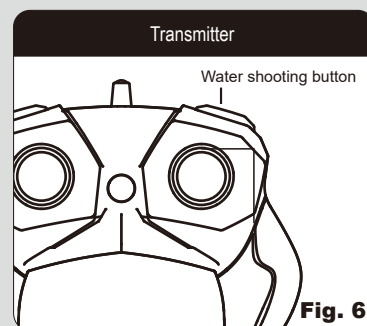
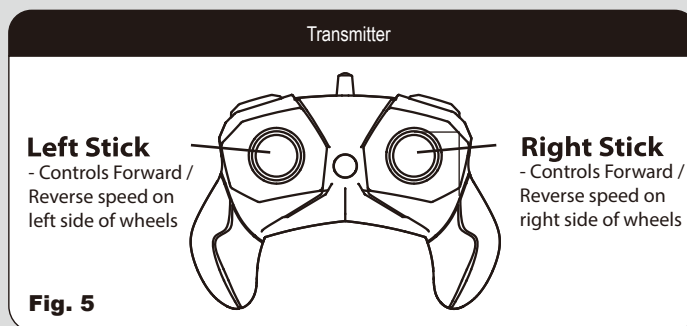


How To Water Shooting

 
Vehicle on the land

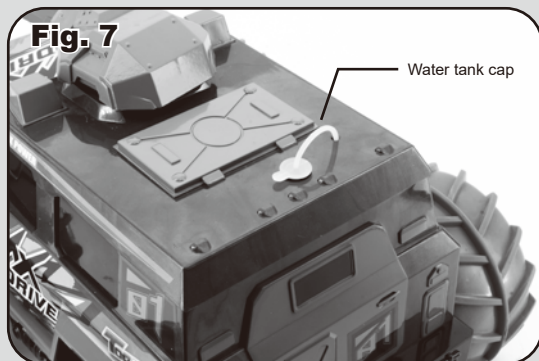

  1. Open the cap of water tank. (Fig.7 and Fig.8)

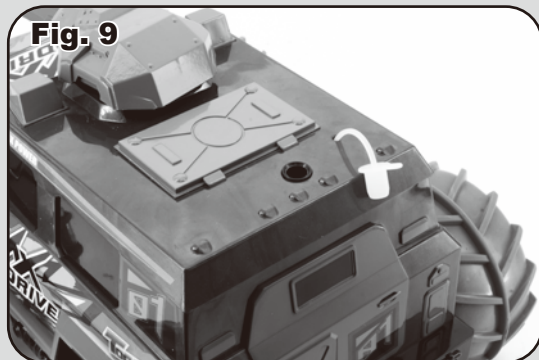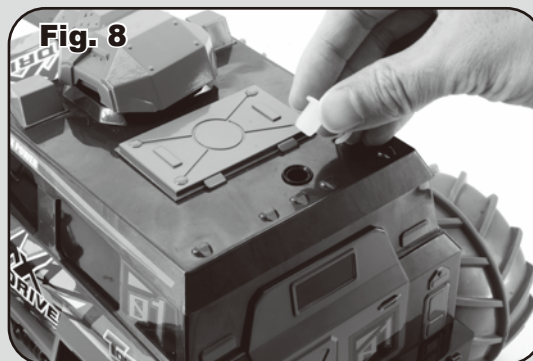

 
2. Fill in water until spill out. (Fig.9)

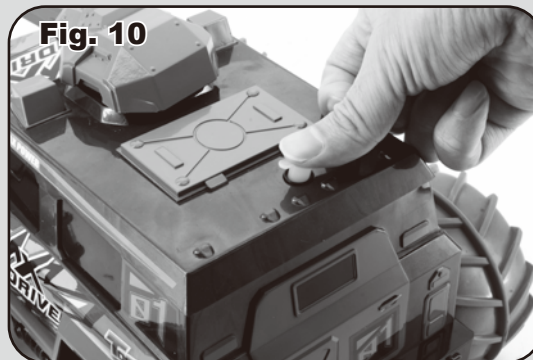

3. Close the cap firmly. (Fig.10)
4. Press the water shooting button to shoot water. (Fig.6)
5. Pour out the water when finished playing.

Vehicle on the clear water


 
1. Press the water shooting button to extract and shoot water. (Fig.6)
2. Pour out the water when finished playing.

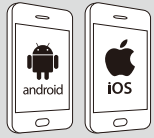

FOR ANDROID 4.4 OR ABOVE,
FOR IOS 9.4 OR ABOVE.




  1. Visit App Store / Google play.
2. Download Max Drive APP.

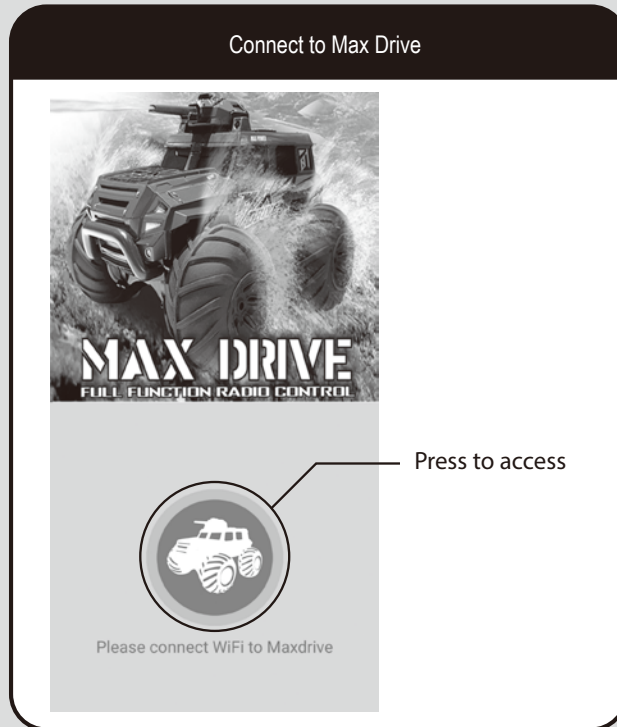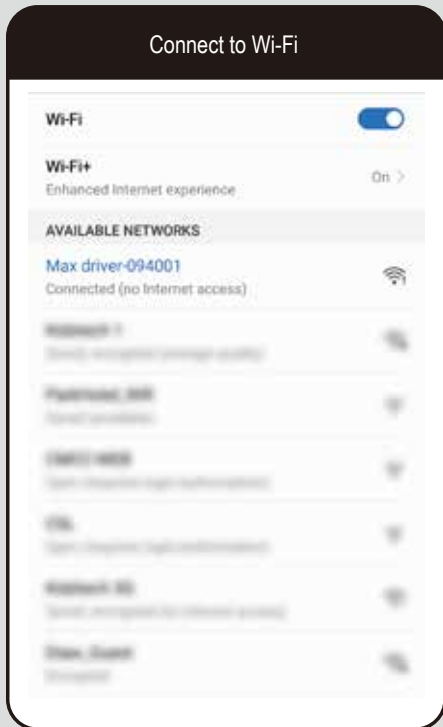

3. Turn on the vehicle.
4. Open the Wi-Fi settings.
5. Search "Max driver-xxxxxx" in 60 seconds and connect successfully.

 6. Open Max Drive App.
7. Press blue button to access the camera.
8. The Wi-Fi connection will be disconnected if the vehicle did not receive any signals from the transmitter after 5 mins. To re-connect the Wi-Fi setting, search "Max driver-xxxxxx" in 60 seconds again and re-connect successfully.

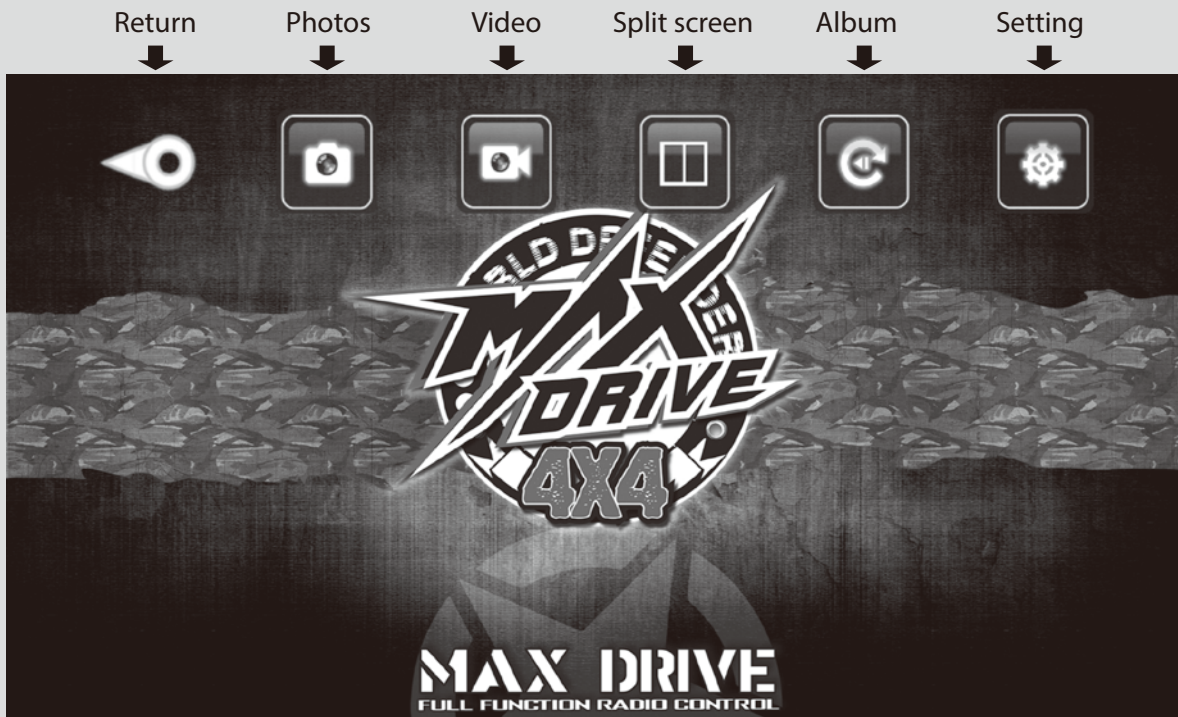

Return: Return to previous page.

Photo: Take photo with the camera.

Video: Record video with the camera.

Split screen: For VR version only.

Album: Browse previous photos and videos.

Setting: Settings for language, version and help.

Performance Tips

1. Do not drive on grass, dirt, sand, dusts, carpet or go through water.
2. Do not drive in windy or rainy weather.
3. Avoid direct impact the Vehicle with obstacles.
4. Switch OFF the power when not in use to prevent damage of Vehicle and Transmitter due to leakage of electrolyte from batteries.
5. Remove all batteries from the Vehicle and Transmitter when not in use for long period.
6. Keep fingers, hair and loose clothing away from wheels.
7. The operating range can be affected by a variety of factors
 - a) Low Voltage of batteries in Transmitter or Vehicle
 - b) Interference from other items that emit radio frequency signals.
8. Outdoor usage is recommended in order to get optimum control range.
9. Recommend to play the vehicle on a clean and smooth surface.
10. Clean the battery compartment to make sure it is free from dust to prevent poor contact of batteries

Cautions

1. Do not attempt to disassemble the Vehicle or Transmitter
2. Make sure the batteries are installed with correct polarities (+/-) as shown inside the battery compartment
3. Remove the package and take out all accessories before giving the Vehicle and Transmitter to child to play

The packaging and instruction manual contain important information. Please keep them for future reference.

Warning! Choking Hazard. Not suitable for children under the age of 3 years due to small parts.

We reserve the right to improve/amend specifications and colors without notice.

FCC label compliance statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna
 - Increase the separation between the equipment and receiver
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
 - Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS-210/RSS-247 Compliance Statement:

This device complies with Industry Canada Licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Declaration of Conformity

The product is in conformity with the requirement of EU Directive 2014/53/EU.

Environmental notes:

The whole product also does not belong to household waste at the end of the product life.

You can return it at collection points for the recycling of electronic and electrical instruments

The symbol on the item, instruction manual, hangtag or packing is showing this clearly.

Materials should be recycled according to their respective markings.

Recycling of old devices or other re-use of materials contained therein represents an important contribution to environmental protection.

Please ask at your local community for the correct collection point.

Disposal of batteries

Batteries should not be disposed of in the household waste. As the consumer you are legally obliged to return batteries containing harmful substances and all other used batteries. You can hand in your old batteries at public collection points in your area or wherever batteries are sold.

You will find these chemical abbreviations along with a crossed-out refuse bin on batteries containing harmful substances:

Pb=Battery contains lead

Cd=Battery contains cadmium

Hg=Battery contains mercury

FCC/RSS RF Radiation Exposure Statement

Caution: To maintain compliance with the FCC/RSS's RF exposure guidelines, place the unit at least 20cm from nearby persons.



Conforms to the safety requirements of ASTM F963



www.kidztech.net



KIDZTECH TOYS MANUFACTURING LTD.
Room 1201,12/F, Inter-Continental Plaza,
94 Granville Road, TST East, Hong Kong.
Tel: (852) 27218868 info@kidztech.net
Made in China http://www.kidztech.net

Frequency band: 2405-2475 MHz
Maximum radio frequency power transmitted: <0dBm