



 
2.4 GHz RADIO CONTROL JET SKI 1:10

Contents

- RC Jet Ski x 1
- RC Transmitter x 1
- Spare rear propeller x 2
- Display Stand x 1
- Instruction Manual x 1
- 6.4V Rechargeable Battery Pack x 1
- Charger x 1
- 1.5V AAA Battery x 2

Battery Requirement

- Vehicle: 1 x 6.4V Rechargeable Battery Pack
- Transmitter: 2 x 1.5V AAA Battery




Battery Precaution

- The 6.4V rechargeable battery pack must be charged fully, using the included battery charger, prior to first use.
- Do not overcharge the battery pack. Do not charge for more than 6 hours.
- Do not charge the battery pack if it shows leakage, corrosion, has loose or exposed wires, or shows other damage.
- Do not cover the battery pack with any sort of materials while charging.
- Do not dispose of the battery in fire.
- Do not dismantle the battery or charger. Do not cut the wires on the battery or charger cable.
- The battery pack will be warm after charging, and hot after use in the Jet Ski. (Do not touch the battery pack if it is hot. Wait until the battery pack cools before installing it in the Jet Ski or before recharging.)
- The power supply terminals are not to be short-circuited.
- The supply terminals are not to be short-circuited.
- Remove the rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged by an adult.
- Batteries must be installed/removed by an adult.
- The battery charger is not a toy.
- Charge only type 6.4V (700mAh Max) rechargeable battery packs. Other types of batteries may burst causing injury or damage.
- Do not charge non-rechargeable batteries.
- Examine the battery and charger regularly for any damage to the cord, plug, or other parts. In the event of such damage, do not use the battery charger or battery pack until damage has been repaired.
- The included AAA batteries are non-rechargeable and are not to be recharged. Only batteries of the same or equivalent type are to be used. Replace batteries when remote signal transmission is poor.
- Exhausted batteries are to be removed from the product.
- Do not mix old and new batteries or different types of batteries.

IMPORTANT: FOR MAXIMUM PERFORMANCE, YOU MUST FULLY CHARGE BATTERY PACK BEFORE FIRST TIME USE.

 Battery Installation For Jet Ski (Fig. 1)

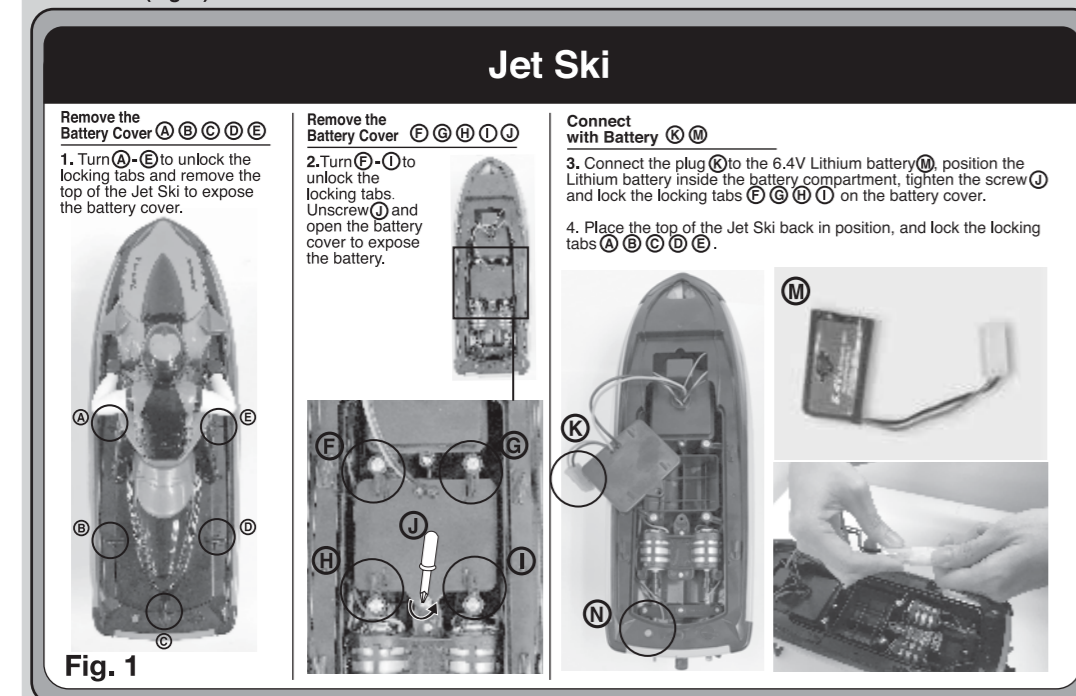

- For Transmitter (Fig. 2 and Fig. 3)**
- Unscrew the screw on the battery cover
 - Open the battery cover

- Install 2 x 1.5V "AAA" batteries with correct polarity (+/-) as shown inside the battery compartment

- Close the battery cover
- Tighten the screw on the battery cover

AD16616

CAUTION-ELECTRIC TOY:
Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

CAUTION-SUPERVISION REQUIRED-ELECTRIC TOY
ELECTRIC TOY-UNPLUG WHEN NOT IN USE.

 
 
INPUT: 100-240V ~ 50/60Hz
OUTPUT: 6.4V=600mA

Charging the Rechargeable Battery Pack for the Jet Ski:

- Connect the 6.4V rechargeable battery pack to the battery charger.
- Plug the charger into a standard AC socket.
- The charging time for a full charge is about 3 hours. (Play time for a fully charged battery is max. 15 Mins.)
- The LED indicator with light up Red while the battery is charging. When the LED turns green, charging is complete.
- When charging is complete, unplug the charger from the AC socket.
- Disconnect the rechargeable battery pack from the battery charger.


2.4GHz Remote Control Pairing Instructions

- Make sure the Jet Ski and the Transmitter both have batteries installed.
- Put the Jet Ski on the water, the Jet Ski signal light (N) will begin flashing.
- Press the 2.4GHz Signal Match Button for 4 seconds. The Transmitter signal light (P) will begin flashing for 6-7 seconds. When the Jet Ski signal light (N) stays lit, signal pairing between the Jet Ski and Transmitter is completed.
- To avoid interference during the signal matching process, please make sure there are no other 2.4GHz devices operating nearby during pairing.
- If the Jet Ski is matched with more than one Transmitter, or more than one Jet Ski is matched to one Transmitter, Repeat the pairing procedures listed above.

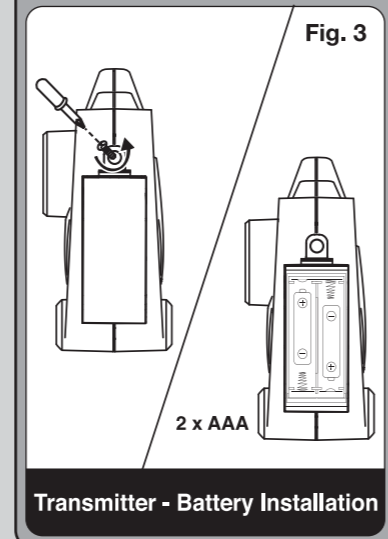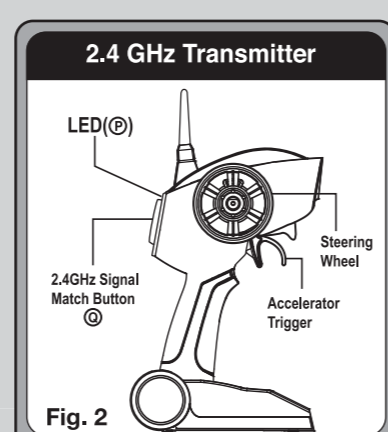


How To Play

 
- Put the Jet Ski in fresh water (*DO NOT use in salt water).
- Pull back on the Transmitter Trigger to drive the Jet Ski Forward. Push forward on the Trigger to Stop the Jet Ski.

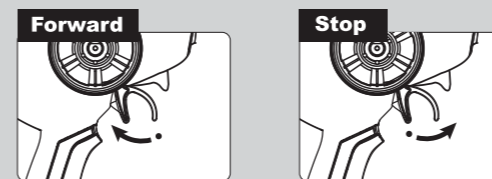

 - Turn the Steering Wheel to control the Jet Ski turning left or right.

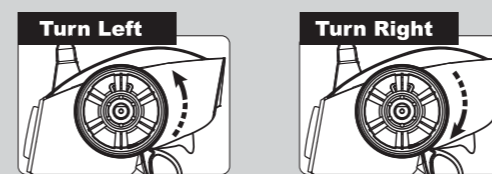

Direction Adjustment

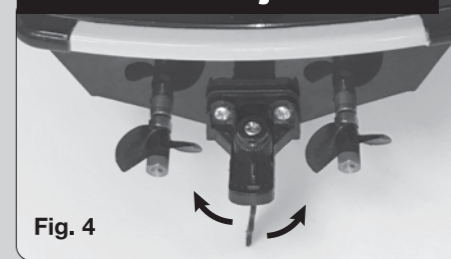 

- If the Jet Ski does not run in a straight line, adjust the Direction Adjustment on the Jet Ski chassis. (Fig. 4)
- Play on flat, smooth water for optimal performance.
- Remove all batteries from the Jet Ski and Transmitter after playing.
- Dry the inside compartments of any water that may have entered the Jet Ski's interior.
- Leave the Jet Ski compartments open to fully dry before storing.
- The optimal control range is up to 30M (98 Ft.) outdoors.

***The maximum playing time with a fully charged battery is 15mins. Please drive the Jet Ski back before the batteries are exhausted.**

Performance Tips

- The Jet Ski has a built-in Safety Feature that allows it to work only when it is placed in water. The Jet Ski will not work if it isn't floating in water.
- Do not operate the Jet Ski where there is debris or plants in the water, as they could cause damage to the propeller or the hull.
- Never play outdoors during extreme weather, such as thunderstorms and strong current or wind.
- Avoid hard crashes.
- Remove all the batteries when not in use to prevent damage from battery leakage.
- Always keep hands, hair and loose clothing away from the propellers.
- The operating range can be affected by a variety of factors such as:
 - Low Voltage of batteries in Transmitter or Jet Ski.
 - Interference from other items that emit radio frequency signals.
 - Structures and other physical surroundings
- Always take the Jet Ski out of the water before the battery power fails.
- This Jet Ski is not intended for children under 6 years of age, as it contains small parts.
- Never use chemicals such as benzene, alcohol, or thinner to clean the boat.
- Avoid use in salt water (ocean water), as parts will become damaged and/or rusted.
- Dry the inside compartments of any water that may have entered the Jet Ski's interior after playing.
- Warning: Remove all the water out of the Jet Ski after place in water everytime.

FCC label compliance statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna
 - Increase the separation between the equipment and receiver
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
 - Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS-210 Compliance Statement:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Declaration of Conformity

The product is in conformity with the requirement of EU Directive 2014/53/EU

Environmental notes:

The whole product also does not belong to household waste at the end of the product life. You can return it at collection points for the recycling of electronic and electrical instruments. The symbol on the item, instruction manual, hangtag or packing is showing this clearly. Materials should be recycled according to their respective markings. Recycling of old devices or other re-use of materials contained therein represents an important contribution to environmental protection. Please ask at your local community for the correct collection point.

Disposal of batteries

Batteries should not be disposed of in the household waste. As the consumer you are legally obliged to return batteries containing harmful substances and all other used batteries. You can hand in your old batteries at public collection points in your area or wherever batteries are sold. You will find these chemical abbreviations along with a crossed-out refuse bin on batteries containing harmful substances:
 Pb=Battery contains lead
 Cd=Battery contains cadmium
 Hg=Battery contains mercury



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

Batteries are for demonstration purposes only. They should be replaced upon purchase for optimal performance. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

Contents and colors may vary.

FAST LANE IS A MARK OF (EST UNE MARQUE DE/ES UNA MARCA DE) GEOFFREY, LLC. A SUBSIDIARY OF (UNE FILIALE DE/UNA SUBSIDIARIA DE) TOYS "R" US, INC. © 2018 GEOFFREY, LLC. MADE IN CHINA (FABRIQUÉ EN CHINE/FABRICADO EN CHINA) DISTRIBUTED IN THE UNITED STATES BY (DISTRIBUÉ AUX ÉTATS-UNIS PAR/DISTRIBUIDO EN LOS ESTADOS UNIDOS POR) TOYS "R" US, INC., WAYNE, NJ 07470 IMPORTED BY (IMPORTÉ PAR/IMPORTADO POR) TOYS "R" US (CANADA) LTD. (LTÉE), 2777 LANGSTAFF ROAD, CONCORD, ON L4K 4M5 DISTRIBUTED IN AUSTRALIA BY (DISTRIBUÉ EN AUSTRALIE PAR/DISTRIBUIDO EN AUSTRALIA POR) TOYS "R" US (AUSTRALIA) (AUSTRALIE) PTY LTD.(LTÉE), REGENTS PARK NSW 2143

www.toysrus.com

www.toysrus.ca



87-22612-38300



Kawasaki & JET SKI® ULTRA®310R are trademarks licensed by Kawasaki Motors Corp., U.S.A., which does not manufacture or distribute this product. Officially Licensed Product by Kawasaki Motors Europe N.V. All rights reserved 2017. Kawasaki & JET SKI® ULTRA®310R are trademarks of Kawasaki Motors Europe N.V.

