

Party Speaker

Model No.: KP9

Model No.: PS-916



Read this booklet thoroughly before using and save it for future reference



Unit must be fully charged before use

Safety information and Warnings

CAUTION

Symbol Definitions

DANGER- Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. This symbol appears only in the most extreme situations.

WARNING - Indicates a potentially hazardous situation which could result in death or serious injury.

CAUTION- Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or product/property/damage. It also warns against unsafe practices



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to Persons.



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

READ ALL INSTRUCTIONS BEFORE USE



Always follow basic safety precautions when using this Bluetooth speaker system, especially when children are present.

SAFETY INSTRUCTIONS

- 1) Read this Instruction Manual before you attempt to connect or operate the appliance.
- 2) Keep these instructions in good condition. Heed all warnings. Follow all instructions.
- 3) Save this Instruction Manual for future reference.
- 4) The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- 5) No naked flame source, such as candles, should be placed on the product.
- 6) Children should be supervised to ensure that they do not play with the appliance.
- 7) Ventilation should not be impeded by covering the ventilation openings.
- 8) Ensure that the unit is connected to the DC 5V USB cable supplied when charging. Using higher voltage may cause the unit to malfunction or even fire catching. Turn

 
- off the unit before unplugging it from power source to completely switch it off.
- 9) Do not plug/ unplug the power plug into/from an electrical outlet with wet hands.
 - 10) If the power plug does not fit into your outlet, do not force the plug into an electrical socket if it does not fit.
 - 11) Use replacement parts, which are specified by the manufacturer.
 - 12) Install the unit in accordance with the manufacturer's instructions.
 - 13) Place the unit where there is good ventilation. Place the system on a flat, hard and stable surface. Do not expose to temperatures above 40°C. Allow at least 30 cm clearance from the rear and the top of the unit and 5 cm from each side.
 - 14) Press the buttons of the unit gently. Pressing them too hard can damage the unit.
 - 15) Dispose of used batteries in an environmental-responsible manner.
 - 16) Always ensure that the product is unplugged from the electrical outlet before moving or cleaning. Clean it with dry cloth only.
 - 17) Unplug the product during lightning, storms or when it will not be used for long periods of time.
 - 18) This product has no user-serviceable parts. Do not attempt to repair this product yourself. Only qualified service personnel should perform servicing. Take the product to the electronics repair shop of your choice for inspection and repair.
 - 19) NEVER let anyone, especially children, push anything into holes, slots or any other openings in the unit's casing as this could result in a fatal electric shock.
 - 20) Don't mount this product on a wall or ceiling.
 - 21) Do not place the unit near TVs, speakers and other objects that generate strong magnetic fields.
 - 22) Do not leave the unit unattended when it is in use.

NOTE: To disconnect the system completely if it not to be used for a long time, remove the charging cable.

Guide to the Appliance

 
 
Top View

1. EQ/BASS BUTTON
2. PAIR/R BUTTON
3. ⏮ BUTTON
4. MENU BUTTON
(MIC VOLUME, ECHO EFFECT,
KEY ADJUSTMENT)
5. CHARGING INDICATOR
6. HANDLE
7. SMARTPHONE HOLDER
8. LED DISPLAY
9. LIGHT BUTTON
10. ⏭ BUTTON
11. ⏩ BUTTON
12. ⏻ / FUNC. BUTTON
13. VOLUME KNOB

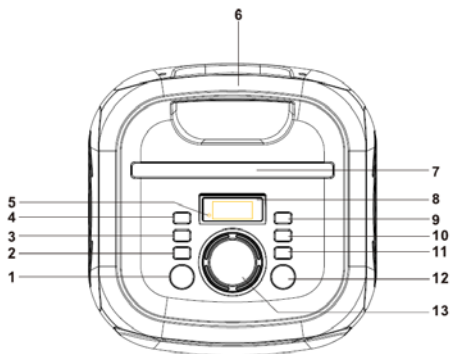

Front and Back view

14. TWEETER
15. STROBE LIGHT
16. SPEAKERS
17. SPEAKER GRILLE
18. 3.5MM AUX IN JACK
19. 6.3MM MIC JACK
20. USB PORT
21. DC IN PORT
22. VENTILATION HOLES

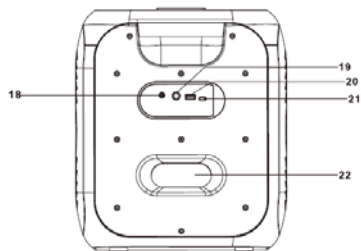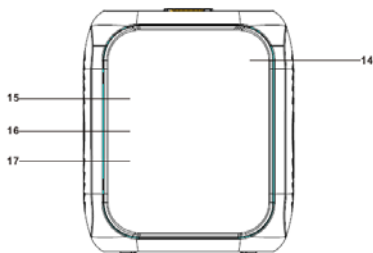

Getting Started

POWER SOURCE

This unit works with rechargeable lithium battery (the battery capacity 2000mAh). Fully charge the unit (around 4 hours) before using the product for the first time. The playback time has about 2 hours after full charging. Connect the type C USB cable (included) into the DC IN port on the device while the battery pack is attached initiates the charging of the battery, connect the other end of the USB cable to a suitable power source, the charge LED indicator lights red during charging, when the battery is fully charged the indicator will turn to green. When the unit is with low battery, the LED indicator will flash in red.


Warning:

1. If the unit is fully charge, unplug charging cable to protect the battery from over charge.
2. If the unit is with low battery, turn off the power switch to protect the battery from over discharge.
3. Do not change the battery, only high-qualified personnel can perform this operation.

OPERATION INSTRUCTION


BASIC FUNCTION

TURNING THE UNIT ON/OFF

Press and hold the  / **FUNC.** button to switch the unit on/off.

Electrostatic Discharge hints-The unit may reset or many not reset to normal operation mode due to electrostatic discharge, just switch if off and reconnect again.

SETTING THE FUNCTION MODE

To change the function modes, press the  / **FUNC.** button repeatedly to choose FM/AUX /BLUETOOTH/USB function.

ADJUSTING THE VOLUME

1. Rotate the **VOLUME** knob on the unit to increase or decrease the music volume.
2. Press the **MENU** button on the unit to switch to "EU00" displayed, and then rotate the **VOLUME** knob to increase or decrease the microphone volume.

EQUALIZER (EQ) FUNCTION

This unit has a built-in equalizer system, Press the **EQ/BASS** button on the unit to select a setting that best matches the music style: FLAT, POP, CLASSIC, JAZZ, and ROCK.

BASS ADJUSTMENT

Press and hold the **EQ/BASS** button on the unit to increase the bass effect.

KEY LEVEL ADJUSTMENT

You can create a funny sound of the voice from the microphone by adjusting the key level.

1. Plug the microphone , the key adjustment function will be active to the microphone output.
2. Press the **MENU** button to switch to "H-00" displayed. There're 4 kinds of key levels, rotate the **VOLUME** knob to select the desire level.

3. To quit the KEY adjustment function, rotate the **VOLUME** knob till the display shows "OFF".

MICROPHONE ECHO ADJUSTMENT

Press the **MENU** button on the unit to switch to "EC00" displayed, and then rotate the **VOLUME** knob to increase or decrease the echo effect.

FLASHING LIGHT



There are 5 flashing modes of the full panel light show. Press the **LIGHT** button to choose the light modes. To turn off the light, press the **LIGHT** button until "LOFF" shows on the display.

RADIO OPERATION

 
Press the  / **FUNC.** Button on the unit, the display reads FM and the radio frequency.

 
Tuning to a radio station


If you know the station frequency that you want to tune to directly:

Press the  or  button repeatedly. The station frequency is shown on the display.


 



AUTO PRESET MEMORY/SCAN

To scan for stations within reception range and save them to preset memory automatically, press and hold the  button. After the unit is finished scanning, the unit will automatically tune to preset number 1(P-01). To tune to a preset station:

To tune to the next preset station, press the  button.

To tune to the previous preset, press the  button.

USB OPERATION

1. Press the  / **FUNC.** button on the unit to select USB mode.
2. Plug the USB memory stick to the USB port on back of the unit. Playback will start automatically from Track 1.
3. To pause playback, press the **PLAY/PAUSE** button on the unit. The playing time will flash on the display.
4. To resume playback, press the **PLAY/PAUSE** button again.
5. To select a desired track, press the  or  button respectively during playing until the desired track appears on the display. The unit will start play automatically.
6. To search for a particular passage during playback, press and hold the  or  button to scan the current playing track at high speed until desired point (passage) appears, then release the button for normal playback mode.

Important: The USB port is intended for data transfer only, other devices cannot be used with this USB connection. The use of USB extension cords is not recommended. Don't plug the USB from the unit when playing or reading the USB device.

REPEAT PLAY

You can play one track or all tracks on the USB repeatedly.

To repeat a Single Track

Press the **PAIR/R** button on the unit, the display will show “ONE” and the current track will be played over and over again.

To repeat all the Tracks

Press the **PAIR/R** button on the unit, the display will show “ALL” and all tracks on the USB will be played over and over again.

To repeat the folder (only for USB which contains more than one folder)

Press the **PAIR/R** button on unit until “FOLD” shows on the display, the current folder will be repeated over and over again.

RANDOM PLAY

Press the **PAIR/R** button on the unit in play mode till the “RAN” shows on the display, the random play will start from next track automatically.

To switch off the repeat function, press the **PAIR/R** button on the unit until “OFF” shows on the display.

BLUETOOTH OPERATION

1. Press the **⏻ / FUNC.** button on the unit to switch to BLUETOOTH function, “bt” is flashed on the display.
2. Turn on the Bluetooth function on the device, scan the unit “PS-916” and connect, then input the password 0000 if required, and the display will show “bt” to indicate connection done. Press Play to start playback.
3. Rotate the **VOLUME** knob on the unit or adjust the volume on the external device to increase or decrease the music volume to your desired level.
4. Press the **PAIR/R** button to disconnect Bluetooth.


Note: The Bluetooth works best within 10 meters in open air.

TWS OPERATION:

If you have two units of this model, you can connect the two units by TWS function to become stereo output.

1. Connect the device to one of the units by Bluetooth function
2. Turn on another unit and switch to Bluetooth mode.
3. Press and hold the **PAIR/R** button on the any unit, then these two units will connect automatically with a sound indicated that the connection is done. One unit will show “tS-r” and another unit will show “tS-L”, then these two units will become stereo output.
4. Control of EQ, volume, play, pause, next track and previous track, super bass, light adjustment can be done by both units.
5. To quit the TWS between the two units, press and hold the **PAIR/R** button on any unit to disconnect the TWS.

AUX-IN OPERATION

1. Press the  / **FUNC.** button on the unit to select the “AUX” mode.
2. Connect your audio device to the AUX IN jack on the rear panel of the unit with an AUX IN cable.(audio cable is not included)
3. Rotate the **VOLUME** knob on the unit or adjust the volume on the external device to increase or decrease the music volume to your desired level.
4. Control the playback with your audio device.

TECHNICAL SPECIFICATIONS

GENERAL

Power Requirements	DC 5V 2A
Battery type	Built-in rechargeable battery, 2000mAh/7.4V, lithium
Power output	20W
AUX IN jack	3.5mm
Microphone jack	6.3mm
Work temperature	5°C - +35°C
FM frequency	87.5-108 MHz

USB memory section

Playback format	WMA/MP3
Memory	32MB to 32GB

Bluetooth

Communication system	Bluetooth Standard version 5.4
Reception Range	10 meter (line-of-sight distance)
Compatible Bluetooth profiles	Advanced Audio Distribution Profile (A2DP)

ACCESSORIES

Instruction Manual x 1pc
Type-C charging cable x 1pc

Note: Specifications are subject to change for continuous improvement without prior notice.

FCC Notice:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complied with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.