

Front



USER MANUAL Bluetooth headset

Model EV6832
For use with Bluetooth® enabled devices

Wireless Neckbuds
Thank you for purchasing the Everlast Wireless Neckbuds. For best use of this device we recommend carefully reading this user manual and keeping it for your records.

- Package contains
- Wireless Neckbuds
 - USB charging cable
 - User Manual



b.



c.



Product Description

Model: EV6832
Bluetooth Standard: V4.2
Battery: High-capability rechargeable lithium polymer battery
Profiles Supported: Headset/Handsfree/leap/AVRCP

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not properly installed and used, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, we encourage you to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Please refer to the user manual for more information. FOR HOME OR OFFICE USE.

Warning:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Battery Information

Your device is powered by a rechargeable battery. The full performance of a new battery will be realized after a full charge. A fully charged battery will last its charge over time. Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15C and 25C (59F and 77F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

Manufactured by WorldWide Accessories, Inc.

PO Box 194

2000 Broadway Ave

New York, NY 10016

Tech Support: 1-800-751-3247

TechSupport@WorldWideAcc.com

All other trademarks are property of their respective companies.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.



Back

Features

- Power on-Long press the "MFB" button for 2 second until the indicator light flashes red and blue.
- Power off-With the wireless neckbuds power on, long press the "MFB" button for 3 second and goes off.
- Answering a call-Press the answer key on your phone or short press the "MFB" button on your wireless neckbuds.
- Ending a call-Press the end key on your phone or short press the "MFB" button on your wireless neckbuds.
- Rejecting a call-Press the end key on your phone or long press the "MFB" button 2 seconds on your wireless neckbuds.
- Recalling the last called number-Double press the "MFB" button when wireless neckbuds is in standby mode.
- Play / Pause-When you are listening to the music from the wireless neckbuds, you can short press the "MFB" button to play and pause.
- Previous/Next Track -Previous Track when short press the "+", Next Track when short press the "-".
- Volume control-Volume will be up when long press the "+", and will be down when long press the "-".

Precautions / Tips

Cautions

- Please keep or use this product at normal temperature;
- Do not expose this product in rain or moisture;
- Do not throw this product to avoid any damage;
- Do not disassemble, repair or reform this product;
- Do not clean this product with any chemical solvents; needed;
- Please use USB power of DCSV for output when needed;
- Do not throw away or put it in high temperature (higher than 60°C) fire to avoid any danger.

Features

- Pair to your Phone
 - Pair the wireless neckbuds for the first time, the distance between the wireless neckbuds and your phone would be better within 1 meter when pairing.
 - When the wireless neckbuds is off, press and hold the "MFB" until the red and blue lights flash alternately.
 - Start your phone bluetooth function.
 - Search bluetooth device, choose "EV6832".
 - Input pair code 0000 (The password is required for some phones.)
 - Repeat above-mentioned steps if the pairing was unsuccessful.
 - The blue light will flash if paired successfully.

Charging

The LED light will turn red during charging.
When the battery is fully charged, the LED light will turn blue.

Important: Different mobile phone brands or menu functions, the usage will be different. Please read your phone's manual carefully.

LIMITED WARRANTY

WorldWide Accessories Inc., warrants to the first consumer purchaser that this product, when shipped in its original packaging, is free from defects in materials and workmanship under normal use and for one year and agrees that it will, at its option, either repair, replace, or refund the defective product or part thereof at no charge to the purchaser for parts or labor for the time period described, provided that the product is returned to the manufacturer in its original packaging. The product and its parts shall not be used in a product the exterior of which has been damaged or altered, which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction. The limited warranty described herein is in addition to an applicable law. ALL USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Other than the time period and the limited use restrictions, no other restrictions are intended to be placed on the use of the product. This warranty is void if the product is used for any purpose other than that intended for the product. The start of any warranty period shall be the date of purchase of the product. The warranties described herein shall be the sole and exclusive warranties granted by WorldWide Accessories, Inc. in the manner and for the period of time described herein, and shall constitute complete fulfillment of all liabilities and responsibilities of WorldWide Accessories Inc. to the purchaser with respect to the product and its parts. WorldWide Accessories Inc. shall not be liable for consequential damages, for personal injury or property damage, or for incidental or consequential economic or property damage. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY IS VOID WHERE PROHIBITED BY LAW. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Send product with \$1 US shipping & handling fee to:

WorldWide Accessories, Inc.
PO BOX 194, 244 Madison Avenue,
New York, NY 10016
Tech Support: 1-800-751-3247
TechSupport@WorldWideAcc.com