

BP1731 - WIRELESS STUDIO HEADPHONES

Front

BLAUPUNKT WIRELESS STUDIO HEADPHONES



WIRELESS STUDIO HEADPHONES
USER MANUAL

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement
This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard, FOR HOME OR OFFICE USE.

FCC ID: 2AML6KR602

 
Warning :

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

ITEM DESCRIPTION

Thank you for purchasing the BLAUPUNKT® Wireless Studio Headphones. For best use of this device, we recommend carefully reading this user manual and keeping it for your records.

- Package contains:
- Wireless Studio Headphones
 - User manual
 - 6.3mm & 3.5mm cables
 - Leatherette pouch



Specifications

Speaker:	50mm neodymium driver
Frequency Response:	20Hz-20KHz
Impedance:	32±15% Ohms
Magnet Type:	NdFeB magnet
Sensitivity:	110dB ± 3dB
Sound-insulating Film:	PET
Max Input Power:	300 mW
Plug Type:	6.3mm & 3.5mm stereo jack
Cable 1:	176cm - 249cm coiled cable

Battery information

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Never use any charger that is damaged. Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.



BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.

NAME HEADPHONES AS "BP-BT-HP"

Back

Key Functions

Power Switch	To turn the power on, hold the power button for 2 seconds until LED light flashes blue and red. To turn the power off, hold the Power Button for 2 seconds until power off.
Pairing to Device	Power on the wireless headphones, hold the Multifunction Button on the headphones for 2 seconds, earbuds will enter pairing mode. Activate the Bluetooth® feature on your device, and set the device to search for wireless devices. (See the User Manual for your device). The headphones will show on your device as BP-BT-HP. If pass code is requested enter 0000. If the pairing is successful, the headphones' LED indicator will flash blue every 4 seconds. Once the headphones have paired with your device, no password will be needed to reconnect. If not paired, the headphones will turn off after 3 minutes.
Receive / Hang Up Phone Call	Press Multifunction Button to receive phone calls, press again to end phone call. Press twice to redial the last phone number. Press and hold for 2 seconds to decline phone call.
Play / Pause	In music mode, press once to pause, and again to play. (Music will pause when device receives phone call and will continue once call ends)
Next Song	In music mode, press the "▶" button to play next track.
Previous Song	In music mode, press the "◀" button to play previous track.
Volume Increase	Press and hold the "▶" button to increase volume.
Volume Decrease	Press and hold the "◀" button to decrease volume.

Features

- **High-resolving and deep-reaching sound**
The 50mm large neodymium driver and innovative technology deliver high definition sound in new perfection and reproduces all your music's dynamics and controlled bass that DJs and audiophiles need.
- **6.3mm & 3.5mm Audio Jack Design**
Our solution for the adapter-free headphones. They come with a detachable spring cable that with 3.5mm & 6.3mm plug on each end. For connecting to ordinary audio devices, such as, mobile phone, iPad, iPod, etc., you can plug the 6.3mm side into the headphones, the other side to your music player device; For connecting to professional musical instruments, such as Mixer, Turntable, you can plug the 3.5mm side into the headphones, and the other side to your Mixer, guitar, etc.
- **Foldable and Portable**
DJ Pro are flexible headphones that can be naturally adjusted to fit any sized head. Besides, it can be folded flat and put into the designed pouch when on the move.
- **90° Rotating Ear Cups**
The ear cups pivots for a personalized fit, and rotates 90 degrees to lay flat. The lay-flat design makes them easier to transport and more comfortable when resting around the neck. Besides, the ear-cups can be rotated both left and right for single-ear monitoring.
- **Premium Comfort Ear Pads and Excellent Noise-Cancelling Performance**
The over-ear pads are covered with premium memory foam protein leather for extended comfort and added noise isolation.
- **Stretchable Coiled Cable**
The static 176cm cable can be stretched up to 249cm for extended use.



PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR HEADPHONES. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

- Your headphones has an internal rechargeable battery. Improper usage may result in the headphones becoming hot, ignite or burst and cause injury if exposed to conditions of abuse. Be sure to follow the safety warnings listed below:
1. Do not assemble, throw away or damage the headphones.
 2. Store the headphones in a dry place, keeping it away from damp corrosive materials and environments such as salt air.
 3. Keep the headphones away from direct sunlight, fire, and high voltage equipment. Do not store the headphones inside a car during hot weather. Remember a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200F.
 4. The headphones are not toys. Please keep it out of the reach of young children. Please do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at "call2Recycle.org" for a battery recycling drop off location near you.

Charging the battery

This device has an internal, rechargeable battery.

1. Plug the charger cable into the headphones.
2. Connect the charger to a USB power source. The red indicator light will display during charging. Charging does not start, disconnect the charger plug it in again, and retry. Charging the battery fully may take up to 3 hours.
3. When the battery is fully charged, the red indicator light will turn off. Disconnect the charger from the USB power source and the headphones. The fully charged battery has power for up to 4-5 hours of music time or up to 240 hours of standby time. However, the talk and standby times may vary when used with different devices, settings, and environments.

LIMITED WARRANTY

WorldWide Accessories Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of WorldWide Accessories Inc.

The warranties described herein shall be the sole and exclusive warranties granted by WorldWide Accessories Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of WorldWide Accessories Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of WorldWide Accessories Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Send product with \$11.95 shipping & handling fee to:

WorldWide Accessories, Inc. Tech Support: 1-800-751-3247
PO Box 194
244 Madison Ave. TechSupport@WorldWideAcc.com
New York, NY 10016