 


Front

Specifications

| | |
|---------------------|------------|
| Distance: | 33 Feet |
| Battery Size: | 300 mAh |
| Charging Voltage: | DC 5V |
| Loudspeaker Size: | 40 mm |
| Speaker Impedance: | 32Ω |
| Working Time: | 6 hrs. |
| Microphone: | Built-in |
| Power Rating: | 100 mw |
| Working Voltage: | DC 3.7V |
| Frequency Response: | 20Hz-20KHz |

 
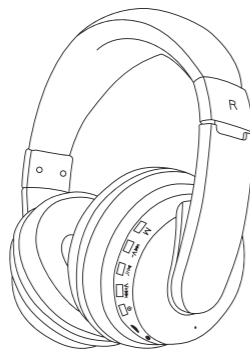 


billboard
WIRELESS HEADPHONES
for use with Bluetooth™ enabled devices



Buttons & Functions

- A. Adjustable Headband
- B. Mode Button
- C. Volume Down/Previous Track
- D. Play/Pause, Answer/End Calls
- E. Volume Up/Next Track
- F. Power Button
- G. TF (MicroSD) Card port
- H. 3.5 AUX input port
- I. Microphone
- J. MicroUSB Power port
- K. LED indicator
- L. MicroUSB Power cable
- M. AUX cable

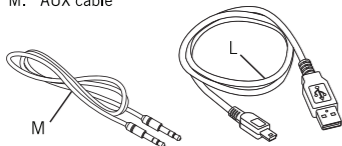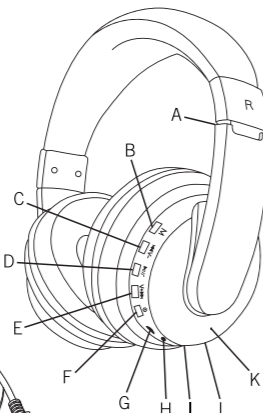

Charging the Headphones

1. Plug the micro USB cable into the micro USB port on the bottom of the headphones, and connect the other end of the cable to either a computer USB port or to a USB-compatible car or wall charger.
2. The LED light will turn red during charging.
3. When the battery is fully charged, the LED light will turn off.
4. Charging time is approximately 2-3 hours.
5. Headphones will make a sound when the battery is low.

Turn On/Off

- Press the On/Off button and hold for seconds till the LED light turns blue and red.
- Press the On/Off button and hold for seconds till the LED light turns off.

Bluetooth™ Connect with a new device

1. Turn the headphones on, The LED light will flash blue & red.
 2. On your Bluetooth™-enabled device navigate to the Bluetooth™ settings, turn on the Bluetooth feature and search for new devices.
 3. After a few seconds you will see it's pairing name listed as **BB-BT-HP**
 4. Tap the display name to select it. The headphones will prompt a sound and the LED light will turn blue to indicate successful pairing with your device.
- ** If your device asks for a pin code, enter 0000 or 1234.

If using AUX feature. Turn off headphones and connect one end of the AUX cable to the headphone jack and the other end to your device.

Note: On-ear controls do not work through the AUX connection.

Wireless Audio Control

1. Once you have connected to your Bluetooth™ enabled device (refer to the "Bluetooth™ Connect with a new device" section) open an audio app on your device, and press play.
2. On the headphone controls, short press the Volume UP/Next track (or Volume Down/Previous track) button to go to the next/prev track, long press to raise/lower the volume.
3. You can pause and resume music playback by pressing the Play/Pause button.

Answer/End Calls

1. When there is a call, press the Answer/End Calls (Play/Pause) button to answer. After the call press the Answer/End Calls button to hang up.
- ** If the other party hangs up first, you do not need to press the button.
2. If you need to redial the last number called, quickly double press the Answer/End Calls button.

FM Radio Mode

1. In Bluetooth™ mode, press the Mode button to go to FM Radio mode. (A voice will notify you of the mode change.)
2. Press the Play/Pause button to scan for all available frequencies. This process may take several minutes, please wait until it finishes.
3. When the scan is complete, you can search through the available frequencies by pressing the Prev & Next track buttons.

Back

TF (MicroSD) Card Mode

1. Carefully insert the TF (MicroSD) card, electrical connections downward, pressing until you feel it lock into place. There will be springloaded resistance, so be careful not let go of the card until it is locked in.
- ** If the card does not appear to fit, flip it over and try again.
2. Music will begin to play automatically and the LED light will flash blue.
 3. You can search through the available tracks on the TF card by pressing the Prev & Next track buttons.
 4. To remove the card, press it into the headphone, and the locking mechanism will release it to the spring that forces it out of the port.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.

Battery information

- Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.
- Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.
- Never use any charger that is damaged.
- Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged.
- Always dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

© 2019 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 and associated characters, trademarks and design elements are owned and licensed by Billboard IP Holdings, LLC and used under license by: ESI Cases & Accessories, 44 East 32nd Street, New York, NY 10016



Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

FCC Information

FCC ID: 2AML6KR603

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving equipment.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

LIMITED WARRANTY

ESI Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases and Accessories.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases and Accessories and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases and Accessories to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall ESI Cases and Accessories be liable or in any way responsible, for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Send device with the product to:
ESI Cases and Accessories,
44 East 32nd Street, 6th floor
New York, New York 10016
* Enclose proof of purchase and \$5.95 for Shipping and Handling.

TECHNICAL SUPPORT: 212 883-8838
E-MAIL: techsupport@esicases.com