

## 13. USER'S MANUAL

### **Safety Information For FRS UNIT**


Your wireless handheld portable transceiver contains a low power transmitter. When the Push-to Talk (PTT) button is pushed it sends out radio frequency (RF) signals. This device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices.

**Important Note:** To maintain compliance with the FCC's RF exposure guidelines, hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.

If you wear the handset on your body while using the headset accessory, use only the manufacturers supplied belt clip for this product and ensure that the antenna is at least 1 inch (2.5 centimeters) from your body when transmitting.

Use only the supplied antenna. Unauthorized antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.

## 13.1 Key Name

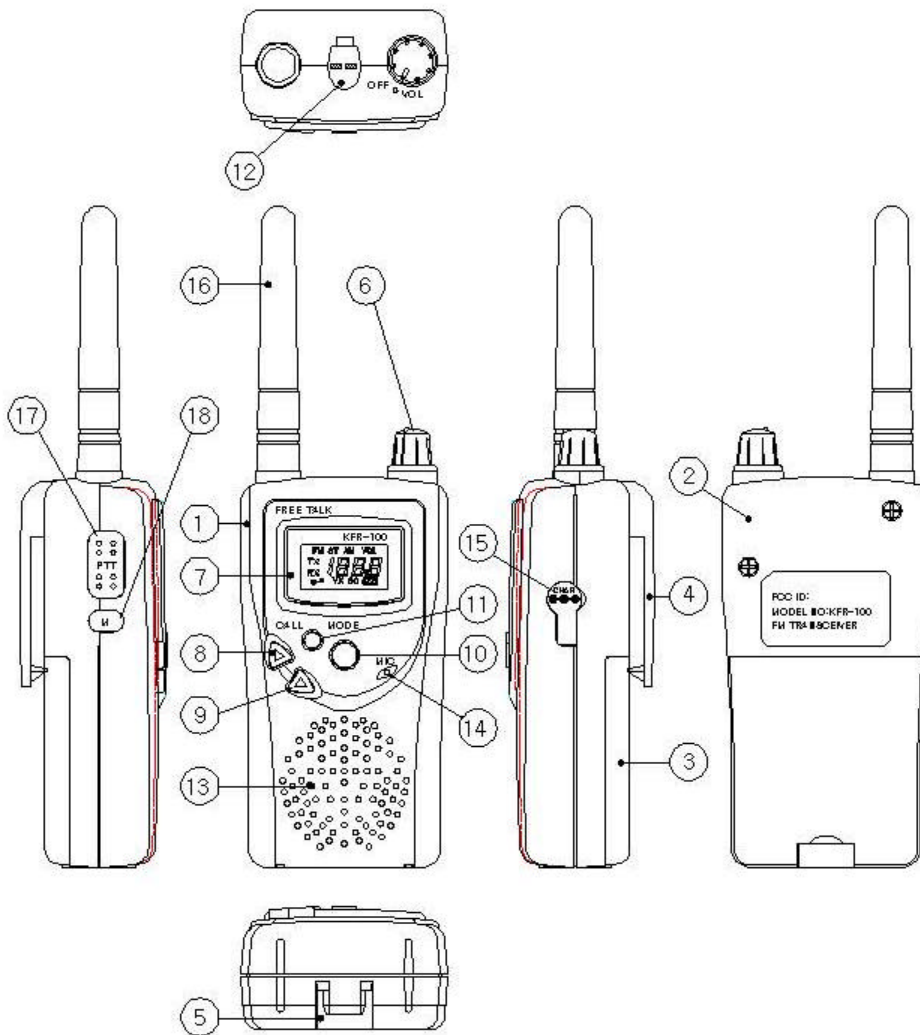

## FUNCTIONS AND CONTROLS

- 1) Top Cover
- 2) Bottom Cover
- 3) Battery Cover
- 4) Belt Clip
- 5) Lock Knob
- 6) Volume Knob
- 7) LCD Window
- 8) Up Botton
- 9) Down Botton
- 10) Menu Botton
- 11) Call Botton
- 12) Ear Mic/Spk Cap
- 13) Speaker
- 14) Mic
- 15) Charger Cap
- 16) Antenna
- 17) PTT Botton
- 18) Monitor Botton

## 13.2 ICONS on LCD



### 1) CTCSS Indicator

Blinks digits right side when CTCSS code selected up/dn key, and confirm by PTT key.

### 2) Auto Channel Scan Indicator

icon appears in the auto scan mode or when the auto scan mode is activated.

**SC**

### 3) Lock Indicator

icon lock selection mode or when the call key long pressed.



### 4) VOX Indicator

icon blinks in VOX selection mode or appears when VOX is activated.

**VX**

### 5) Battery Level Indicator

Battery Level Meter indicates the remaining battery strength.



### 6) Tx Indicator

icon appears when a signal is being transmitted.

**TX**

### 8) Rx Indicator

icon appears when a signal is being received.

**RX**

### 9) Left side Segment Display

Indicates the channel number in use at the normal mode.

when the Function Button is pressed, it displays the function menu in sequence:

FM radio CH / CTC / VOX / TOT

### 13) Right side Segment Display

Displays the CTCSS tone option at the normal mode.

Displays the SUBMENU of each MENU in the function mode.

(e.g. CH 1~38 / UO: On,OF / TOT: On,OF / FM radio Vol LVL0~7 / CAL number:1~5)

## 13.3 Key Function

### 13.3-1 Power Volume on/off

#### 1) Clockwise - Power On

- To turn the unit on.  
A short confirming melody will play.

#### 2) Counterclockwise - Power Off

- To turn the unit off.

### 13.3-2 Mode button

#### Short Touch

:Press this button briefly to enter function edit mode in standby mode.

#### Long Touch

:Auto Channel SCAN

This feature allows you to scan for an active channel and communicate with the party transmitting.

To access the Auto Channel Scan,

- Press the Mode Button until the auto channel icon blinks and SC appears in the LCD Panel.
- Press the Up Button or the Down Button to choose scanning up or down from the current channel number.
- Press the PTT button to confirm your selection.
- The unit will begin scanning for an active main channel. If a transmission is detected, the Rx will appear on the LCD Panel.
- To turn off the auto channel scan feature in the standby mode, simply press the Function button once.

### 13.3-3 UP button

- In the standby mode, press this button briefly to move to the next higher main or sub channel.  
In the function edit mode, press briefly to shift from the current option in each submenu to the next option in the same submenu.
- Pressing this button for radio mode will allow you to volume level in the standby of radio mode or through different menus in the function edit mode.

### 13.3-4 DOWN button

- In the standby mode, press this button briefly to move to the previous lower main or sub channel.  
In the function edit mode, press briefly to shift from the current option in each submenu to the previous option in the same submenu.
- Pressing this button for radio mode will allow you to volume level in the standby of radio mode or through different menus in the function edit mode.

### 13.3-5 Push-to-Talk (PTT) button

- Press it firmly and speak into the Built-in Microphone to transmit.  
The red Tx icon on the LCD Panel will appear.
- Release it to revert to standby mode. When an incoming call is received, the Rx icon on the LCD Panel will appear.


### 13.3-6 Monitor button

- Press it to check activity on the current channel before you try to transmit.
- Adjust the Volume Control if necessary.
- When you press the monitor button shortly, the LCD Panel will be illuminated with a green color back-light.
- and if you want to hear low signal, press 1 second more and then you can hear the signal during press monitor button and RX icon will appear.

### 13.3-7 Call button

- Call Ringer  
:Press the CALL Button to call another party on the same channel.  
TX icon will appear on the display.  
The user selected 5 call ringer melody will play.
- Key Lock  
:This feature prevents accidental channel change and disturbance to the preferred settings of the communicator. Key Lock temporarily disables the call key pressed 2 seconds.

To access the Key Lock Selection menu,

- Press the call key until the auto lock icon  appears on the LCD panel.
- To disable lock function press 2 seconds again.

### 13.3-8 External Mic/Speaker

- This jack accepts an optional headset/microphone for totally handsfree operation.  
Please refer to the enclosed accessory order form to order accessories.  
See also section regarding VOX SELECTION MODE.

## 13.4 Setting and Operation

### 13.4-1 Basic Channel Selection

In order to communicate with other FRS units, both you and the receiving party must be on the same channel.

KFR-100 has 14 channels as indicated by the left side digits in the LCD Display Panel. Before, trying to transmit on the selected channel, you should press the monitor button to check the activity on that channel.

If someone is already on the selected channel, you should try another channel that is clear.

To change the basic channel,

- In the standby mode, press the Up button briefly to move to the next higher main channel number.
- Press the Down button briefly to move to the next lower main channel number.

### 13.4-2 FM Radio Mode

In order to listen FM radio, you can set the Menu button.

First, FM icon blink and then press up/dn button the radio mode setted.

If you wanted channel select, you can press Menu button the radio frequency blinking And the radio frequencies moving by up/dn button pressing, after then confirm CH by PTT key pressed.

- In radio mode, Menu button 2 seconds press you can more easily radio frequency seeking 100 KHz spacing.

Also, radio volume is controlled by up/dn button.

- Radio lock set and disable is confirm by Call button 2 seconds more.

### 13.4-3 CTCSS (Coded Tone Controlled Squelch System) Sub-Channel selection mode

This feature allows you to utilize a less used channel range (00-38) within a main channel. This enables you to communicate with another party on the same main channel using the same subcode. This helps to avoid congestion on the main channel and filters out unwanted noise and static.

There are 38 CTCSS sub-channels for each main channel.

To change the CTCSS sub-channel,

- Press the Function Button until right side digits blinking on the LCD Panel.

- Press the Up button or the Down button to choose the desired sub-channel to use. The corresponding sub-code frequency will be displayed right-side corner.

- Press the PTT Key to confirm your selection.

*NOTE: To communicate with other FRS units, they must be switched to the same channel and CTCSS subcode. To communicate with other FRS units that do not have subcodes, switch your unit to the same channel with the subcode set to OFF.*

#### 13.4-5 VOX Selection Mode

The Voice Activated Transmission (VOX) function allows your voice to activate transmission automatically when the communicator is used with the optional handsfree mic/headset (refer to enclosed accessory order form). It also allows handsfree use when a mic/headset is not being used without having to use the PTT button.

To access the VOX selection menu,

- Press the Mode button until the VOX icon blinks and VX appears on the LCD Panel.
- Press the Up button or the Down Button to select ON/OFF.
- Press the PTT button to confirm your selection.
- To turn off the VOX feature, enter the VOX selection mode and then select Off to confirm by PTT key pressed.

#### 13.4-6 Call Ringer Melody Selection Mode

This feature provides 5 user selectable call ringer melodies to alert you of a calling party.

To select your favorite Call Ringer melody,

- Press the Mode button until the call icon blinks and A1~A5 appears on the LCD panel.
- Press the Up button or Down button to preview the 5 available melodies.
- Press the PTT key to confirm your selection.