

EUT:JOYSTICK

FCC ID:FSUGJOS30D

KYE SYSTEMS CORP.

USER'S MANUAL

# Grand BogeyMan

## User's manual

### Introduction

Congratulations on your purchase of the Genius Grand BogeyMan joystick. This game device supports your favorite games under Windows 3.x/95/98 and DOS. See the diagram below for the digital joystick controls and features:

Button 1 (trigger)

Button 2

Button 3

Button 4

Digital Throttle

Point of view (POV)

Button 5

Button 6

Button 7

Button 8

Button 9

Button 10

Rudder

### Hardware Installation

1. Turn off your computer.
2. Plug the joystick connector into the 15-pin game controller port on the computer firmly.
3. Plug the connector of the adapter into the back of the joystick connector.
4. Plug the adapter into the power supply.
5. Turn on your PC and enjoy your games.

### Software Installation

#### **Under Windows3.x or DOS:**

- 1 *Driver for Windows3.x or DOS:*
  - 1.1 No driver or software is necessary for Windows 3.x or DOS. This is because the games read directly from the hardware. Configure and setup the joystick for each game individually.
- 2 *Calibrate the joystick:*
  - 2.1 Whoever begins using the joystick at the start of each game, they must calibrate and set up the functions for each game controller.
  - 2.2 Start the game and choose the **[Option]** or **[Control]**. (The item selected is

- 1.1. **Four** conventional joystick buttons on the handle (button 1-4).
- 1.2. **Six** additional buttons on the base (button 5-10).
2. **Digital Throttle:** The throttle gives you command over incremental game functions. You can speed up, or slow down, or set the speed by yourself. It can also be assigned as thrust or altitude.
3. **Rudder:** The rudder gives you 3D control besides conventional x-axis and y-axis joystick movement. This gives you more rapid movements for dogfights.
4. **Hat switch:** The hat switch gives different and directional views to see the surroundings with a touch of a thumb. You can see different viewpoints from where you are.

### Tips

If the game controller is not responding to the games, try the following solutions:

1. Check to see **joystick connector** is plugged into the game port firmly.
2. You maybe using a **multiple game card** - Remove or disable all but one of the cards. Refer to the game-card documentation for more information.
3. **Bent pins** - Check for bent pins on the game-port connector, and make sure all cable connectors are secure.
4. **Y-cable** - Some Y-cable or joystick extension cables do not support the Genius Amusement Controller. Plug the game controller directly into the game-port and check again.
5. If the game controller still does not work, shut down the PC for a while, restart it and you might find it works OK.