



- Overview
- System Requirements
- Installation
- Multimedia Button Functions
- Setting Program

Overview

Congratulations on your purchase of the Multimedia Keyboard. The Multimedia Keyboard combines a standard keyboard layout with 16 convenient Multimedia Buttons which control the following:

 
- CD control buttons: Play/Pause, Previous, Next, and Stop.
- Volume control buttons: Volume Up, Volume Down, and Mute
- World Wide Web site buttons: Internet browser, and E-mail.
- Re-defineable control buttons: The function of button can be re-difined.



This On-line Help is designed to assist you using the 16 Multimedia Buttons and the setting program, so you can fully maximize use of your Multimedia Keyboard.

IBM, PC/AT and PS/2 are registered trademarks of International Business Machines Corporation.
Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States of America and/or other countries.
All other trademarks are trademarks of their respective holders.

[Top](#)

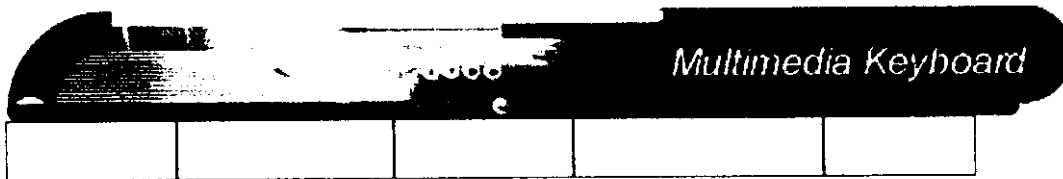

System Requirements

 
Before installing the Multimedia Keyboard software, please make sure that the hardware connections of your keyboard are correctly set up. The following system specifications are required:

- IBM PC compatible system
- Microsoft® Windows® 98/2000 or NT4.0
- CD-ROM drive (for CD and Video operation)
- Standard sound card (for CD and Video operation)

When using the 3 power management buttons, particular requirements are needed:

- **Microsoft® Windows® 98/2000 Operating System**
- **The system supporting ACPI or APM II**
- **ATX mother board and ATX power supply**

[Top](#)

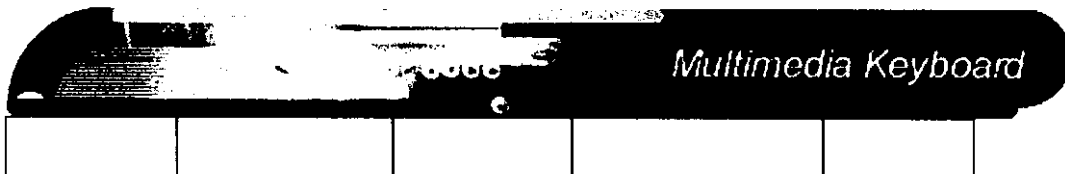

Installation

[Installation for Windows 95/98](#)

[Uninstallation](#)

Installation for Windows 95/98

Please follow the instructions below on how to install the Multimedia Keyboard software to your PC system.

 
1. Please insert the CD included in your package, labeled 'Multimedia Keyboard Driver', into your CD-ROM drive.

2. The system will automatically run the *setup.exe* once after the CD is inserted. However, if the system fails to perform this procedure, simply double-click on the *setup.exe* to continue the installation procedure.
3. Follow all the on-screen instructions.

Uninstallation

1. From the Windows Start Menu, locate uninstall under **Programs Files\MediaKey**, and double-click on *Uninstall Versato* to uninstall the driver.

[Top](#)

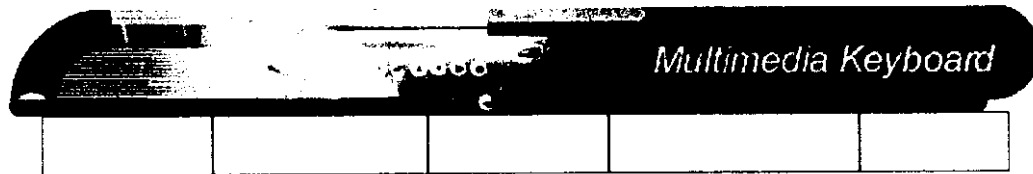

Multimedia Button Functions

Note: Please make sure that both hardware and software are correctly installed in your system before proceeding to use the Multimedia Buttons.

The 16 Multimedia Buttons on the keyboard are labeled as follows:


Function Name	Function Description
Previous	Skips backward to the previous file when pressing once.
Play/Pause	Begins to play the audio/video file. When a CD or Video is playing, press this button once to "pause", and press the button a second time to resume playing.
Stop	Terminates the play function.
Next	Skips forward to the next file/track when pressed once quickly.

Eject	Eject and reload the disk tray
Volume Down	Decrease the audio output.
Volume Up	Increases the volume of the audio output.
Mute	Mutes the sound output. Repress this button to resume.
Close	Close the active window.
DOS Shell	Open the MS-DOS program.
E-Mail	Opens the default e-mail application
Help	Open Versato On-line Help
WWW	Launches the default Internet Browser application.

About the **PLAY** Function


The **PLAY** function can play or "read" all audio/video compact discs, and video files (.AVI, .MPG, .MOV). Once you place a disc into the CD-ROM drive and press the **PLAY** button, the software automatically detects whether the disc is an Audio CD or a Video CD. If neither an audio nor a video disc is in the CD-ROM drive and the **PLAY** button is pressed, a dialog box will appear to help you find and select a video file to play.

 If two CD-ROM drives are installed in your system, only the default drive can be controlled.

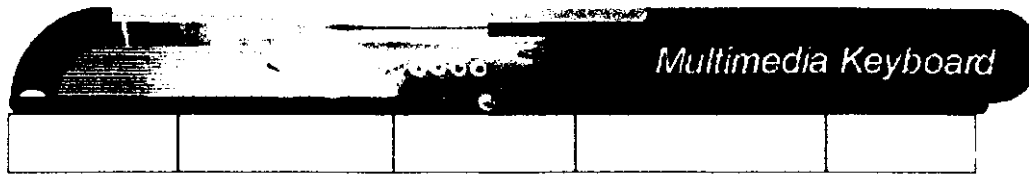


Setting Program

This section describes how to use the Multimedia Keyboard setting program.

Once the software installation for the Multimedia Keyboard is complete, the icon  is shown on the Windows® taskbar. The setting program provides 16 graphic Multimedia Buttons on the screen. You can use these graphic Multimedia Buttons for all multimedia functions.

Graphic Multimedia Buttons




Left-click the icon  on the taskbar of Windows® to activate the graphic Multimedia Buttons. The 16 Multimedia buttons and an Exit button are labelled according to their corresponding icon. Once you place the pointer on a button, a tooltip dialog box will appear displaying the function of the particular button. Left-clicking a button performs the same function as pressing the corresponding button on the keyboard.

Disable/Enable OSD

Once you press a button on your keyboard or click a button on the screen, the name of the function executed will appear in the lower-left corner of the screen. The message is called the "On Screen Display".

 This option allows the user to 'hide' or 'show' the On Screen Display.

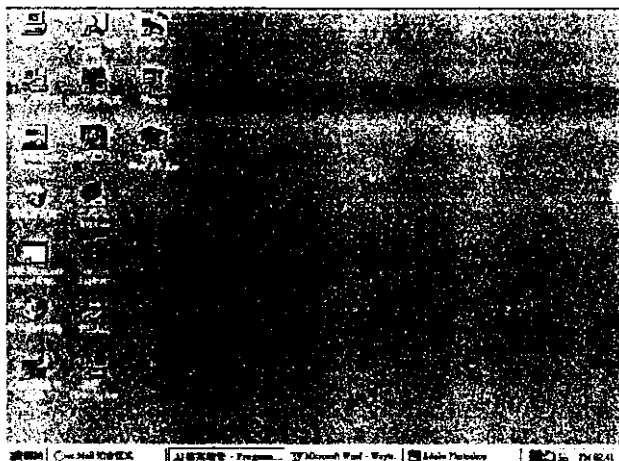

OSD (On Screen Display)

Set OSD Timeout

This option allows the duration of the On Screen Display to be set. The OSD timeout controls how long the function display remains on the screen after pressing a Multimedia button.

Help

This option allows access to the on-line help file, which includes help on multimedia button function descriptions and setting program instructions.

About

This option activates a dialog box displaying information about the Multimedia Keyboard driver.

Exit

This option allows the user to close the Multimedia Keyboard driver and remove it from the computer's memory.