


**Hardware Installation**

1. Install two rechargeable AA batteries into the mouse and two AAA batteries into the keyboard.
2. Plug in your USB receiver to a USB port of your PC.
3. Turn on your PC.

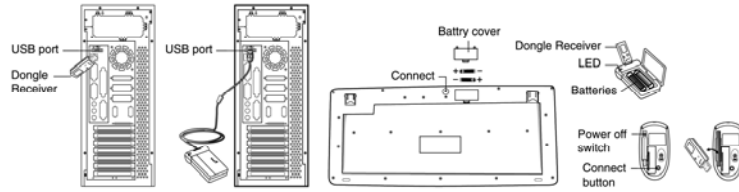

**Software Installation**

1. Place your CD driver in your PC drive for software installation
2. Follow the instruction on the screen to finish the software installation

**Replace Batteries**

When your mouse or keyboard does not work properly, then the batteries have lost their charge, so please replace them. (Warning: please do not mix or use different types of batteries at the same time)

### **ID Channel Setting**

The channel ID is factory preset. The green LED (data transmission indicator) will be lit constantly when the wireless device is in normal operation. In case your wireless devices do not work, please reset the ID channel by:


1. Press the connect button on the receiver and the light will be blinking for connection.
2. Press the connect buttons of the keyboard and mouse within 20 seconds.
3. To confirm the connection of the wireless devices, the LED light will be lit constantly for approximately three seconds and will turn off after being connected.

### **Charger and charging usage**

1. The charger device can be used to recharge both AA and AAA batteries; **two batteries** must be charged simultaneously.
2. Make sure that only rechargeable batteries (NiMH~Nickle-Metal-Hydride) batteries are used and placed in the correct position.
3. For safety, the charger features a **recognition function** for alkaline batteries placed and/or when the batteries are not placed in the correct polarity direction; resulting in charger's LED Light to **blink between green and red** to indicate a warning.

## ENGLISH

4. The LED will be **red** in charging mode and **Green** when batteries are fully charged.
5. The Hub on the charger is designed for a dongle receiver or other USB accessories (such as mouse, flash memory stick).

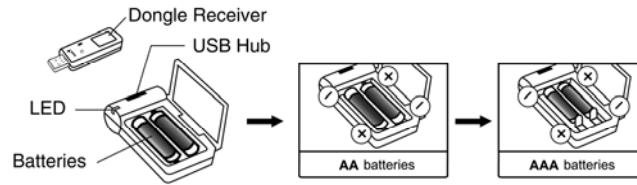

### Warning (Trouble shooting)

1. Please do not use the wireless optical mouse on a surface that is made of glass, iron, black velvet or a desk that is made of metal, as they will reduce the operational distance of the keyboard and mouse.
2. The wireless desktop set provides 256 ID codes, and it selects the ID # for your wireless devices. You can only set up one wireless desktop at a time. When you have another 27Mhz wireless desktop set within 10 square meters, there may be interference between the wireless devices.
3. The wireless mouse uses an IR sensor and **no light** will be shown just like an ordinary optical mouse.

## ENGLISH

4. You need to place **two AA or AAA** rechargeable batteries simultaneously in the charger for it to charge correctly.
5. Please do not mix or use different types of batteries in the battery charger such as Li-ion, NiCd, Alkaline, etc.
6. The charging current of the charger is approximately 210mA; please connect the charger device directly to a PC or a safe power device (HUB device with power adaptor).

### Keyboard hot key definition

1. Scrolling button: Show the *applications opened* on windows desktop.
2. Instant Com: Activate internet *conversational tools* such MSN messenger, ICQ, Windows messenger, Skype, etc
3. Copy: Activate *copy* function
4. Paste: Activate *paste* function
5. Save: Activate *save* function
6. Print: *Print* function
7. WWW: Open browser in *Netscape or IE*
8. Refresh: *Refresh* the Internet pages
9. Stop: *Stop* your display of Netscape or IE page
10. My favorite: Activate my favorite function
11. Mail: Activate *email* feature
12. Word: Open office *Word* feature

## ENGLISH

13. Excel: Open office *Excel* feature
14. Power point: Open Power Point feature
15. Calculator: activate *Calculator* function
16. Sleep: Turn the system into *Sleep* mode
17. Media player: Activate *Media Player* function
18. Stop media: *Stop playing* music or video sources
19. Mute: Remove sound
20. Previous Track: Go back to previous track
21. Next Track: Go to next track
22. Volume Down: Decrease volume level
23. Volume Up: Increase volume level
24. Play/Pause: Play/Pause the music or video sources.



### Notes on Battery Usage

---

When you use the battery, carefully read and strictly observe the **Safety Instructions** and the notes described below:

- Different battery types and surrounding temperatures may affect the battery performance.
- Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce wireless device performance.
- If you are using the new rechargeable battery or rechargeable battery that has not been used for an extended period of time (batteries that pass the expiry date are exceptions) might affect the number of pictures that can be taken. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and discharge them for at least one complete cycle before use.
- The battery may feel warm when using the wireless device for an extended period of time or using the flash continuously. This is normal and not a malfunction.
- The wireless device may feel warm when being used continuously or for an extended period of time. This is normal and not a malfunction.
- If you will not be using the batteries for an extended period of time, remove them from the wireless device to prevent leakage or corrosion.
- Always keep the terminals in a clean state.
- Never use manganese batteries.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.

**This device complies with part 15 of the FCC rules.**

**Operation is subject to the following two conditions.**

**(1) This device may not cause harmful interference, and**

**(2) This device must accept any interference received,  
including interference that may cause undesired operation.**

**Per FCC 15.21, you are cautioned that changes or modifications  
not expressly approved by the part responsible for compliance  
could void the user's authority to operate the equipment.**