 

Hardware Installation

1. Install one AA battery into the mouse and two AA batteries into the keyboard.
2. Plug in your USB receiver to a USB port of your PC.

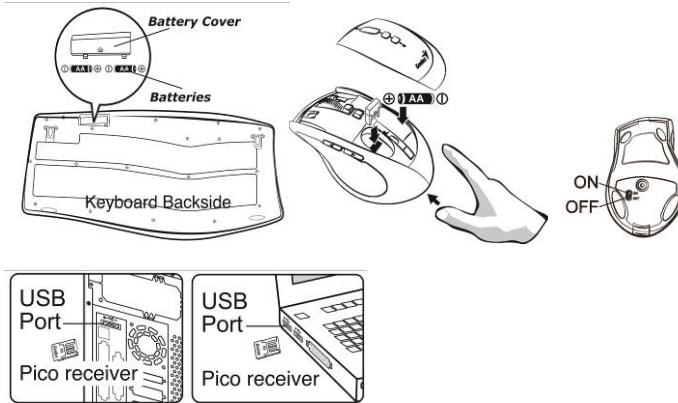

Software Installation

1. Place your CD driver in your PC drive for software installation.
2. Follow the instruction on the screen to finish the software installation.



ID Channel Setting and connection:

After you install the receiver:

 
Wait about 5-10 seconds and the connection will be executed and the kit will be ready for use.

Replace Batteries

If the mouse or keyboard does not work properly, then the batteries have lost their charge, so you need to replace them.

Warning: do not mix or use different types of batteries at the same time.

Keyboard hot key definition

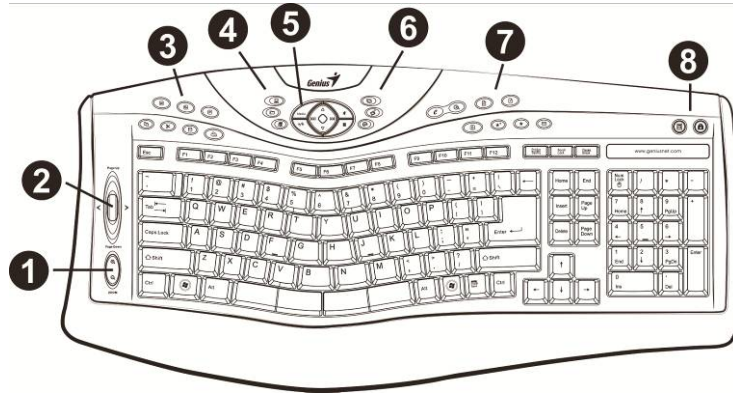

1)




	Zoom In	Enlarge the ratio of office documents or pictures
	Zoom out	Decrease the ratio of office documents or pictures

2)




Page up	Scroll up the current page
Scrolling	Open current applications
Page Down	Scroll down the current page

3)





	Copy	Activate copy function
	Cut	Activate cut function
	Save	Activate save function
	Print	Activate print function

	Word	Access to Word file
	Excel	Access to Excel file
	Power Point	Access to Power Point file




4)

	My computer	Open My computer path
	My document	Access to My document file
	My picture	Access to My picture file



5)







Media	Media player	Activate Media Player
	Play/Pause	Play/Pause music or video sources
	Previous Track	Back to Previous track
	Volume Up	Increase volume
	Volume Down	Decrease volume
	Next Track	Go to next track
	Mute	Toggle off /on
	Stop	Stop play of audio/video sources

6)



	Flip	For quick preview of all opened windows in one easy view
	Desktop	Easy access to Windows desktop view
	Smart Search	Easy to search your request in the web site

7)

	Internet	Open browser in Netscape or IE
	Search	Open Internet Explorer search panel


	Refresh	Update the information on an active Internet page
	Stop	Stop loading or refresh a web page
	My Blog	Activate MSN space or setup blog web site by users
	Add to my favorite	Add a web site to Internet Explorer favorite panel
	My Favorite	Open Internet Explorer favorite panel
	Mail	Active a default email program

8)

	Calculator	Access to calculator function
	Lock	Activate the security lock function

Mouse Button Assignments

 1. **Previous Page:** Go to last page of Internet Explorer
2. **Next Page:** Go to last page of Internet Explorer
3. **Left Button:** Provides traditional mouse functions like click, double click and drag.
4. **Magic-Roller:** Press the “Magic-Roller” to surf the Internet and Windows documents.
5. **Right Button:** Provides traditional mouse click functions.
6. **Flying Scroll:** Press and hold to move vertically or horizontally for 4-way scrolling.
7. **DPI adjustment:** Default is 1600 dpi, press once for 800 dpi. Quick red flashing is 1600 dpi and slow red flashing is 800 dpi.

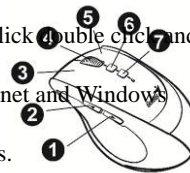

Notes on Battery Usage

When you use the battery, carefully read and strictly observe the *Safety Instructions* and the notes described below:

- Different battery types and surrounding temperatures may affect the battery performance.
- Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce wireless device performance.
- If you are using a new rechargeable battery or rechargeable battery that has not

been used for an extended period of time (batteries that pass the expiry date are exceptions) it might affect the period of time you can use this device. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and discharge them for at least one complete cycle before use.

- The battery may feel warm when using the wireless device for an extended period of time. This is normal and not a malfunction.
- The wireless device may feel warm when being used continuously or for an extended period of time. This is normal and not a malfunction.
- If you will not be using the batteries for an extended period of time, remove them from the wireless device to prevent leakage or corrosion.
- Always keep the terminals in a clean state.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. (15.21)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.(15.19(a)(3))

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.