


封面W:135mm

正面印刷

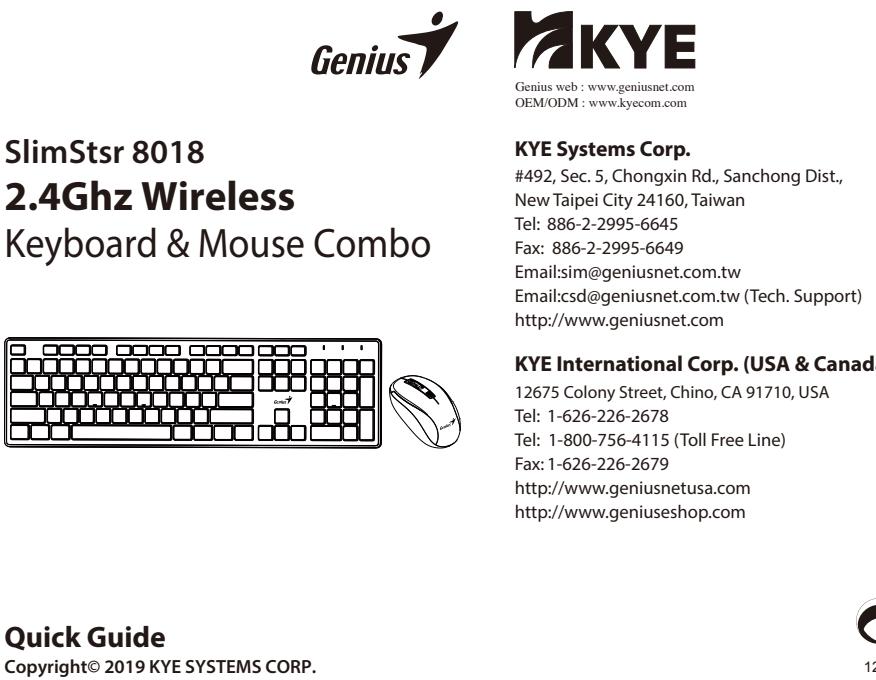

Quick Guide

Copyright © 2019 KYE SYSTEMS CORP.

Определение функциональных клавиш клавиатуры	
Fn + F1	программатор Windows
Fn + F2	понижение уровня звука
Fn + F3	повышение уровня звука
Fn + F4	отключение звука
Fn + F5	назад
Fn + F6	далее
Fn + F7	воспроизведение и пауза
Fn + F8	остановка воспроизведения
Fn + F9	веб-браузер
Fn + F10	электронная почта
Fn + F11	Мой компьютер
Fn + F12	Мой любимое



GEMINI

Genius

www.genius.com

OEMODM - www.yeycom.com

KYE Systems Corp.

#492, Sec. 5, Chongpin Rd., Sanchong Dist.,

New Taipei City 24160, Taiwan

Tel: 886-2-2995-6645

Fax: 886-2-2995-6649

Email:slim@geniusnet.com.tw

Email:cs@geniusnet.com.tw (Tech. Support)

http://www.geniusnet.com

http://www.genius.com

http://www.geniuseshop.com

KYE International Corp. (USA & Canada)

12675 Colony Street, Chino, CA 91710, USA

Tel: 1-626-226-2678

Fax: 1-626-226-2679

http://www.geniususa.com

http://www.geniuseshop.com

Quick Guide

Copyright © 2019 KYE SYSTEMS CORP.



1203053400-A

Figure

- Remove the battery cover from the mouse. Install two AAA batteries into the mouse.

Replace Batteries

If the mouse or keyboard does not work properly, then the batteries have lost their charge, so you need to replace them. Warning: do not mix or use different types of batteries at the same time.

Notes on Battery Usage

When you use the battery, carefully read and strictly observe the Safety Instructions and the notes described below:

- Different battery types and surrounding temperatures may affect the battery life.
- Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce wireless device performance.
- If you are using a rechargeable battery or a rechargeable battery, it must be used for an extended period of time (batteries that pass the expiry date are exceptions) it might affect the period of time according to local regulations.
- You can use this device. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and store them for future use in a cool environment.
- The battery or wireless device may feel warm when using for an extended period of time. This is normal and not a malfunction.
- If you will not be using the batteries for an extended period of time, remove them from the wireless device to prevent leakage or corrosion.
- Always keep the terminals in a clean state.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to local regulations.

4. DPI: 800 / 1200 / 1600

3

Plug the receiver into your computer

Receiver

USB port

Receiver

USB port

Receiver Storage

Receiver

Storage

AAAx2

Battery cover

AAAx2

Battery Cover