


封面W:135mm

正面印刷

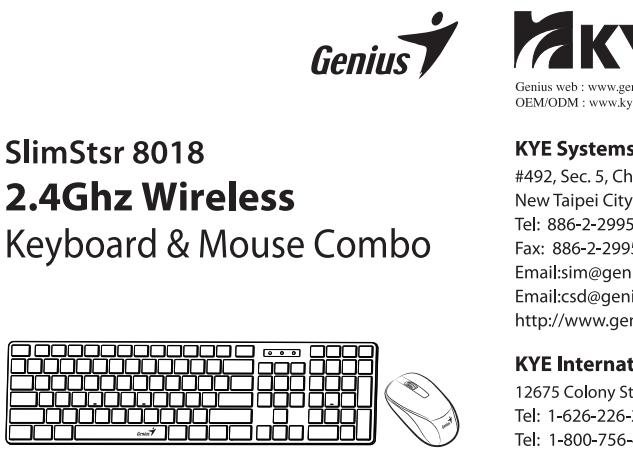

Quick Guide

Copyright © 2019 KYE SYSTEMS CORP.


Определение функциональных клавиш клавиатуры	
Fn + F1	программатор Windows
Fn + F2	понижение уровня звука
Fn + F3	повышение уровня звука
Fn + F4	отключение звука
Fn + F5	назад
Fn + F6	далее
Fn + F7	воспроизведение и пауза
Fn + F8	остановка воспроизведения
Fn + F9	веб-браузер
Fn + F10	электронная почта
Fn + F11	Мой компьютер
Fn + F12	Мой любимое



GEMOM - www.geniusnet.com

SlimStrs 8018
2.4Ghz Wireless

Keyboard & Mouse Combo

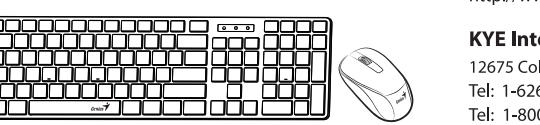

1203053400-A

Figure
1 Remove the battery cover from the mouse.
2 Remove the battery cover from the keyboard.
3 Plug the receiver into your computer.

Replace Batteries
If the mouse or keyboard does not work properly, then the batteries have lost their charge, so you need to replace them. Warning: do not mix or use different types of batteries at the same time.

Notes on Battery Usage

When you use the battery, carefully read and strictly observe the Safety Instructions and the notes described below:
 • Different battery types and surrounding temperatures may affect the battery life.
 • Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce wireless device performance.
 • If you are using a non-rechargeable battery or rechargeable battery, please note that it has been used for an extended period of time (batteries that pass the expiry date are exceptions) it might affect the period of time according to local regulations.
 • You can use this device. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries before using them for the first time.
 • The battery or wireless device may feel warm when using for an extended period of time. This is normal and not a malfunction.
 • If you will not be using the batteries for an extended period of time, remove them from the wireless device to prevent leakage or corrosion.
 • Always keep the terminals in a clean state.
 • Risk of explosion if battery is replaced by an incorrect type.
 • Dispose of used batteries according to local regulations.

Battery cover
AAx1
Receiver Storage

Battery cover
AAAx1
Battery Cover

Receiver

Media Player

Volume -

Volume +

Mute

Next Track

Previous Track

Play/Pause

Stop Playing

Web / Homepage

Email

My computer

My favorite

Media Player

Volume -

Volume +

Mute

Anterior

Siguiente

Proximo

Riproduzione/Pausa

Arresto della lettura

Fermare Riproduzione

Navigatore

Web Browser / Home

E-mail

Il mio computer

Il mio preferito

Media Player

Volume -

Volume +

Mute

Precedente

Sigüiente

Riproduzione/Pausa

Arresto della lettura

Fermare riproduzione

Navigatore

Web Browser

E-mail

Il mio computer

Il mio preferito

Media Player

Volume -

Volume +

Mute

Anterior

Siguiente

Proximo

Riproduzione/Pausa

Arresto della lettura

Fermare riproduzione

Navigatore

Web Browser

E-mail

Il mio computer

Il mio preferito

Media Player

Volume -

Volume +

Mute

Anterior

Siguiente

Proximo

Riproduzione/Pausa

Arresto della lettura

Fermare riproduzione

Navigatore

Web Browser

E-mail

Il mio computer

Il mio preferito

Media Player

Volume -

Volume +

Mute

Anterior

Siguiente

Proximo

Riproduzione/Pausa

Arresto della lettura

Fermare riproduzione

Navigatore

Web Browser

E-mail

Il mio computer

Il mio preferito

Media Player

Volume -

Volume +

Mute

Anterior

Siguiente

Proximo

Riproduzione/Pausa