

KB-8100說明書



KM-8100

Wireless Multimedia Keyboard & Mouse




Multi-language Quick Guide

Copyright© KYE SYSTEMS CORP.


1

Remove the battery cover from the mouse.
Install one AA battery into the mouse.

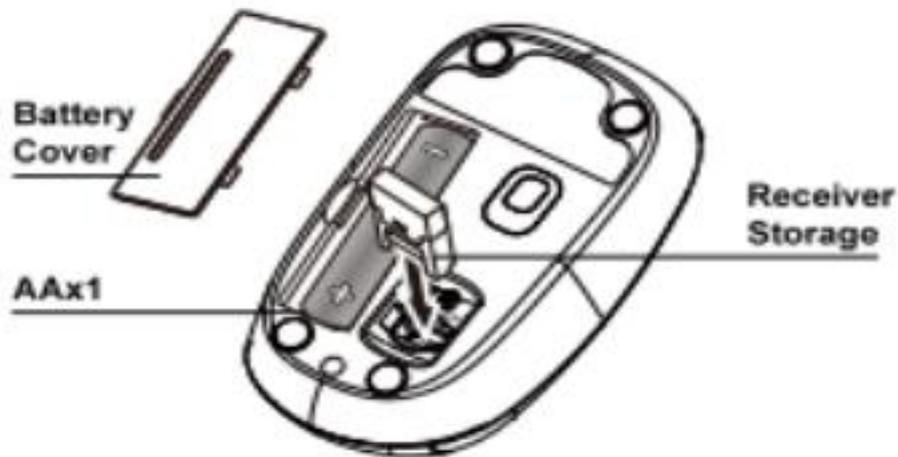

2

Remove the battery cover from the keyboard.
Install one AA batteries into the keyboard.

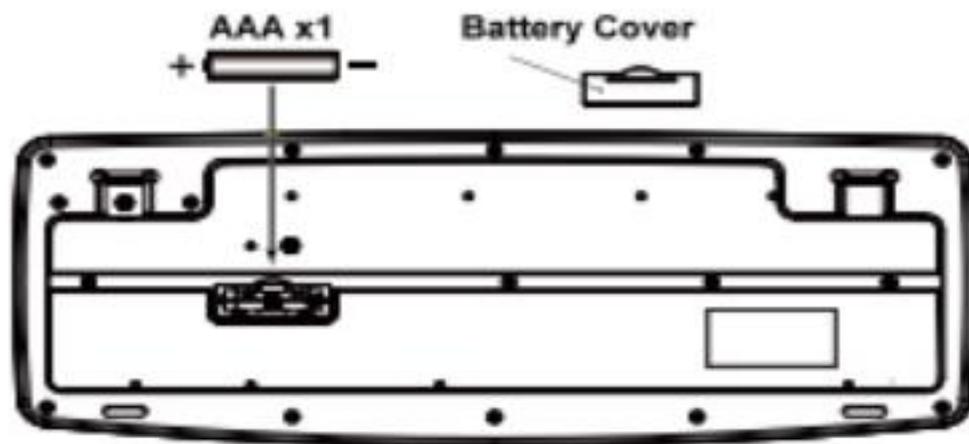

3

Open the power switch



Plug the receiver into your computer



Connect both devices, wait 5-10 seconds and you are ready to begin



Mouse Button Assignments:

- 1. Left Button:** Provides traditional mouse functions like **click**, **double click** and **drag**.
- 2. Magic-Roller:** Scroll the button to surf the **Internet** and **Windows** documents.
- 3. Right Button:** Provides traditional mouse right **click** function

Replace Batteries:

If the mouse or keyboard does not work properly, then the batteries have lost their charge, so you need to replace them.

Warning:

do not mix or use different types of batteries at the same time.

Notes on Battery Usage:

When you use the battery, carefully read and strictly observe the Safety Instructions and the notes described below:

- Different battery types and surrounding temperatures may affect the battery performance.
- Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce wireless device performance.
- If you are using a new rechargeable battery or rechargeable battery that has not been used for an extended period of time (batteries that pass the expiry date are exceptions) it might affect the period of time according to local regulations.
- you can use this device. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and discharge them for at least one complete cycle before use.
- The battery or wireless device may feel warm when using for an extended period of time. This is normal and not a malfunction.
- If you will not be using the batteries for an extended period of time, remove them from the wireless device to prevent leakage or corrosion.
- Always keep the terminals in a clean state.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to local regulations.

Hardware Installation:

1. Install one AA battery into the mouse and one AAA battery into the keyboard.
2. Remove the Pico receiver from the mouse and plug it into a USB port on your PC.



Replace Batteries:

If the mouse or keyboard does not work properly, then the batteries have lost their charge, so you need to replace them.

Warning: do not mix or use different types of batteries at the same time.

Mouse Button Assignments:

1. **Left Button:** Provides traditional mouse functions like click, double click and drag.
2. **Magic-Roller:** Scroll the button to surf the Internet and Windows documents.
3. **Right Button:** Provides traditional mouse right click function.

Hotkeys:

	Calculator
-----------------------------------------------------------------------------------	------------

Function keys:

	Fn + F1	Media Player
	Fn + F2	Volume —
	Fn + F3	Volume +
	Fn + F4	Mute
	Fn + F5	Previous Track
	Fn + F6	Next Track
	Fn + F7	Play / Pause
	Fn + F8	Stop Playing
	Fn + F9	Web / Homepage
	Fn + F10	Email
	Fn + F11	My computer
	Fn + F12	My favorite

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio/TV technician for help.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.