

Media Pointer T905 / GM-090013

How to use the Presenter:

1. Insert two AAA batteries in the Media Pointer.
2. Plug the receiver unit into any USB port.



ID identification

The Media Pointer ID has been factory preset.

1. The 2.4GHz DSSS technology works up to 15 meters and has a anti-interference function.

Media Pointer features:

1. Power switch and mode switch.
(P for presenter mode; M for media mode)
2. The mini receiver can be stored inside the Media Pointer for easy storage.



Button Functions:



	Presenter mode	Media mode
1	Mouse Sensor	Mouse Sensor
2	Previous Page	Volume Down
3	Next Page	Volume Up
4	Laser point	Laser point
5	Switch Mode	Switch Mode
6	F5/ESC	N/A
7	Blank screen	N/A
8	N/A	Forward
9	N/A	Rewind
10	N/A	Play / Pause



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Media Pointer 100 / GM-090012

How to use the Presenter:

- 3. Insert two AAA batteries in the Media Pointer.
- 4. Plug the receiver unit into any USB port.



ID identification

The Media Pointer ID has been factory preset.

- 1. The 2.4GHz DSSS technology works up to 15 meters and has a anti-interference function.

Media Pointer features:

- 3. Power switch and mode switch.
(P for presenter mode; M for media mode)
- 4. The mini receiver can be stored inside the Media Pointer for easy storage.



Button Functions:



1	Start Presentation / Exit from full screen
2	Blank screen
3	Previous Page
4	Next Page
5	Laser Beam



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.