





- Connect
 Section Assignments
 Left Button: Provides traditional mouse functions like click, double click and drag.
 Magic-Roller: Press the "Magic-Roller" to surt the Internet and Windows documents.
 Stight Button: Provides traditional mouse click functions.
 Switch Device Button: Press this button to switch between PC or tablet device.
 Note: Download the programmable driver from our website: toww.geniusent.com
 Warning: (Troubleshooting)
 Do not use the wireless optical/aser mouse on a desk which is made of glass or mirror.
 The connection of the wireless device is factory preset, so when you plug the USB preciver into any USB port, the connection between the micro receiver and the mouse will be established automatically.
 In case your PC did not install the hardware successfully, remove the micro receiver from the USB port and go Human Interface Devices under Device Manager to remove the mouse then plug in the micro receiver to a USB port again.
 In due the mouse does not move smooth as usual, it is possible the battery has lost its charge so you need to replace it. Remember to put the battery in the correct direction.



English

FCC :

Warning: Changes or modifications to this unit not expressly approved by the

party responsible for compliance could void the user's authority to operate the

equipment.

NOTE: This equipment has been tested and found to comply with the limits for

a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio

frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the

following measures:

_ Reorient or relocate the receiving antenna.

_ Increase the separation between the equipment and receiver. - 2 -

English

_ Connect the equipment into an outlet on a circuit different from that to which

the receiver is connected.

_ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the

following two conditions : (1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that

may cause undesired operation.

- 3 -