# KT TECH

Model: KT-3268BT

# PLL Alarm Clock Radio



# INSTRUCTION MANUAL

 
Thank you for buying KT TECH's product. Please read the manual carefully to get the best performance from this unit.

 
#### **IMPORTANT**

- · Read these instructions.
- · Heed all warnings.
- Follow all instructions.
- · Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the clock radio.
- Only use attachments/accessories specified by the manufacturer.
- $\cdot$  Unplug this clock radio during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the clock radio has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the clock radio, the clock radio has been expose to rain or moisture, does not operate normally, or has been dropped.
- · This clock radio shall not be exposed to dripping or splashing.
- · Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.
- · Minimum distances around the apparatus for sufficient ventilations( exact distance of e.g.5 cm should be mentioned);
- · The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- · No naked flame sources such as lighted candles should be placed on the apparatus;
- · Attention should be drawn to the environment aspects of battery disposal;
- · The use of apparatus in tropical and /or moderate climates.

Electrical products should not be disposal of with household waste. Please recycle where facilities exist. Check with your Local Authority of retailer for recycling device. (Batteries pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## **LOCATION OF CONTROL**





13. FM ANTENNA WIRE

- Al 1/Al ARM
- 9. PM INDICATOR
- 10. BLUFTOOTH



- 11. AL2 INDICATOR/ALARM
- 12. DIGIT DISPLAY

# **CONNECT POWER**

#### CAUTION

· Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio.

TUNING - / HOUR / I

· Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.

BOTTOM OF SET: Battery compartment for 1.5 volt (LR2, AA) battery 2pcs. (not included) for temporary time storage.

#### **SET TIME**

- Press and hold TIME SET for two seconds.
- 2. Press HOUR or MINUTE to select 12/24 hours and then press TIME SET again to confirm setting.
- 3. Press HOUR and MINUTE to set hour and minute respectively.
- 4. The setting will be confirmed automatically if no button is used within 3 seconds

#### LISTEN TO FM RADIO

- I. Press Φ / FUNCTION to turn on FM radio.
  - > [FM frequency] is displayed.
- 2. Press TUNING +/- for two seconds.
  - > The FM Tuner tunes to a station with strong reception automatically.

To seach for a radio station manually:

Press TUNING +/- repeatedly to tune to a radio station

#### STORE FM RADIO STATIONS MANUALLY

- I. Tune to an FM radio station.
- 2. Press MEMORY and hold to activate the storing mode.
- 3. Press TUNING +/- to select the preset number.
  - ➤ [P 01 ~ P 20] is preset station numbers.
  - If this position is occupied, the previous stored frequency will be displayed .
  - To remove a pre-stored FM radio station, store another station in its place.

#### LISTEN TO A PRESET FM RADIO STATION

Press MEMORY to select a preset number.

#### Note

The digit display return to clock display if no buttons is pressed for  ${\bf 5}$  seconds

# LISTEN TO BLUETOOTH WIRELESS MUSIC STREAMING

- I. Press 😃 / FUNCTION to Bluetooth mode.
- 2. [bt] displays on the screen.
- Bluetooth indicator flash to wait for Bluetooth enabled device / smartphone to pair with it.
- 4. Turn on Bluetooth function at Bluetooth enable device / smartphone.
- 5. Scan KT-3268BT as device name.
- 6. Select KT-3268BT on device name list.
- 7. Bluetooth indicator flash slowly after pairing and connecting

#### **SET ALARM TIMER**

Make sure that you have set the clock correctly.

You can set two separate alarm timers. For the alarm sound, you can select the radio or the buzzer.

- I. Press 也 / FUNCTION to Clock mode.
- 2. Press and hold ALI/AL2 for two seconds.
  - >[0:00] Hour digit is blink.
- 3. Press HOUR to set the alarm hour and MINUTE to set the alarm minute.
- 4. Press ALI/AL2 again to select a sound source: RADIO or BUZZER.
  - The Radio indicator is blink if radio source is selected and ALI / AL2 indicator is light up.
  - The buzzed indicator is blink if the buzzer sound is selected and ALI / AL2 indicator is light up.
- 5. Press Time Set to confirm the ALARM TIMER
- 6. Turn off the alarm.
  - ▶ Press ALI/AL2 for two seconds and see the time is blink.
  - ▶ Press ALI/AL2 for twice until the ALI/AL2 indicator is gone .
  - ➤ Press Time Set to back clock .



#### **SET ALARM TIMER**

When alarm sounds, press SNOOZE to activate the snooze time for 9 minutes. >The ALI / AL2 indicator keeps blinking.

#### **SNOOZE ALARM**

This clock radio can switch to standby mode automatically after a preset period.

- 1. Press 🖒 / FUNCTION to radio mode.
- Press SNOOZE/DIMMER/SLEEP multi-function button repeatedly for 2 seconds to select the sleep timer period (in minutes).

To deactivate the sleep timer, press SNOOZE/DIMMER/SLEEP multi-function button repeatedly until back to OFF.

Sleep Timer period circle as follow:

#### **ADJUST VOLUME**

While listening, press + VOLUME - to adjust volume.

## **ADJUST DISPLAY BRIGHTNESS**

Press DIMMER repeatedly to select high or low brightness levels.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

#### **BATTERY BACK-UP**

(For Temporary Time Storage Only)

Install 2 x LR06, AA or EU-3 battery (not included) according to polarity shown inside the battery compartment. In the event of a power interruption, your set will not work normally from the mains supply but there is now the advantage that your clock will continue to work. The clock display will not light up, as the clock time will be held in the memory. This also enables you to move the set from place to place without re-setting the clock every time. The battery back-up system is only meant to be used from short temporary power interruption. For longer durations, the battery may become exhausted or there may be some deviation in accuracy. When the battery is exhausted, it should be removed from the set to prevent leakage. If you do not wish to take advantage of the battery back-up system, your set will work normally without a battery. However, if disconnected from the mains, the clock figures will flash when the mains are re-connected and you must re-set the clock as described in the Electronic Clock Operation paragraph.

Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustin. Please contact your retailer in order to protect the environment. Attention should be drawn to the environmental aspects of battery disposal. Electrical products should not be disposal of with household waste. Please recycle where facilities exist. Check with your Local Authority of retailer for recycling device. (Batteries pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

#### SPECIFICATION

Power Source: AC 110-240V ~50/60Hz VDE External adapter

Tuner Range: FM 87.5-108.0MHz Power Consumption: 3.5W

Product information is subject to change without prior notice.

