

PLL Alarm Clock Radio



INSTRUCTION MANUAL

Thank you for buying KT TECH's product. Please read the manual carefully to get the best performance from this unit.


IMPORTANT

- · Read these instructions.
- · Heed all warnings.
- Follow all instructions.
- $\cdot\,$ Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- · Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the clock radio.
- · Only use attachments/accessories specified by the manufacturer.
- · Unplug this clock radio during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the clock radio has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the clock radio, the clock radio has been expose to rain or moisture, does not operate normally, or has been dropped.
- · This clock radio shall not be exposed to dripping or splashing.
- · Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.
- Minimum distances around the apparatus for sufficient ventilations(exact distance of e.g.5 cm should be mentioned);
- \cdot The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- · No naked flame sources such as lighted candles should be placed on the apparatus;
- · Attention should be drawn to the environment aspects of battery disposal;
- · The use of apparatus in tropical and /or moderate climates.

Electrical products should not be disposal of with household waste. Please recycle where facilities exist. Check with your Local Authority of retailer for recycling device. (Batteries pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

1

LOCATION OF CONTROL

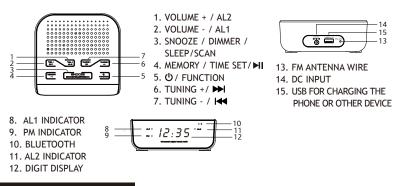

CONNECT POWER

CAUTION

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio.
- · Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.

BOTTOM OF SET : Battery compartment for 1.5 volt (2XAA/LR06/UM3) battery 2pcs. (not included) for temporary time storage.

SET TIME

- I. Press and hold TIME SET for two seconds.
- Press HOUR or MINUTE to select 12/24 hours and then press TIME SET again to confirm setting.
- 3. Press TUNING +/ to set hour.
- 4. Press TIME SET again to set minute .
- 5. Press TUNING +/- again to set minute.
- 6. Press TIME SET again to confirm setting or The setting will be confirmed automatically if no button is used within 3 seconds.

LISTEN TO FM RADIO

- Press ⊕ / FUNCTION to turn on FM radio.
 > [FM frequency] is displayed.
- Press TUNING +/- for two seconds.
 The FM Tuner tunes to a station with strong reception automatically.

To seach for a radio station manually :

Press TUNING +/- repeatedly to tune to a radio station.

Store FM Radio Stations

You can store up to 20 FM radio stations in preset channel automatically or manually.

Store FM radio stations automatically (auto scan)

- I. Press " / FUNCTION" to turn ON FM radio.
- 2. Press and hold "Tuning + or " for the FM Tuner to tune to a station automatically.
- Press and hold "SNOOZE/DIMMER/SLEEP/SCAN" multi-function button for 2 seconds.
- 4. The received stations are automatically stored to preset numbers.

STORE FM RADIO STATIONS MANUALLY

- I. Press \bigcirc / FUNCTION to tune to an FM radio station.
- 2. Press TUNING +/- repeately to tune a FM radio station.
- 3. Press MEMORY and hold to activate the storing mode for 2 seconds more.
- 4. Press TUNING +/- to select the preset number. [P01 ~ P20] is preset station numbers.
- 5. Press MEMORY again to confirm the store FM radio station.

NOTES:

- > If this position is occupied, the previous stored frequency will be displayed .
- > To remove a pre-stored FM radio station, store another station in its place.

LISTEN TO A PRESET FM RADIO STATION

- I. Press 🕛 / FUNCTION to tune to an FM radio station.
- 2. Press MEMORY to select a preset number.

Note

The digit display return to clock display if no buttons is pressed for 5 seconds

LISTEN TO BLUETOOTH WIRELESS MUSIC STREAMING

- I. Press () / FUNCTION to Bluetooth mode.
- 2. [bt] displays on the screen.
- Bluetooth indicator flash to wait for Bluetooth enabled device / smartphone to pair with it.
- 4. Turn on Bluetooth function at Bluetooth enable device / smartphone.
- 5. Scan KT-3268BT as device name.
- 6. Select KT-3268BT on device name list.
- 7. Bluetooth indicator flash slowly after pairing and connecting

3

8. Playback music or multi-media audio source on the device/ smartphone.

9. Press Volume + / - or adjust volume level on the device/ smartphone to desired level.

10. Press is skip to select previous song.

Press Hiskip to select next song.
 Press Hi to play or pause the song that is being played back.

Note

The digit display returns to clock display if no button is pressed for 10 seconds.

SET ALARM TIMER

You can set two separate alarm timers. For the alarm sound, you can select the radio or the buzzer.

1. Press 也 / FUNCTION to Clock mode.

2. Press and hold AL1/AL2 for two seconds. [0:00] Hour digit is blink.

3. Press TUNING +/- to set the alarm hour.

4. Press AL1/AL2 again to set minute.

5. Press TUNING+/- to set the alarm minute.

6. Press ALI/AL2 again to select a sound source and then press TUNING +/- to select a sound source: RADIO or BUZZER.

>The [rAd] is blink if radio source is selected and AL1 / AL2 indicator is light up.

>The [bu2] is blink if the buzzer sound is selected and ALI / AL2 indicator is light up.

▶ Press ALI/AL2 again to set alarm volume level.

≻ Press TUNING +/- to adjust desire alarm volume level

Press ALI/AL2 to off alarm function and ALI/AL2 indicator is off.

SNOOZE ALARM

When alarm sounds.press SNOOZE to activate the snooze time 9 minutes.

➤ The ALI/AL2 indicator keeps blinking.

SET SLEEP TIMER

This clock radio can switch to standby mode automatically after a preset period.

1. Press 也 / FUNCTION to radio mode.

2. Press SNOOZE/DIMMER/SLEEP/SCAN multi-function button repeatedly for 2 seconds to select the sleep timer period (in minutes).

To deactivate the sleep timer, press SNOOZE/DIMMER/SLEEP/SCAN multi-function button repeatedly until back to radio frequency.

Sleep Timer period circle as follow :

ADJUST VOLUME

While listening, press + VOLUME - to adjust volume.

ADJUST DISPLAY BRIGHTNESS

During standby mode, Press and hold DIMMER for 2 seconds repeatedly to select high or low brightness levels.

USB Charging

Use the USB charging port to charge your smartphone or to power USB powered devices such as a USB type lamp or fan.

To Connect your cell phone for charging :

Use a USB cable (not included) to connect your cell phone to the USB connector or the unit. Your cell phone should start charging.

Remarks :

Charging function may not be supported for all phones or electronic devices

BATTERY BACK-UP

(For Temporary Time Storage Only)

Install 2XAA/LR06/UM3 battery (not included) according to polarity shown inside the battery compartment. In the event of a power interruption, your set will not work normally from the mains supply but there is now the advantage that your clock will continue to work. The clock display will not light up, as the clock time will be held in the memory. This also enables you to move the set from place to place without re-setting the clock every time. The battery back-up system is only meant to be used from short temporary power interruption. For longer durations, the battery backed, it should be removed from the set to prevent leakage. If you do not wish to take advantage of the battery back-up system, your set will work normally without a battery. However, if disconnected from the mains, the clock figures will flash when the mains are re-connected and you must re-set the clock as described in the Electronic Clock Operation paragraph.

 
Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment. Attention should be drawn to the environmental aspects of battery disposal.

Electrical products should not be disposal of with household waste. Please recycle where facilities exist. Check with your Local Authority of retailer for recycling device.

(Batteries pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

SPECIFICATION

Power Source : AC 110-240V ~50/60Hz VDE External adapter Tuner Range : FM 87.5-108.0MHz Power Consumption : 5W





Product information is subject to change withous prior notice.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio

frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the followingmeasures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.