

KT TECH™

BLUETOOTH SPEAKERPHONEPHONEPHONE



USER MANUAL

KT-9088

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT
AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

PRODUCT FEATURES

- The KT-9088 is a Bluetooth portable speakerphone with the following features:
- Wireless playback of music from your Bluetooth enabled mobile phone via the Bluetooth connection
 - Up to 33 feet (10 meters) line-of-sight operating distance


GETTING STARTED

ACCESSORIES INCLUDED

Carefully remove the unit and all the accessories from the display carton. Please verify that you have all the following accessories before recycling the gift box.

- User manual
- MICRO USB cable
- AUX-in cable

LOCATION OF CONTROLS

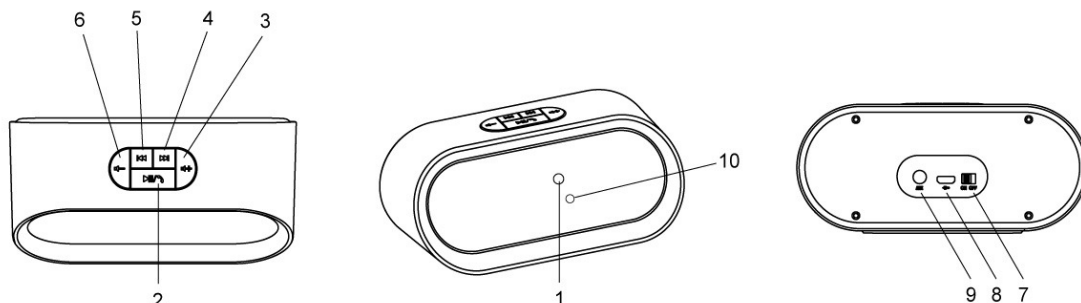

1. POWER/CHARGING/ BLUETOOTH STATUS INDICATOR (RED / BLUE)
2. ANSWER/ PLAY/STOP/PICK UP/HANG BUTTON
3. VOL+/- BUTTONS
4. NEXT/PREV BUTTONS
5. ON/OFF BUTTON
6. CHARGING JACK(MICRO USB)
7. AUX IN JACK

CHARGING INSTRUCTIONS

This unit operates on a built-in Li-ion battery that can be recharged either using the USB port on your computer or from a USB power adaptor (not included) with a rated output of DC 5V, **500mA and up**.

Note: The Micro USB CHARGING JACK located on this unit is only designed for charging the built-in Li-ion battery.

CHARGING THE BATTERY FOR FIRST TIME

- 1.) Charge the built-in Li-ion battery a minimum of 2.5 hours prior to first use. Plug the unit into the USB port on your computer or into a USB power adaptor (not included) using the included USB cable.
- 2.) The LED indicator will turn red while charging and turn-off automatically when the unit is fully charged. Unplug the USB cable from the power source once the battery is fully charged.

RECHARGING THE INTERNAL BATTERY

After prolonged use, the internal battery will become weak and the operation may become intermittent. When the internal battery charge is very low, the Indicator LED will flash red and a melody will play alerting you to recharge the internal battery as soon as possible.

Plug the speakerphone into a USB port on your computer or into a DC 5V, **500mA and up** USB power adaptor (not included) using the included USB cable. Disconnect the USB cable from the speakerphone as soon as it is fully charged.

Charging in Power ON mode

- The Indicator LED is RED while charging.
- The Indicator LED will turn-off automatically when the battery is fully charged.

Note: 1. Charging time will vary if you are listening to music while charging the

- internal battery. We recommend you switch off the speakerphone power during the charging process.
2. To prolong the life of a rechargeable battery, it is recommended to completely discharge it before fully charging it again.
 3. Rechargeable batteries need to be cycled for maximum performance and longer battery life. If you don't use the player that often, be sure to recharge the battery at least once a month in order to keep the internal battery working properly.

Charging in Unit Power OFF mode

- The Indicator LED is RED while charging.
- The Indicator LED will turn-off automatically when the battery is fully charged.



Battery Note and Care

Do not burn or bury batteries.

- Do not puncture or crush.
- Do not disassemble.
- Li-ion batteries must be recycled. Do not dispose of in the trash.
- Use only chargers rated for Li-ion cells. Be sure the charger's voltage and current settings are correct for the battery pack being charged.
- Charge batteries on a fireproof surface and away from flammable items or liquids.
- Batteries should NEVER be left unattended while charging. Only adults should charge the batteries.
- Follow the manufacturer's instructions for charging the product and do not charge longer than recommended. Unplug the charger when the battery is charged or not in use.

NOTE: The speakerphone is not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the unit further away from the TV or monitor if an unnatural color shifts or image distortion occurs.

TURNING THE KT-9088 POWER ON/OFF

1. In standby mode, push the **ON/OFF** button to the left side until a beep sound is heard to turn the unit ON, the Indicator LED will flash blue 3 times.
2. To turn the unit OFF, just push the **ON/OFF** button to the right side. Don't forget to turn off the Bluetooth feature on your cell phone.

SPEAKERPHONEPHONE OPERATIONS

PAIRING (LINKING) A BLUETOOTH ENABLED MOBILE PHONE OR OTHER BLUETOOTH ENABLED DEVICE TO THE KT-9088

1. If the KT-9088 has never been paired with a Bluetooth device before. You need to follow the pairing instructions below to link the KT-9088 with your Bluetooth device.
 - In standby mode, push the **ON/OFF** button to the right side until a beep sound is heard, the Indicator LED will alternately flash blue and red. The speakerphone is ready to pair (link) with your Bluetooth device.
 - Turn on the Bluetooth function of your cell phone and enable the search or scan function to find the KT-9088.
 - Select "KT-9088" from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) the KT-9088 with your mobile phone or Bluetooth device.
2. After turning on the KT-9088, the unit will search for the last paired device. The **POWER/CHARGING/BLUETOOTH STATUS INDICATOR** will flash rapidly in blue.

If the unit finds the paired Bluetooth device, a beep is heard and the **POWER/CHARGING/ BLUETOOTH STATUS INDICATOR** will begin flashing at a slower rate.

Remarks:

- Fast flashing is when the LED lights up 3 times every second.
 - Slow flashing is when the LED lights up 1 time every 8 seconds.
3. After successfully pairing (linking), you can begin playing music from your Bluetooth device wirelessly to the speakerphone.
 4. Press the Volume Up(+) / Down(-) button on your Bluetooth device to adjust to the desired volume level. Or press the button “+” to increase the volume, a beep alert sounds when volume reach maximum level ; Press the button “-” to decrease the volume.

Notes:

1. Refer to manual of your mobile phones, tablet, PC, computer or other Bluetooth enabled device for Bluetooth operation, since it may vary from model to model.
2. Your Bluetooth enabled device will not play the music through the speakerphone, even if connected (linked), if the device does not support A2DP or AVRCP profile.
3. If you are pairing (linking) your computer to the KT-9088 using Bluetooth, you may need to set the speakerphone as your computer’s default sound device.
4. If the KT-9088 is left idle for about 5 minutes without linking to any Bluetooth enabled device, it will automatically turn off to save battery power.

Using the KT-9088 as a Handsfree Bluetooth Speakerphone.

1. Link your cell phone to the KT-9088 via Bluetooth as described above.
2. When receiving an incoming call on your cell phone, tap the ANSWER/ PLAY/STOP/PICK UP/HANG button on the speakerphone to switch the incoming call from cell phone to the KT-9088 speakerphone. A short beep sound will be heard confirming the call was answered. Complete your call using the built-in microphone and speakerphone on the KT-9088.
3. Adjust the volume control of unit to obtain the desired sound level.
4. To end the call, just tap the ANSWER/ PLAY/STOP/PICK UP/HANG button again on the KT-9088. A short beep sound will be heard and the call will end. If you were playing music from your cell phone to the KT-9088 speakerphone before answering the call, the music will automatically resume playing when you hang up.
5. To ignore an incoming call, simply tap the ANSWER/ PLAY/STOP/PICK UP/HANG button on the speakerphone for about 2-3 seconds, a beep sound will be heard and the call will be ignored.

Hang up with the KT-9088

A quick press on the ANSWER/ PLAY/STOP/PICK UP/HANG button will end the call in progress. A short beep tone will be heard from the speakerphone confirming the call has ended.

Re-linking to the mobile phone

- If your mobile phone is already paired (linked) with the speakerphone, but became unlinked even with both Bluetooth devices turned on. You can re-link them by:
1. Turning off the speakerphone and then turning it on again to re-link your cell phone. The **POWER/CHARGING/ BLUETOOTH STATUS INDICATOR** will flash three times with two short beeps and then flash rapidly around 2 seconds if the speakerphone and your cell phone have been re-linked successfully.
 2. You can also re-link the speakerphone by using Bluetooth operation of your cell phone. Please refer to operation manual of your cell phone for more information.

VOLUME CONTROL

Press the button “+” to increase the volume, a bee alert sounds when volume reach maximum level ; Press the button “-” to decrease the volume.

PLAYING CONTROL

Press the button “Next” to play the next song; Press the button “Prev” to play the previous song.

AUX in JACK

Connect any MP3 player by using 3.5 mm cable .(included)

TAP TO LINK WITH NFC

Instal the Android Apps provided to the NFC-equipped smartphone. Simply align the NFC LOGO and tap for 1-2 seconds activate Bluetooth, pair the two devices and stream your music.”Connect” in shown on the phone screen. Tap to disconnect the two devices and the phone will show “Disconnect” in the screen.

CARE AND MAINTENANCE

1. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
2. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the USB port of power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture, Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESHOOTING GUIDE

Symptom	Possible Problem	Solution
No Charging	The USB power adaptor (not included) is not plugged into a wall outlet or the USB cable (included) is not plugged into the Micro USB jack on the bottom of the KT-9088.	Plug the USB power adaptor (not included) into a wall outlet and plug the USB cable (included) into the Micro USB jack on the the KT-9088.
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.

	Computer USB port is not functioning.	Make sure your computer power is turned on and try another USB port.
No Sound	The KT-9088 battery is dead.	Recharge the KT-9088 battery.
	The KT-9088 is not linked with the mobile phone.	Go through "Speakerphone Operations" process to link the speakerphone
	The KT-9088 placement is out of range.	Relocate the KT-9088 within Bluetooth operating range (30 feet).
	Volume set too low.	Increase the volume of your device.
Sound is distorted.	Volume level is set too high.	Decrease the volume of your device.
	Sound source is distorted.	If the source sound file is of poor quality, distortion and noise are easily noticed with high-power speakerphone. Try a different audio source such as a music CD.
Unit gets warm after extended play at high volume.	This is normal.	Turn the unit off for a period of time or lower the volume.

SPECIFICATIONS

Power Requirement

Main unit

Built-in DC 3.7V 1100mAh rechargeable Li-ion Battery

At KT Tech, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Printed in China