



MODEL: 55002USAX18 + 50075

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. In the event of technical problems or other queries, please contact our Customer Services.

 
Safety

- This product is suitable for switching products such as lights on and off.
- Make sure that the light is turned off before connecting it to the product.
- Never connect a light with a higher power rating than 1800 W.
- This product is intended for indoor use, do not expose it to rain or moisture.


Operating instructions

Installation


In order to use the remote switches, the receivers and the remote control must first be wirelessly connected (paired). This is where you get to decide which receiver is to be controlled by which button on the remote control.

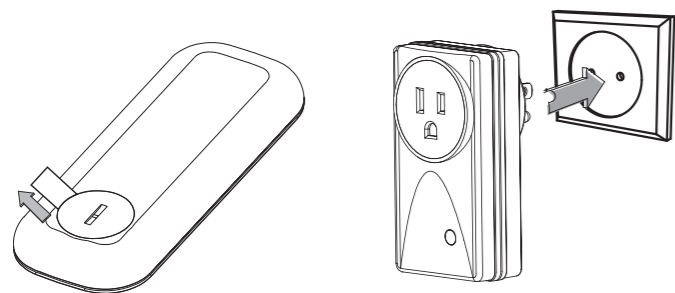

 1. Remove the plastic tab from the back of the remote control to activate the battery.
2. Plug the receiver into a wall socket.

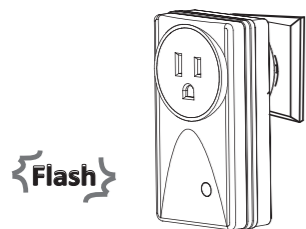

 3. The LED button will start flashing slowly for 10 seconds. The receiver is now in learning mode and ready to be paired with the remote control.

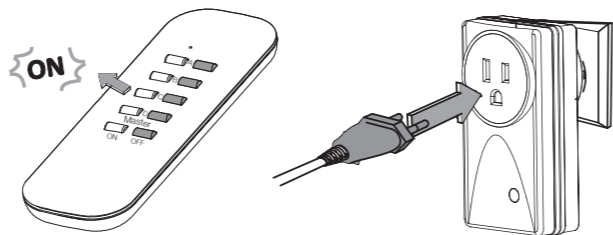

4. Single-press one of the on-buttons on the remote control (A, B, C D or Master). The LED on the receiver will shine steadily once the remote control has been paired.
5. Connect a light to the receiver and check that the light is switched on.

6. Repeat steps 2 to 5 for the other receivers.

 
Tip:

- You can connect more than one receiver to the same button, e.g. [A], on the remote control. This could be useful if you like switching several lights on at the same time.
- You can connect multiple remote controls to the receivers. Each receiver has a memory for up to 6 different remote

controls or transmitters.

Switching on/off

Use the buttons in the left-hand "ON" row to switch the paired light on and the buttons in the right-hand "OFF" row to switch the light off. Push Master button to turn linked receivers all "ON" "OFF".

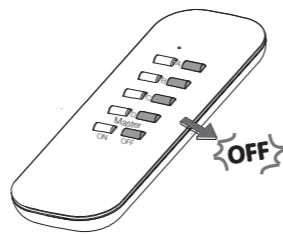


Deleting a paired remote control

You might need to delete a remote control from the memory of the receiver in case you want to:

- control the receiver using another button on the remote control.
- pair an additional remote control, but all 6 memory slots are occupied.

 1. Plug the receiver into a wall socket.

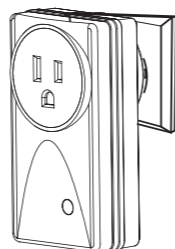


2. The LED in the button will start flashing slowly. The receiver is now ready to delete the remote control.
3. Press in the off-button on the remote control (make sure to choose the correct off-button). Keep on press the OFF button until the LED on the switch flash faster. The remote control will now be deleted from the receiver.

Note: The light can still be switched on/off manually by pressing the button on the receiver. Pressing the "master OFF" button according to step 3, all paired remote controls will be deleted.

Changing the batteries

 1. Pry off the battery cover using a coin or screwdriver.
2. Remove the battery and replace it with a new CR2032 battery. The positive terminal (+) of the battery should face upwards as shown in the picture.

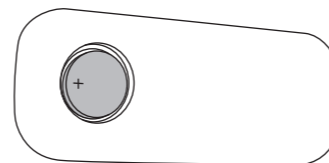

Caution:

This device complies with Part 15 of the FCC. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Care and maintenance

- Unplug the receiver from the wall socket and remove the battery from the remote control if they are not to be used for an extended period.
- Clean the units by wiping them with a dry cloth.

Troubleshooting guide

The remote switch set is not working.	<ul style="list-style-type: none"> • Has the receiver been paired with a remote control as described above? Try pairing them again. • Check the battery of the remote control. • Is the remote control too far away from the receiver (25 m)? • Check that the light is properly connected to the receiver and that it is switched on and not faulty. • Try plugging the light into another electrical outlet to make sure that it works. • Is there electricity in the outlet the receiver is plugged into?
---------------------------------------	--

Responsible disposal

This symbol indicates that this product should not be disposed of with general household waste. This applies throughout the entire EU. In order to prevent any harm to the environment or health hazards caused by incorrect waste disposal, the product must be handed in for recycling so that the material can be disposed of in a responsible manner. When recycling your product, take it to your local collection facility or contact the place of purchase. They will ensure that the product is disposed of in an environmentally sound manner.



Specifications

Frequency	433.92 MHz
Receiver	
Power supply	120 V AC, 60 Hz
Max range	25 m
Max load	1800 W (resistive load)
Memory slots	6
Remote control	
Battery	1 x CR2032, 3 V DC (included)
Number of channels	5